


## Upgrade Instructions


### Upgrade from a U-disk (USB Memory device)

**WARNING: DO NOT shut off the instrument until the update is completed.**


1. Copy the update file (\*.ads) to a FLASH type U-disk, and then insert the U-disk into one of the USB host ports of the instrument.
2. Press the **Utility** button-> Next page to Page 3/4-> Update-> Firmware. The following menu should pop up and allow you to select the upgrade file. After select the correct update file (\*.ads), please 'press to Update' start to upgrade.

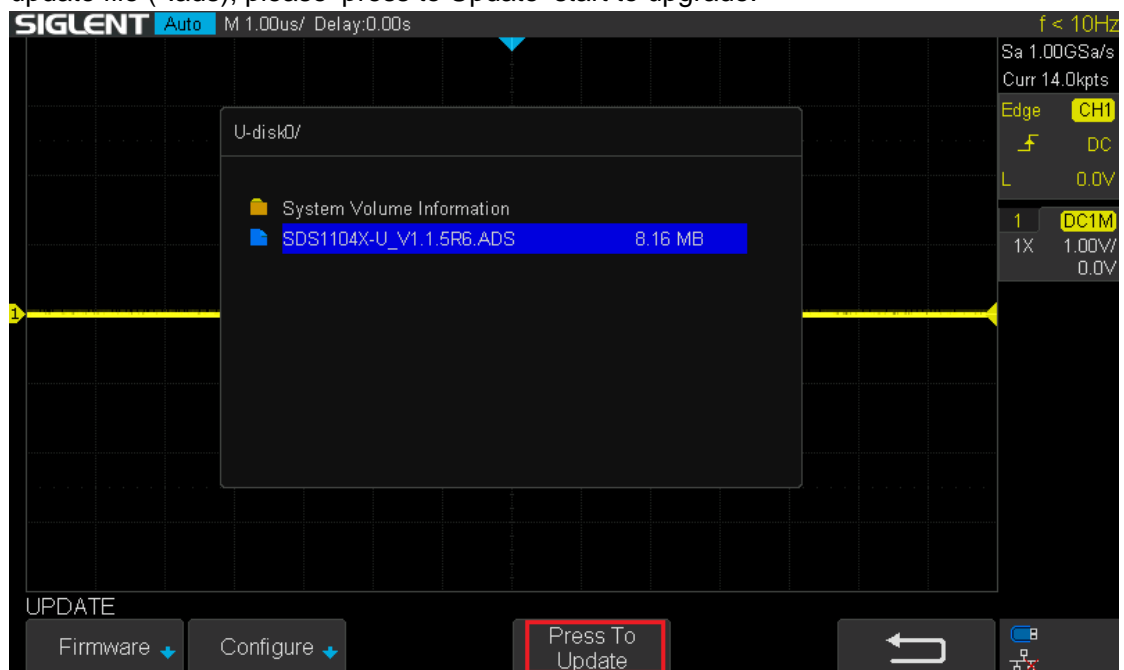

3. When the progress bar is finish, it will display 'Firmware decompressed. Please restart and wait'. Please restart oscilloscope.

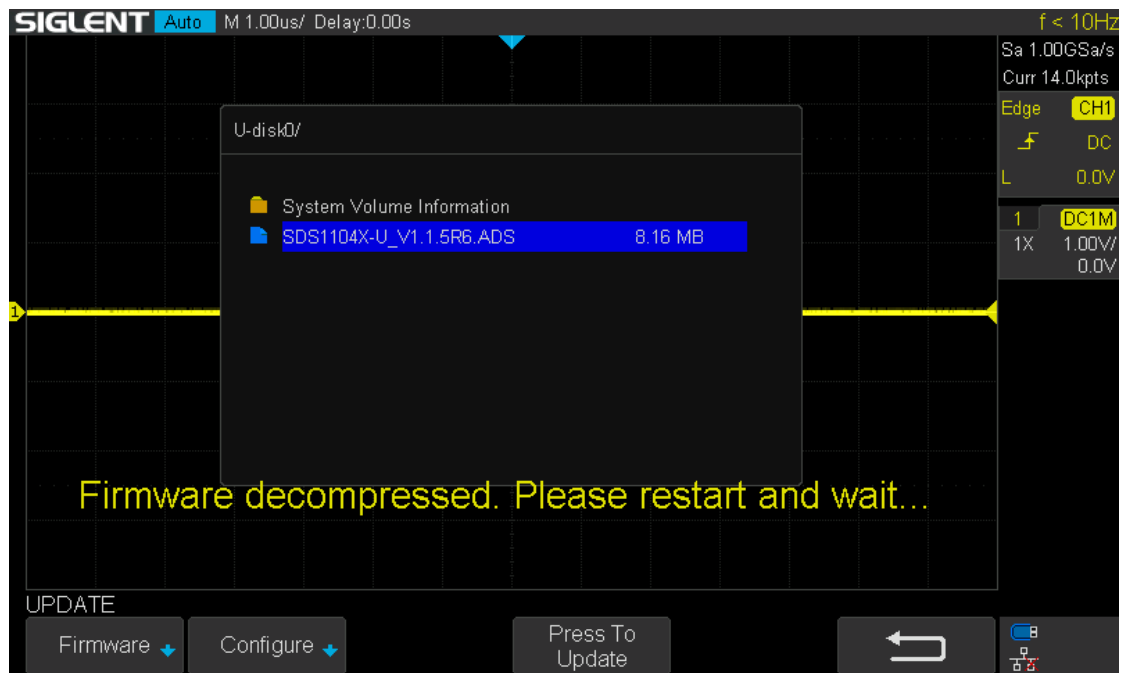

4. After the oscilloscope reboots, check the version number through the **Utility**->**Page 1/4**-> **System Status** to confirm if the upgrade is successful.

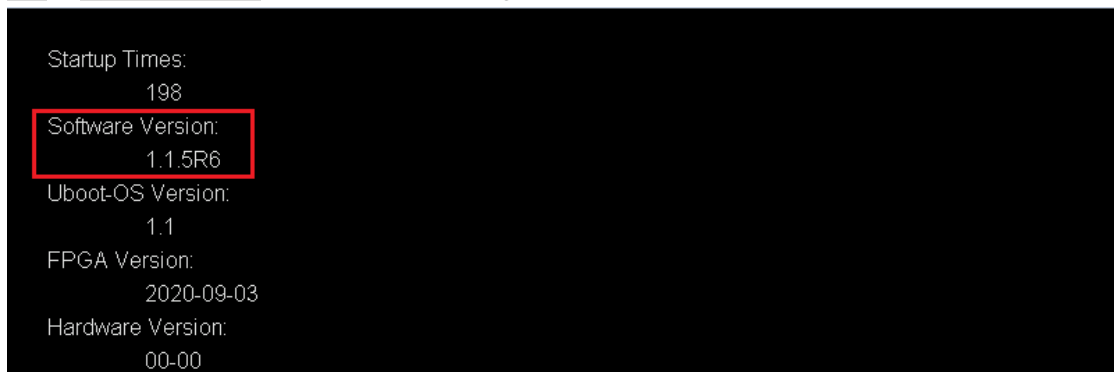

**WARNING: DO NOT shut off the instrument until the update is completed.**