# SigIQPro

## User Manual

EN01D

SIGLENT TECHNOLOGIES CO., LTD.

# Guaranty and Declaration


### Copyright

**SIGLENT TECHNOLOGIES CO., LTD** All Rights Reserved.


### Trademark Information

**SIGLENT** is the registered trademark of **SIGLENT TECHNOLOGIES CO., LTD**

### Declaration

- **SIGLENT** products are protected by patent law worldwide
- **SIGLENT** reserves the right to modify or change parts of or all the specifications or pricing policies at company's sole decision.
- Information in this publication replaces all previously corresponding material.
- Any way of copying, extracting or translating the contents of this manual is not allowed without the permission of **SIGLENT**.
- **SIGLENT** will not be responsible for losses caused by either incidental or consequential in connection with the furnishing, use or performance of this manual as well as any information contained.

### Product Certification

**SIGLENT** guarantees this product conforms to the national and industrial standards in China as well as the ISO9001: 2008 standard and the ISO14001: 2004 standard. Other international standard conformance certification is in progress.

# SigIQPro Overview

The SigIQPro is a PC software for IQ waveform generation produced by SIGLENT, which can create rich IQ protocol signals with optimized performance. It supports Bluetooth, IOT, Custom OFDM, Custom IQ, 5G NR, LTE, WLAN and DFS Radar, meeting the requirements of the Internet of Things, short-range communications, wireless cellular communications, satellite communications and radar.

Supported protocols:

- Bluetooth BR/EDR (version: 5.0);
- Bluetooth Low Energy (version: 5.2);
- IEEE 802.15.4 O-QPSK BPSK(ZigBee) (version: IEEE Std 802.15.4 -2020);
- IEEE 802.15.4 SUN FSK (version: IEEE Std 802.15.4 -2020);
- IEEE 802.15.4 SUN OFDM (version: IEEE Std 802.15.4 -2020);
- ITU-T G.9959 (Z-WAVE) (version: IEEE Std 802.15.4 -2020);
- IEEE 802.15.4 HRP UWB (version: IEEE Std 802.15.4 -2024);
- Custom OFDM;
- Custom IQ;
- 5G NR (version: 3GPP TS38 V17.3.0);
- LTE TDD/FDD (version: 3GPP TS36 V17.3.0);
- WLAN_802_11a/b/g/n/ac (version: IEEE Std 802.11-2020);
- WLAN_802_11ax (version: IEEE Std 802.11ax-2021);
- WLAN_802_11be (version: IEEE P802.11be/D7.0-2024);
- GSM/EDGE (version: Release 7);
- WCDMA (version: 3GPP TS25 V11.5.0);
- DAB/T-DMB (version: ETSI EN 300 401 V1.4.1).

# Contents

Guaranty and Declaration ..... 1
SigIQPro Overview ..... 2
Contents ..... 3
1 Installation ..... 10
1.1 System Requirements ..... 10
1.1.1 PC Requirements ..... 10
1.1.2 Hardware Requirements ..... 10
1.2 Download and Install SigIQPro Software ..... 12
1.3 Equipment Setup and Connection ..... 12
1.4 Install Options ..... 12
1.5 Testing Connections ..... 14
2 Application Examples ..... 16
2.1 Use Toolkit to Convert the File Format to ARB ..... 16
2.1.1 Convert MAT Files ..... 16
2.1.2 Convert ASCII Files ..... 17
2.2 Creating and Playing IEEE 802.15.4 O-QPSK BPSK Waveform Files ..... 18
2.2.1 Configure waveform parameters ..... 18
2.2.2 Download the Waveform to Signal Source ..... 19
2.2.3 Play the Waveform in Signal Source ..... 20
2.2.4 Demodulation Result ..... 20
2.3 Creating and Playing IEEE 802.15.4 SUN FSK Waveform Files ..... 22
2.3.1 Configuring Waveform Parameters ..... 22
2.3.2 Download the Waveform to Signal Source ..... 23
2.3.3 Play the Waveform in Signal Source ..... 23
2.3.4 Demodulation Result ..... 24
2.4 Creating and Playing IEEE 802.15.4 SUN OFDM Waveform Files ..... 25
2.4.1 Configuring Waveform Parameters ..... 25
2.4.2 Download the Waveform to Signal Source ..... 26
2.4.3 Play the Waveform in Signal Source ..... 26
2.4.4 Demodulation Result ..... 27
2.5 Create and Play ITU-T G.9959 Waveforms ..... 28

2.5.1 Configure waveform parameters ..... 28
2.5.2 Download the Waveform to Signal Source ..... 29
2.5.3 Play the Waveform in Signal Source ..... 30
2.5.4 Demodulation Result ..... 30
2.6 Creating and Playing IEEE 802.15.4 HRP UWB Waveform Files ..... 31
2.6.1 Configuring Waveform Parameters ..... 31
2.6.2 Download the Waveform to Signal Source ..... 32
2.6.3 Play the Waveform in Signal Source ..... 32
2.6.4 Demodulation Result ..... 33
2.7 Create and Play WLAN Custom OFDM Waveforms ..... 34
2.7.1 Configure waveform parameters ..... 34
2.7.2 Download the Waveform to Signal Source ..... 34
2.7.3 Play the Waveform in Signal Source ..... 35
2.7.4 Demodulation Result ..... 35
2.8 Create and Play Custom IQ Waveforms ..... 37
2.8.1 Configure waveform parameters ..... 37
2.8.2 Download the Waveform to Signal Source ..... 37
2.8.3 Play the Waveform in Signal Source ..... 38
2.8.4 Demodulation Result ..... 38
2.9 Create and Play Bluetooth EDR Waveforms ..... 40
2.9.1 Configure waveform parameters ..... 40
2.9.2 Download the Waveform to Signal Source ..... 41
2.9.3 Play the Waveform in Signal Source ..... 42
2.9.4 Demodulation Result ..... 43
2.10 Create and Play Bluetooth LE Waveforms ..... 44
2.10.1 Configure waveform parameters ..... 44
2.10.2 Download the Waveform to Signal Source ..... 45
2.10.3 Play the Waveform in Signal Source ..... 46
2.10.4 Demodulation Result ..... 46
2.11 Creating and Playing NR Waveform Files ..... 47
2.11.1 Configuring Waveform Parameters ..... 47
2.11.2 Download the Waveform to Signal Source ..... 48
2.11.3 Play the Waveform in Signal Source ..... 48

2.11.4 Demodulation Result....49
2.12 Creating and Playing LTE Waveform Files....50
2.12.1 Configuring Waveform Parameters....50
2.12.2 Download the Waveform to Signal Source....51
2.12.3 Play the Waveform in Signal Source....51
2.12.4 Demodulation Result....51
2.13 Creating and Playing WLAN_802_11b/g Waveform Files....53
2.13.1 Configuring Waveform Parameters....53
2.13.2 Download the Waveform to Signal Source....54
2.13.3 Play the Waveform in Signal Source....54
2.13.4 Demodulation Result....55
2.14 Creating and Playing WLAN_802_11a/g Waveform Files....56
2.14.1 Configuring Waveform Parameters....56
2.14.2 Download the Waveform to Signal Source....56
2.14.3 Play the Waveform in Signal Source....57
2.14.4 Demodulation Result....57
2.15 Creating and Playing WLAN_802_11n Waveform Files....59
2.15.1 Configuring Waveform Parameters....59
2.15.2 Download the Waveform to Signal Source....60
2.15.3 Play the Waveform in Signal Source....60
2.15.4 Demodulation Result....61
2.16 Creating and Playing WLAN_802_11ac Waveform Files....62
2.16.1 Configuring Waveform Parameters....62
2.16.2 Download the Waveform to Signal Source....63
2.16.3 Play the Waveform in Signal Source....63
2.16.4 Demodulation Result....64
2.17 Creating and Playing WLAN_802_11ax Waveform Files....65
2.17.1 Configuring Waveform Parameters....65
2.17.2 Download the Waveform to Signal Source....66
2.17.3 Play the Waveform in Signal Source....66
2.17.4 Demodulation Result....67
2.18 Creating and Playing WLAN_802_11be Waveform Files....68
2.18.1 Configuring Waveform Parameters....68

2.19 Creating and Playing GSM Waveform Files ..... 71
**2.19.1 Download the Waveform to Signal Source** ..... 72
2.19.2 Play the Waveform in Signal Source ..... 72
**2.19.3 Demodulation Result** ..... 73
2.20 Creating and Playing WCDMA Waveform Files ..... 74
2.20.1 Configuring Waveform Parameters ..... 74
2.20.2 Download the Waveform to Signal Source ..... 75
2.20.3 Play the Waveform in Signal Source ..... 75
2.20.4 Demodulation Result ..... 76
2.21 Creating and Playing DAB/T-DMB Waveform Files ..... 77
2.21.1 Configuring Waveform Parameters ..... 77
2.21.2 Download the Waveform to Signal Source ..... 78
2.21.3 Play the Waveform in Signal Source ..... 78
2.21.4 Demodulation Result ..... 78
**3 User Interface Overview ..... 79**
3.1 Home Page ..... 79
3.1.1 Menu Bar ..... 79
3.1.2 Tab Bar ..... 80
3.1.3 Protocol Menu ..... 80
3.2 Parameters Setting Page ..... 81
3.2.1 Toolbar ..... 81
3.2.2 Tree View ..... 81
3.2.3 Parameter View ..... 82
3.2.4 Graph View ..... 82
3.3 Export or Import Files ..... 82
3.3.1 Project File (*.project) ..... 82
3.3.2 State File (*.state) ..... 82
3.3.3 Waveform File (*.ARB) ..... 83
**4 Waveform Setup ..... 84**
4.1 Toolkit ..... 84
4.1.1 Waveform Import ..... 84
4.1.2 Waveform Download ..... 88
4.2 IEEE 802.15.4 O-QPSK BPSK ..... 89

4.2.1 Waveform Setup ..... 90
4.2.2 Packet ..... 91
4.3 IEEE 802.15.4 SUN FSK ..... 95
4.3.1 Waveform Setup ..... 96
4.3.2 Packet ..... 97
4.4 IEEE 802.15.4 SUN OFDM ..... 106
4.4.1 Waveform Setup ..... 107
4.4.2 Packet ..... 109
4.5 ITU-T G.9959 ..... 115
4.5.1 Waveform Setup ..... 116
4.5.2 Packet ..... 118
4.6 IEEE 802.15.4 HRP UWB ..... 122
4.6.1 Waveform Setup ..... 123
4.6.2 Packet ..... 124
4.7 Custom OFDM ..... 131
4.7.1 Term Definition ..... 131
4.7.2 Techniques Explanation ..... 133
4.7.3 Waveform Setup ..... 136
4.7.4 Custom OFDM ..... 140
4.7.5 Resource Mapping ..... 145
4.7.6 Appendix ..... 149
4.8 Custom IQ ..... 151
4.8.1 Basic ..... 151
4.8.2 Data Source ..... 152
4.8.3 Modulation ..... 154
4.8.4 Filter ..... 160
4.8.5 Waveform Display ..... 161
4.9 Bluetooth BR+EDR ..... 163
4.9.1 Parameters Setup ..... 164
4.9.2 Packet ..... 170
4.10 Bluetooth Low Energy ..... 178
4.10.1 Parameters Setup ..... 179
4.10.2 Packet ..... 184

4.11 5G NR....219
4.11.1 Waveform Setup....219
4.11.2 Carrier....223
4.12 LTE....278
4.12.1 Waveform Setup....279
4.12.2 Carrier....280
4.12.3 Channel (DL)....286
4.12.4 Channel (UL)....309
4.13 WLAN_802_11b/g....327
4.13.1 Waveform....328
4.13.2 Carrier....329
4.14 WLAN_802_11a/g....332
4.14.1 Waveform....333
4.14.2 Carrier....334
4.15 WLAN_802_11n....339
4.15.1 Waveform....340
4.15.2 Signal Configuration....342
4.16 WLAN_802_11ac....347
4.16.1 Waveform....348
4.16.2 Signal Configuration....350
4.16.3 User....352
4.16.4 MPDU....354
4.17 WLAN_802_11ax....355
4.17.1 Waveform....356
4.17.2 Signal Configuration....358
4.17.3 Band....362
4.17.4 RU....363
4.17.5 User....364
4.17.6 MPDU....365
4.18 WLAN_802_11be....367
4.18.1 Waveform....367
4.18.2 Signal Configuration....370
4.18.3 Band....373

4.18.4 RU....373
4.18.5 User....374
4.18.6 MPDU....375
4.19 GSM....377
4.19.1 Waveform....377
4.19.2 Carrier....379
4.19.3 Timeslot....384
4.20 WCDMA/HSPA+....390
4.20.1 Waveform Setup....390
4.20.2 Carrier....391
4.20.3 Channel Setup....392
4.21 DAB/T-DMB....399
4.21.1 Waveform....400
4.21.2 Carrier....401
4.21.3 Ensemble....403
4.21.4 Services....407
4.21.5 Service Component....410
**5 Troubleshooting....415**
**6 Service and Support....416**
6.1 Service Summary....416
6.2 Contact Us....417

# 1 Installation

To install the SigIQPro software, please do the following:

1. System Requirements;
2. Download and Install SigIQPro Software;
3. Equipment Setup and Connection;
4. Testing Connections.

## 1.1 System Requirements

To generate signals using SigIQPro software, you must have a properly configured PC and a properly configured instrument, as described below.

### 1.1.1 PC Requirements

- 200 GB HDD with 1 GB free disk space at runtime (2 GB or higher recommended)
- 1280 x 768 screen resolution
- Windows 7 or Windows 10
- 1 GHz or faster 64-bit processor
- 2 GB of memory minimum
- This software requires the installation of NI-VISA, which can be downloaded from http://www.ni.com/visa.

### 1.1.2 Hardware Requirements

You can download and play IQ waveforms generated by SigIQPro software through the following SIGLENT instruments.

- SSG5000X-V
- SDG7000A

Proper firmware and options will be required on above instruments.

| Instruments | Requirements | |
|---|---|---|
| SSG5000X-V | Firmware: | Version V2.1.2.4.1 or later |
| | Required options: | SiglQPro -BT (support Bluetooth) |
| | | SiglQPro -IOT(support IOT) |
| | | SiglQPro -OFDM (support Custom OFDM) |
| SSG6082A-V | Firmware: | V1.0.0.7.6 or later |
| | Required options: | SiglQPro -BT (support Bluetooth) |
| | | SiglQPro -IOT(support IOT) |
| | | SiglQPro -OFDM (support Custom OFDM) |
| | | SiglQPro -5G NR |
| | | SiglQPro -LTE FDD |
| | | SiglQPro -LTE TDD |
| | | SiglQPro -IEEE.802.11.ax |
| | | SiglQPro -IEEE.802.11.be |
| | | SiglQPro -IEEE.802.11.a/b/g/n/ac |
| | | SiglQPro-GSM/EDGE |
| | | SiglQPro-DAB/T-DMB |
| | | SiglQPro-WCDMA/HSPA+ |
| SDG7000A | Firmware: | V1.1.1.33R1 or later |
| | Required options: | SiglQPro -BT (support Bluetooth) |
| | | SiglQPro -IOT(support IOT) |
| | | SiglQPro -OFDM (support Custom OFDM) |
| | | SiglQPro -5G NR |
| | | SiglQPro -LTE FDD |
| | | SiglQPro -LTE TDD |
| SDG8000A | Firmware: | V1.1.1.7R9 or later |
| | Required options: | SiglQPro -BT (support Bluetooth) |
| | | SiglQPro -IOT(support IOT) |
| | | SiglQPro -OFDM (support Custom OFDM) |
| | | SiglQPro -5G NR |
| | | SiglQPro -LTE FDD |
| | | SiglQPro -LTE TDD |
| | | SiglQPro -IEEE.802.11.ax |
| | | SiglQPro -IEEE.802.11.be |
| | | SiglQPro -IEEE.802.11.a/b/g/n/ac |

## 1.2 Download and Install SigIQPro Software

Please visit https://www.siglent.com/download/software/ to download and install.


## 1.3 Equipment Setup and Connection

To connect to a Signal Generator, you should do the following:


1. Ensure the signal generator is turned on.
2. Connect the signal generator to the computer using one of the following methods for instrument control:
   - LAN Network -- connect both the signal generator and the computer to an external LAN network using standard LAN cables.
   - Crossover LAN -- connect the signal generator directly to the computer using a crossover LAN cable (You will need to configure your PC).
   - GPIB -- connect the signal generator directly to the computer using a GPIB cable.
   - USB -- connect the signal generator directly to the computer using a USB cable.

## 1.4 Install Options


1. Click "Help" in the top menu bar, select "Licence", and the Licence status window will pop up.

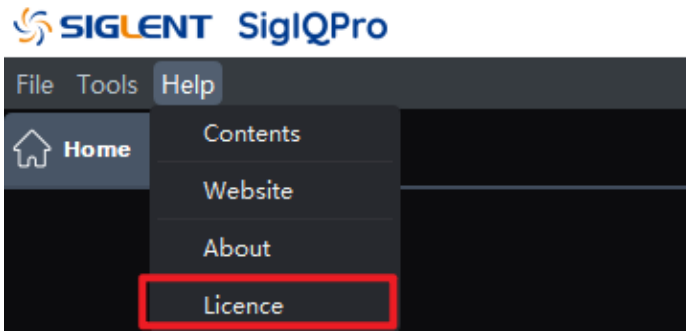


2. Click the "Create Info" button in the pop-up license window, and select the path to save the file in the pop-up window.

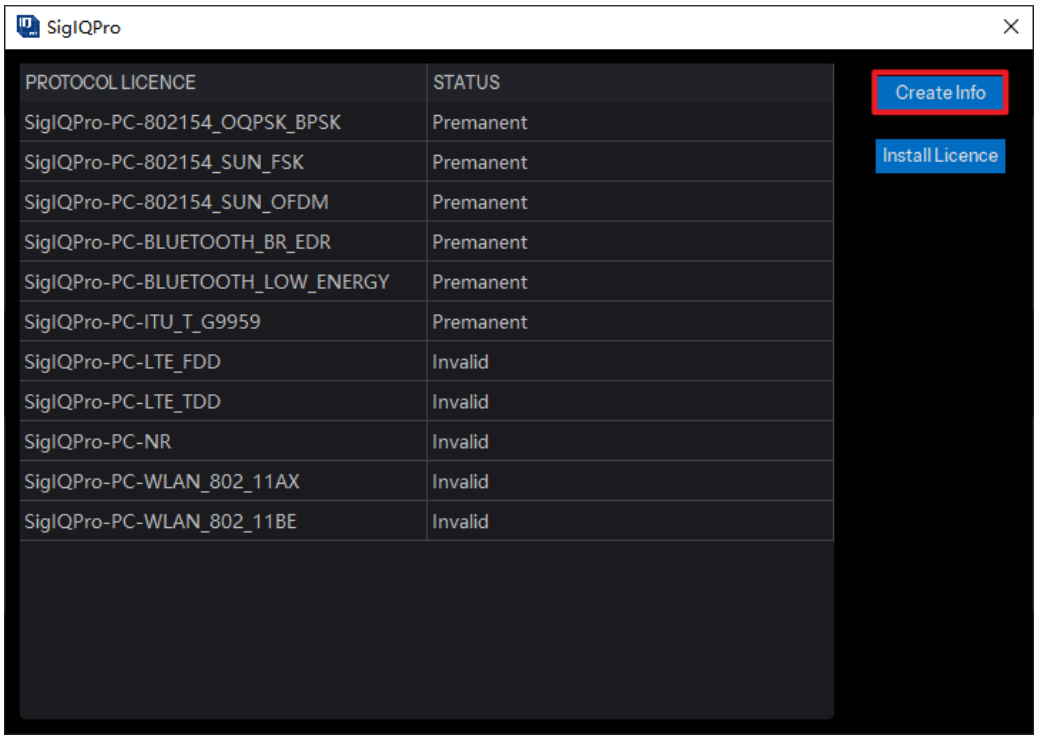


3. Send the saved file (.id) to the salesperson, and they will send you the installation file for the specified installation option.
4. Click the "Install Licence" button and select the option installation file you have received.

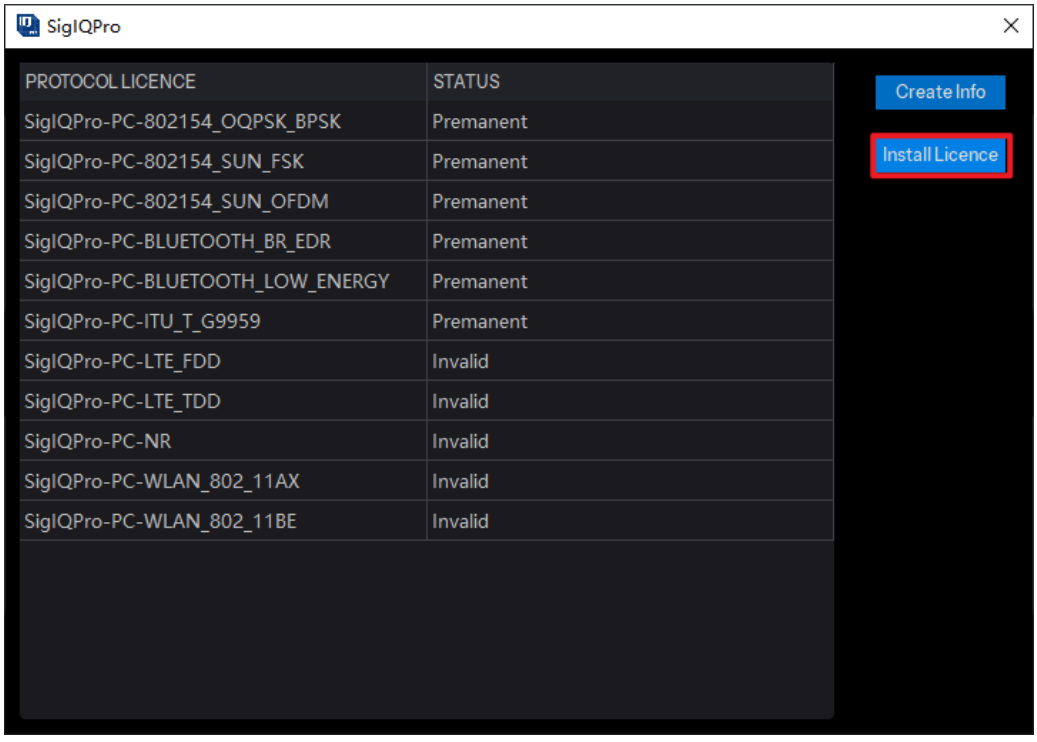



5. Restart SiglQPro.
6. The installed options will display "Permanent" in the STATUS column, while the uninstalled options will display "Invalid".


## 1.5 Testing Connections

Please follow below steps to test connections between the signal generator and the SigIQPro software.


1. Turn on the signal generator and the computer.
2. Start the SigIQPro software.
3. Establish communications between the software and the instrument.
   1) Firstly, click the download button of the SigIQPro software, and then a download dialog will pop up.

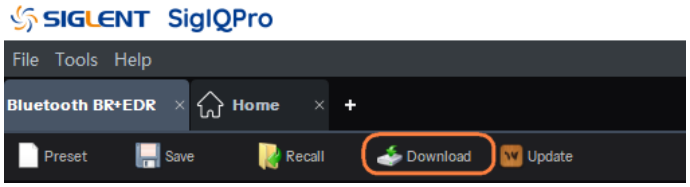



   2) If the signal generator is connected to the PC through LAN, click "Add New…" and enter the IP address of the signal generator to add new resource.

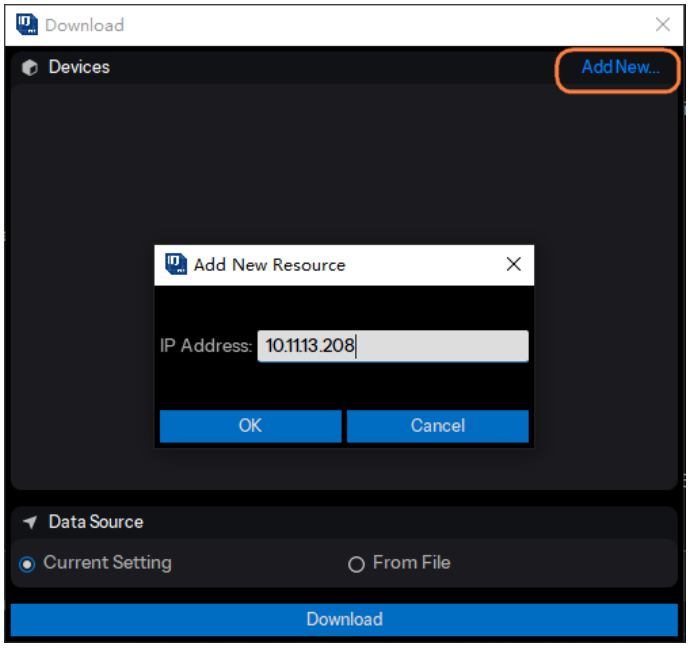


   3) If the signal generator is connected to the PC through USB or GPIB, the resource name will be in the device list when the download dialog is opened. You can double-click the resource name to connect to the device.

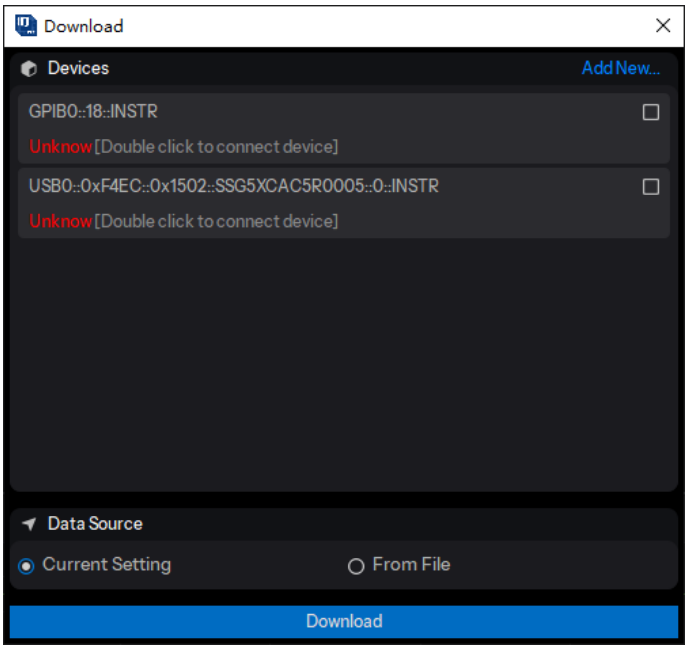


4. Download a waveform to the signal generator. When the download is successful, it will prompt "Download OK".

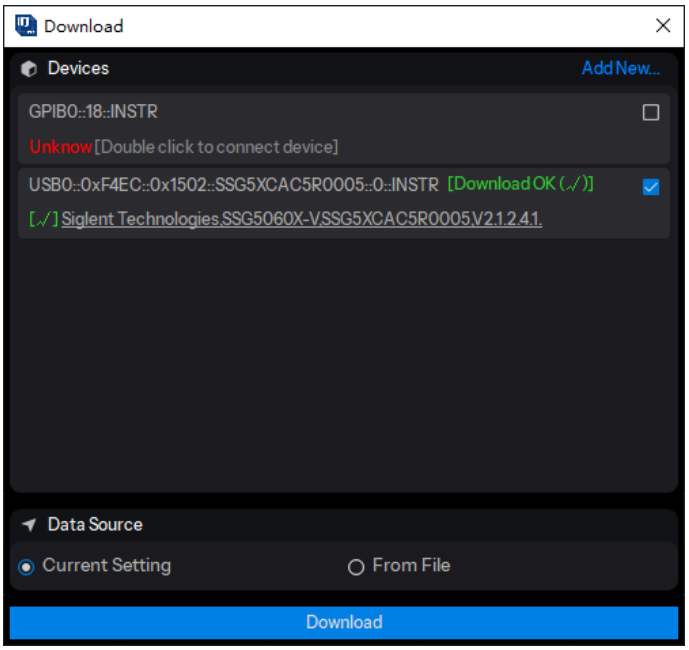


# 2 Application Examples

## 2.1 Use Toolkit to Convert the File Format to ARB

The Toolkit can convert waveform files in specific formats, such as MAT files, TXT files, DAT files and CSV files, into ARB files that can be played by SIGLENT signal generators.

Click **Toolkit** on the homepage, or select **Tools** -> **Toolkit** in the menu bar, to enter the Toolkit setting interface.

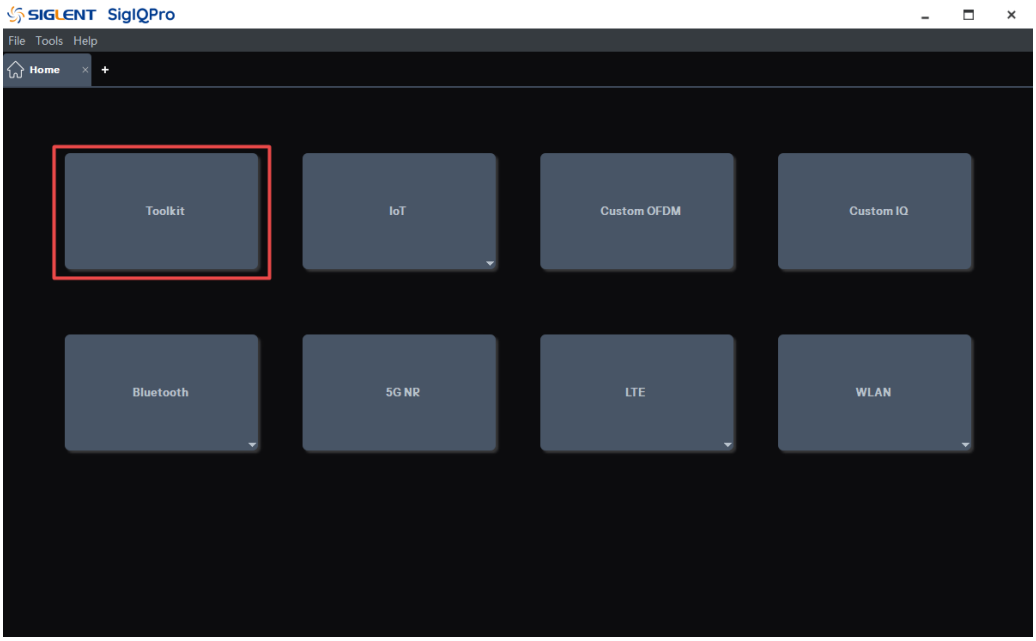


### 2.1.1 Convert MAT Files

Step1. Selecting a waveform

1. In the Waveform Import area, select the file type as Mat-File 5 in the **Source File Type** field.
2. In the **Source File** field, click and select the original MAT file.
3. Select the correct **I Data** and **Q Data**.
4. Check if the number of waveform points is correct in the **Number of Points** field.
5. Set the **Sample Rate** of the waveform.

Step2. Set the parameters of the target file

1. In the Waveform Download area, set the name of the target file in the **Waveform Name** field.
2. Set the **Mirror Spectrum** state.
3. Set the **Oversampling Ratio** .

Step3. Update and download the target file

1. Click **Update** in the toolbar to generate the target file.
2. Click **Download** in the toolbar to download the target file to SIGLENT signal generator.

### 2.1.2 Convert ASCII Files

Step1. Selecting a waveform

1. In the Waveform Import area, select the file type as ASCII/CSV/DAT in the **Source File Type** field.
2. In the **Source File** field, click and select the original file. You can select TXT, CSV or DAT files.
3. If you want to use a separate file for Q data, you should set **Use Separate Q File** as "Yes", and then click and select the Q source file you want to import in the **Q Source File** field.
4. In the **Data Type** field, select the data type of the source file.
5. If the data type of the source file is Hexadecimal, you should select big or little endian for HEX data in the **Big / Little Endian** filed.
6. If the data type of the source file is Hexadecimal, you select signed or unsigned type for HEX data in the **Signed / Unsigned Number** field.
7. Set swap IQ flag in the **Swap IQ** field.
8. Check if the number of waveform points is correct in the **Number of Points** field.
9. Set the **Sample Rate** of the waveform.

Step2. Set the parameters of the target file

1. In the Waveform Download area, set the name of the target file in the **Waveform Name** field.
2. Set the **Mirror Spectrum** state.
3. Set the **Oversampling Ratio**.

Step3. Update and download the target file


1. Click **Update** in the toolbar to generate the target file.
2. Click **Download** in the toolbar to download the target file to SIGLENT signal generator.


## 2.2 Creating and Playing IEEE 802.15.4 O-QPSK BPSK Waveform Files

The following example demonstrates how to create and play IEEE 802.15.4 O-QPSK BPSK band waveforms. First, configure the waveform parameters in SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.2.1 Configure waveform parameters

1. Click **IoT** -> **802.15.4 O-QPSK BPSK** on the homepage to enter the 802.15.4 O-QPSK BPSK setting interface.

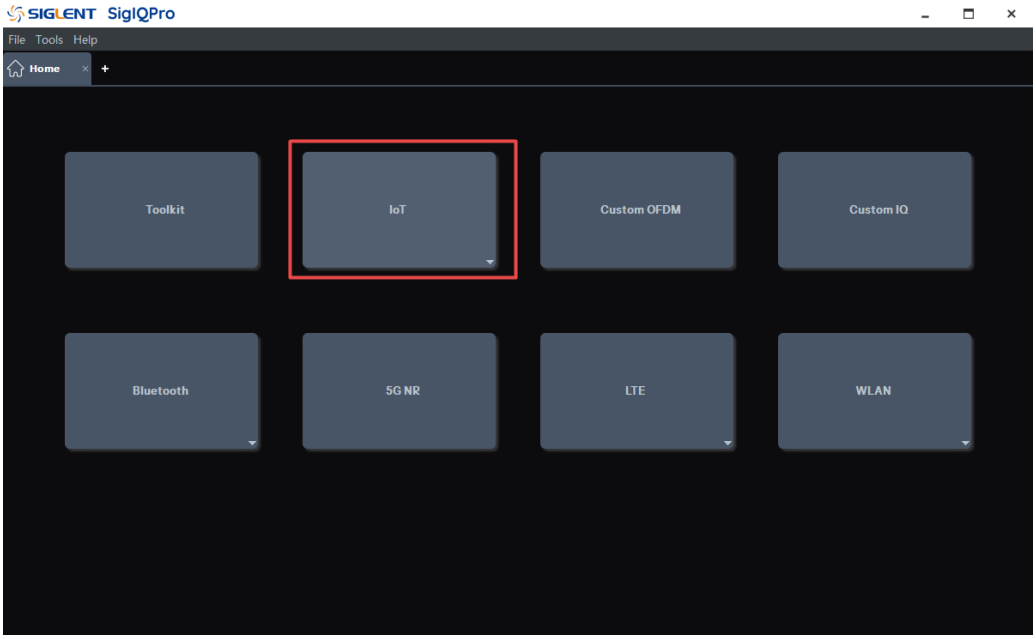


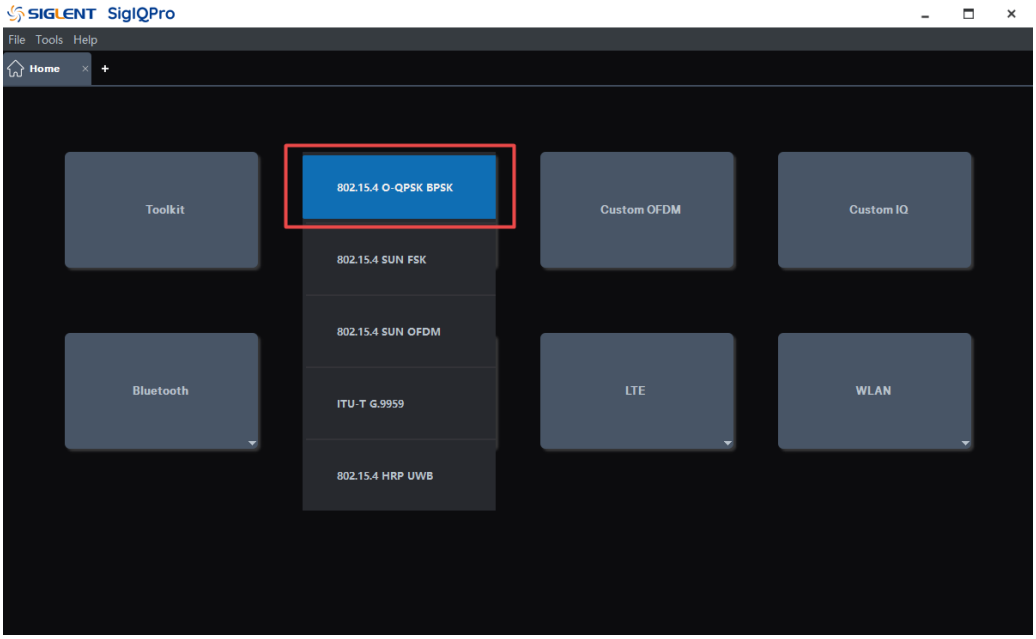2. Click the **Packet** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **PHY Scheme** as “O-QPSK”.
   2) Set **Frequency Band** as “868 MHz”.
   3) Keep other parameters at their default settings.
3. Click the **Parameters Setup** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **Waveform Name** as “zigbee_868”.
   2) Set **OverSampling Ratio** as “8”.
   3) Keep other parameters at their default settings.

### 2.2.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

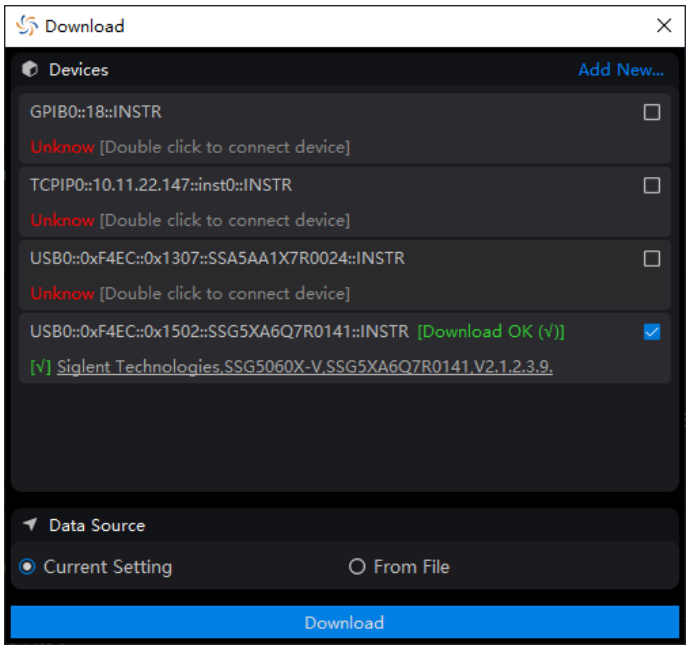



### 2.2.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing zigbee_868.
2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.2.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

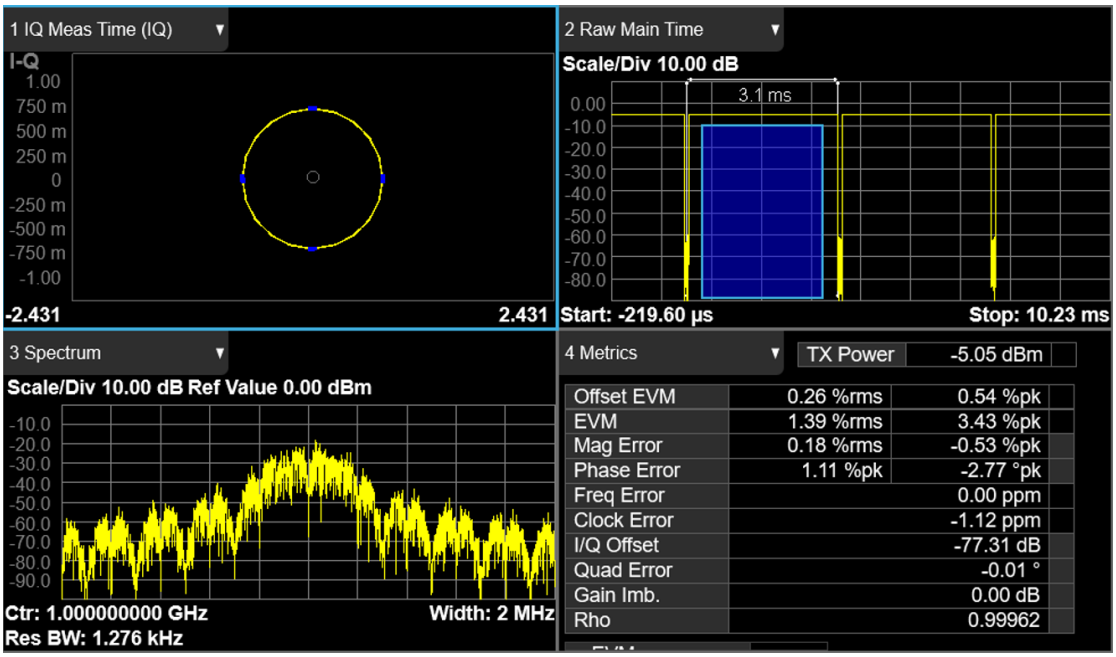

1 IQ Meas Time (IQ)
I-Q
1.00
750 m
500 m
250 m
0
-250 m
-500 m
-750 m
-1.00
-2.431
2.431
2 Raw Main Time
Scale/Div 10.00 dB
3.1 ms
0.00
-10.0
-20.0
-30.0
-40.0
-50.0
-60.0
-70.0
-80.0
Start: -219.60 µs
Stop: 10.23 ms
3 Spectrum
Scale/Div 10.00 dB Ref Value 0.00 dBm
-10.0
-20.0
-30.0
-40.0
-50.0
-60.0
-70.0
-80.0
-90.0
Ctr: 1.000000000 GHz
Width: 2 MHz
Res BW: 1.276 kHz
4 Metrics
TX Power
-5.05 dBm
Offset EVM
0.26 %rms
0.54 %pk
EVM
1.39 %rms
3.43 %pk
Mag Error
0.18 %rms
-0.53 %pk
Phase Error
1.11 %pk
-2.77 °pk
Freq Error
0.00 ppm
Clock Error
-1.12 ppm
I/Q Offset
-77.31 dB
Quad Error
-0.01 °
Gain Imb.
0.00 dB
Rho
0.99962

## 2.3 Creating and Playing IEEE 802.15.4 SUN FSK Waveform Files

The following example demonstrates how to create and play IEEE 802.15.4 SUN FSK waveforms. First, configure the waveform parameters in SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.3.1 Configuring Waveform Parameters


1. On the home page, click **IoT** → **802.15.4 SUN FSK** to enter the IEEE 802.15.4 SUN FSK configuration interface.

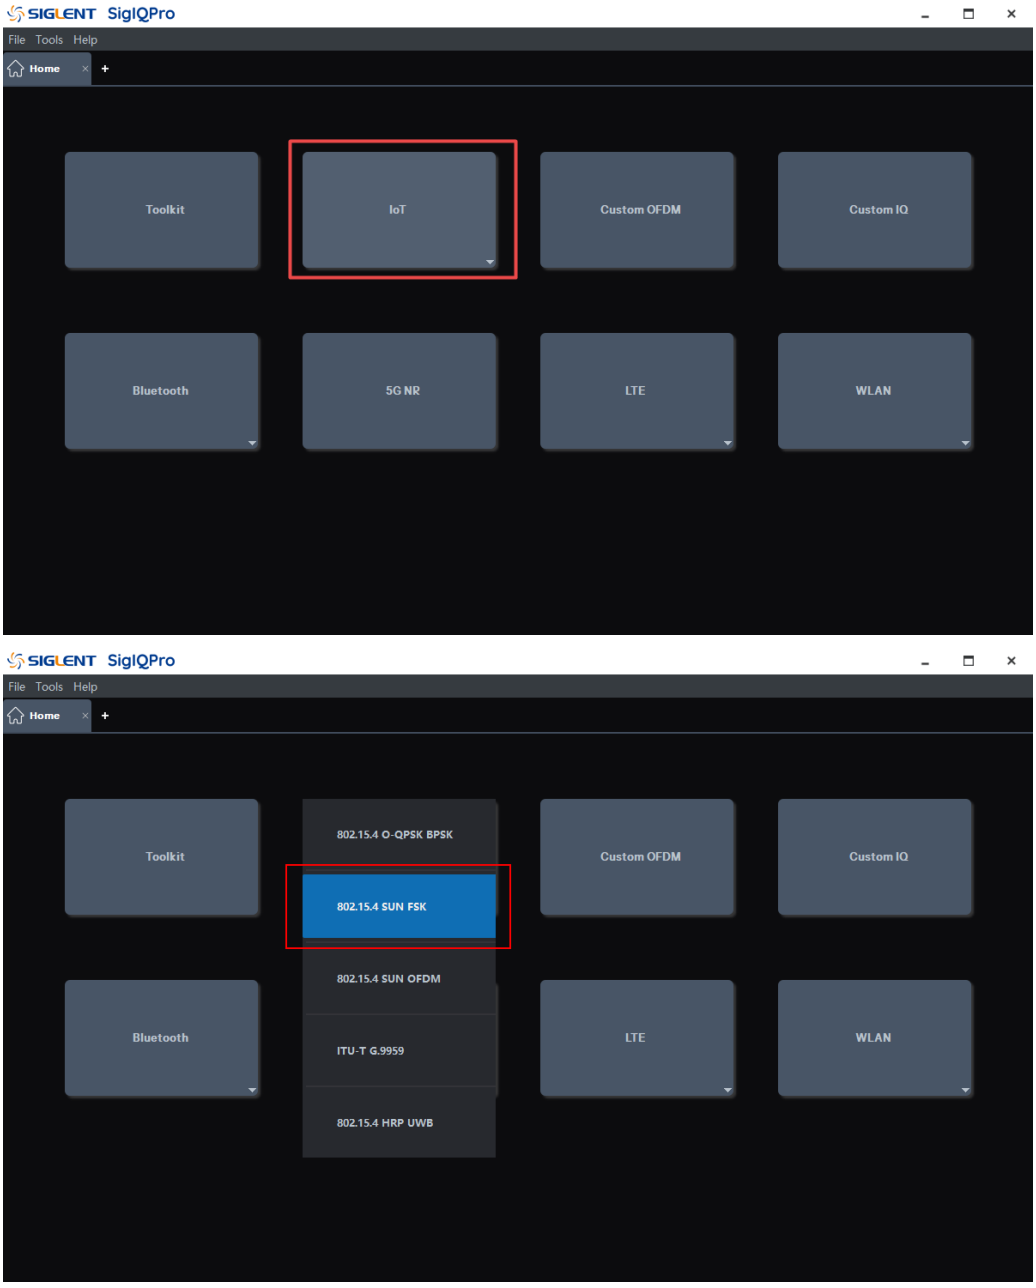

2. Keep the other parameters at their default settings.

### 2.3.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

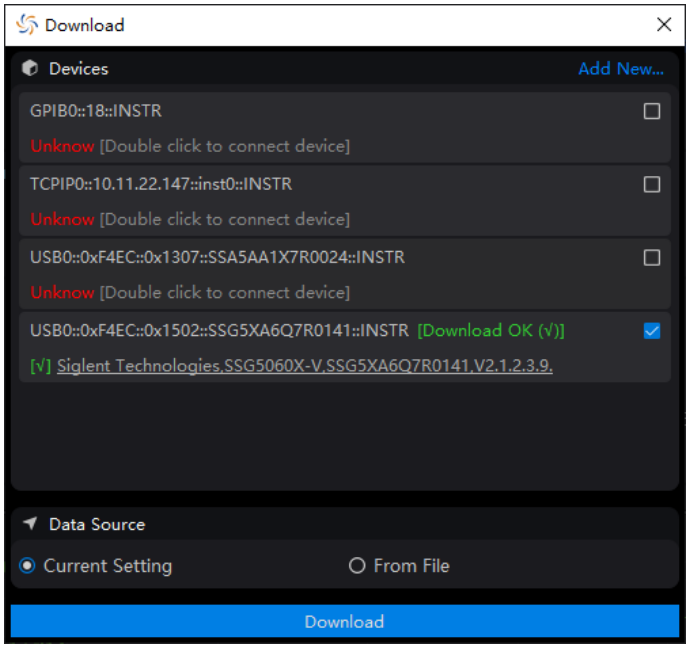


### 2.3.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing zigbee_868.
2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.

1) Press the **RF ON/OFF** front panel button to turn on the RF output.
2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.3.4 Demodulation Result

View the demodulation results in the spectrum analyzer:




## 2.4 Creating and Playing IEEE 802.15.4 SUN OFDM Waveform Files

The following example demonstrates how to create and play IEEE 802.15.4 SUN OFDM waveforms. First, configure the waveform parameters in SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.4.1 Configuring Waveform Parameters


1. On the home page, click **IoT** → **802.15.4 SUN OFDM** to enter the IEEE 802.15.4 SUN OFDM configuration interface.

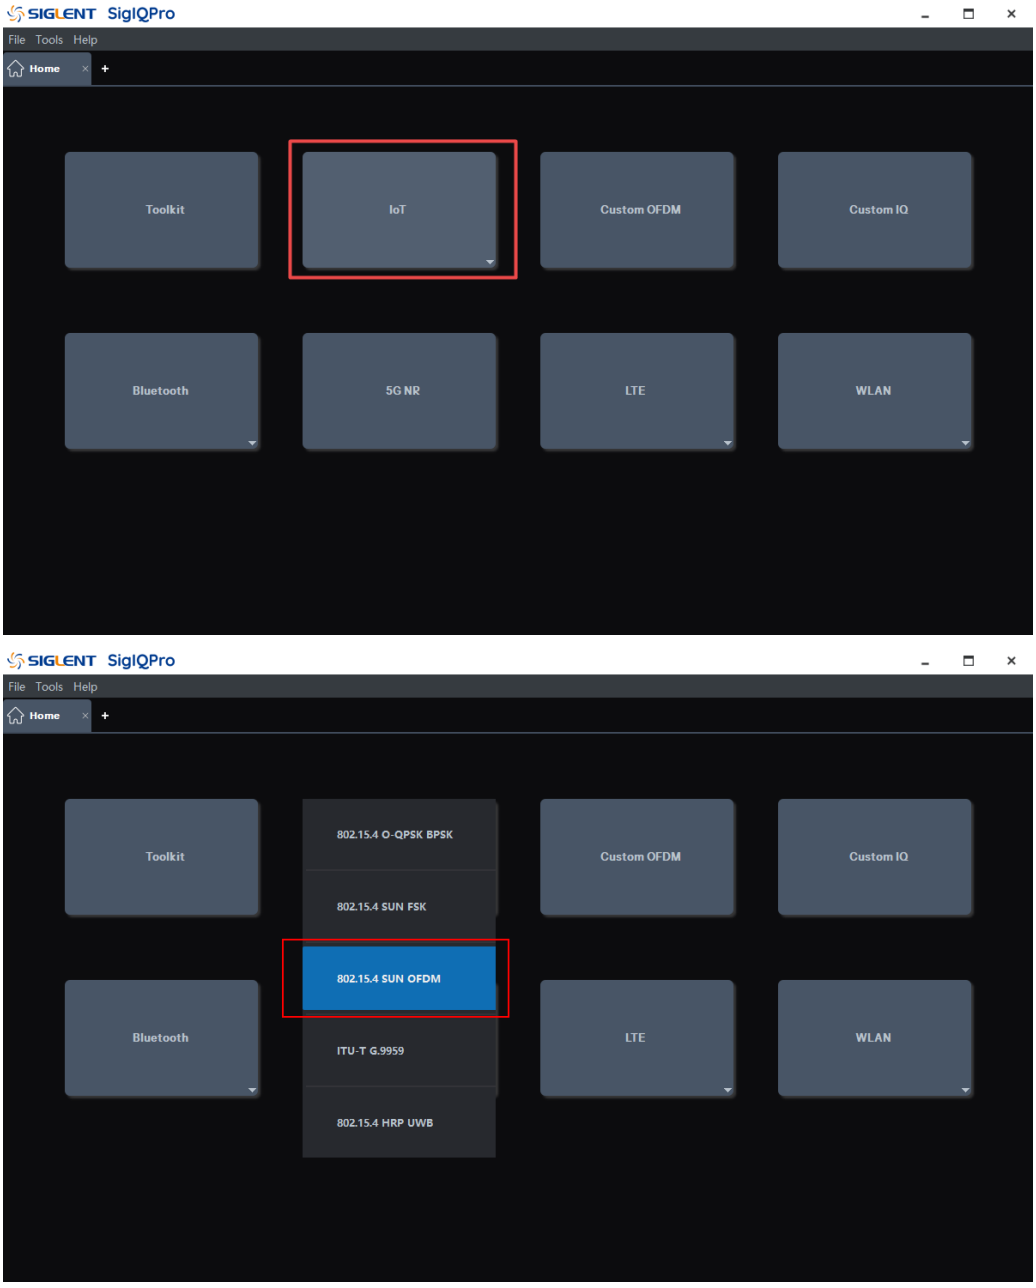

2. Keep the other parameters at their default settings.

### 2.4.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

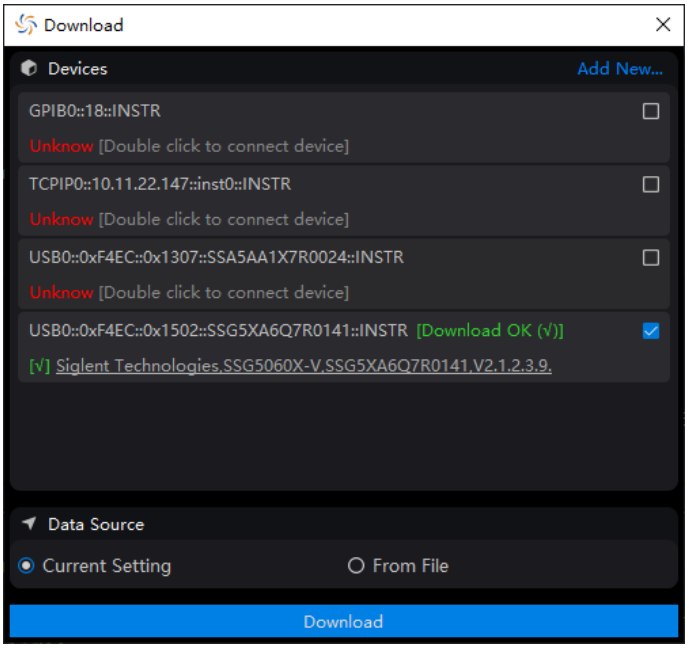


### 2.4.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing zigbee_868.
2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.

1) Press the **RF ON/OFF** front panel button to turn on the RF output.
2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.4.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

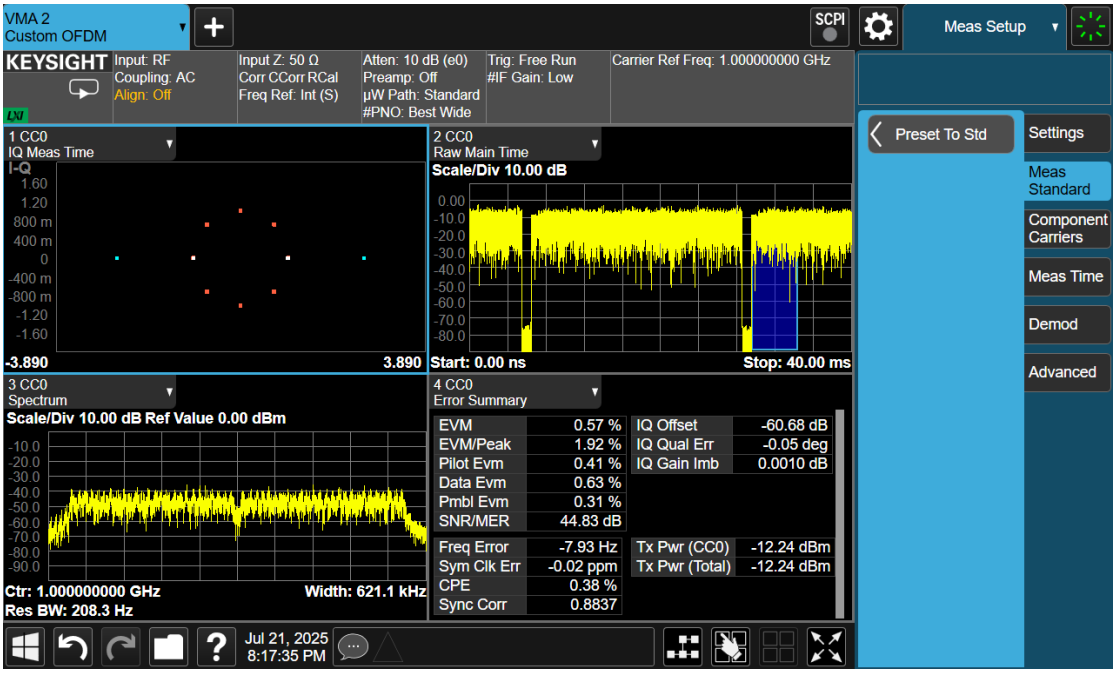


## 2.5 Create and Play ITU-T G.9959 Waveforms

An example of how to create and play a ITU-T G.9959 waveform with data rate R2 is given below. First configure the waveform parameters on SiglQPro, then download the waveform to SSG5000X-V, and finally play the waveform on SSG5000X-V.

### 2.5.1 Configure waveform parameters

1. Click **IoT** -> **ITU-T G.9959** on the homepage to enter the ITU-T G.9959 setting interface.

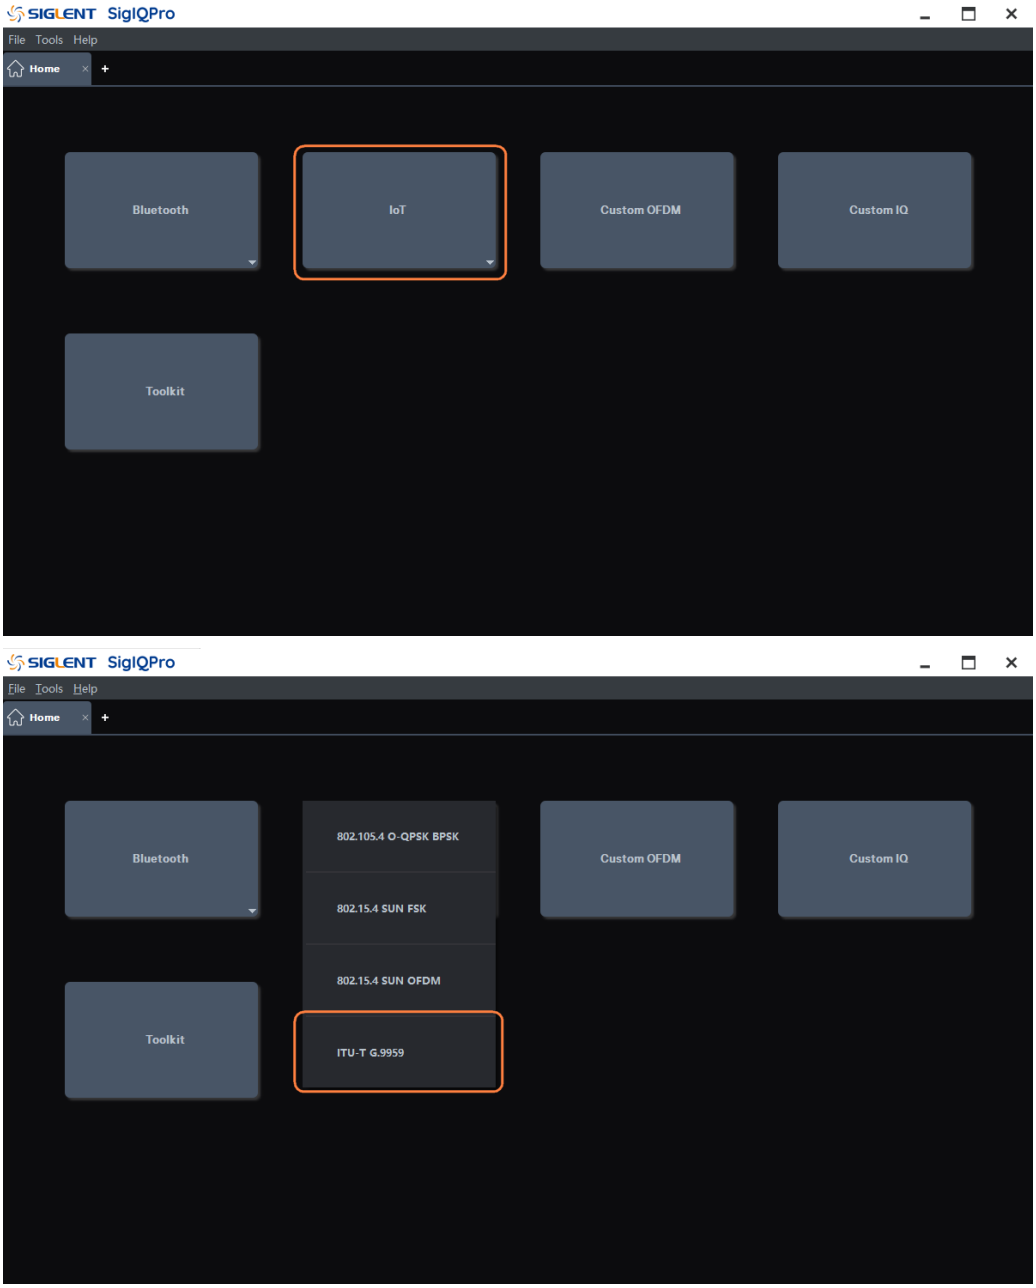


2. Click the **Packet** node in the tree view on the left side of the window to enter parameter

settings.

1) Set **Data Rate as** "R2-40kbps".

2) Keep other parameters at their default settings.

3. Click the **Waveform Setup** node in the tree view on the left side of the window to enter parameter settings.

1) Set **Waveform Name** as "zwave_r2".

2) Keep other parameters at their default settings.

### 2.5.2 Download the Waveform to Signal Source


1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.

2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.

3) Then click the Download button in the Download sub-window.

4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

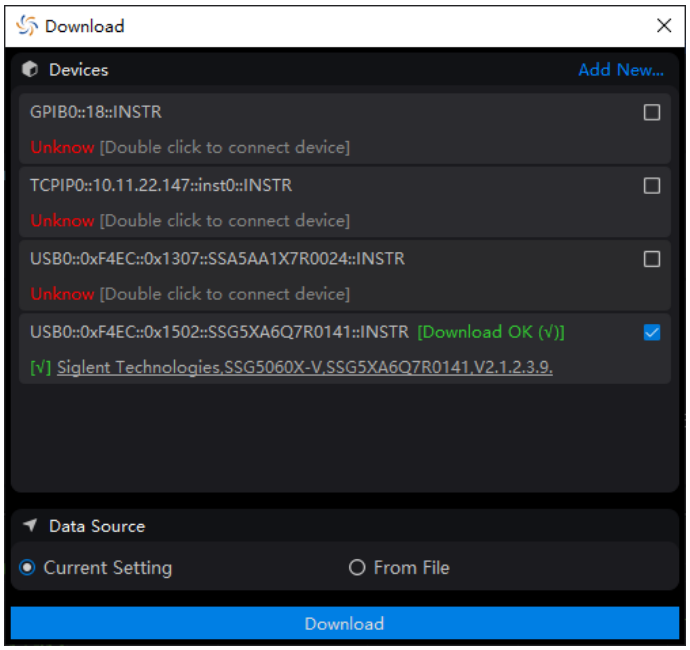

### 2.5.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing zwave_r2.

2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.
   1) Press the RF ON/OFF front panel button to turn on the RF output.
   2) Press the MOD ON/OFF front panel button to turn on the IQ Mod modulation main switch.

### 2.5.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

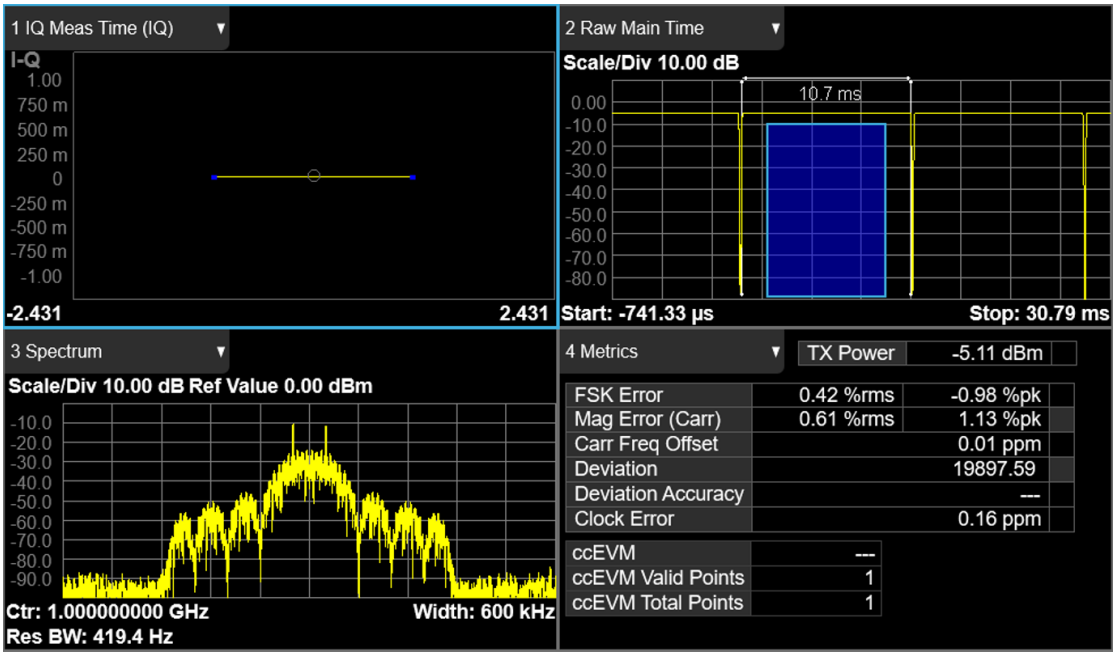



## 2.6 Creating and Playing IEEE 802.15.4 HRP UWB Waveform Files

The following example demonstrates how to create and play IEEE 802.15.4 HRP UWB waveforms in 802_15_4A mode. First, configure the waveform parameters in SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.6.1 Configuring Waveform Parameters

1. On the home page, click **IoT** → **802.15.4 HRP UWB** to enter the IEEE 802.15.4 HRP UWB configuration interface.

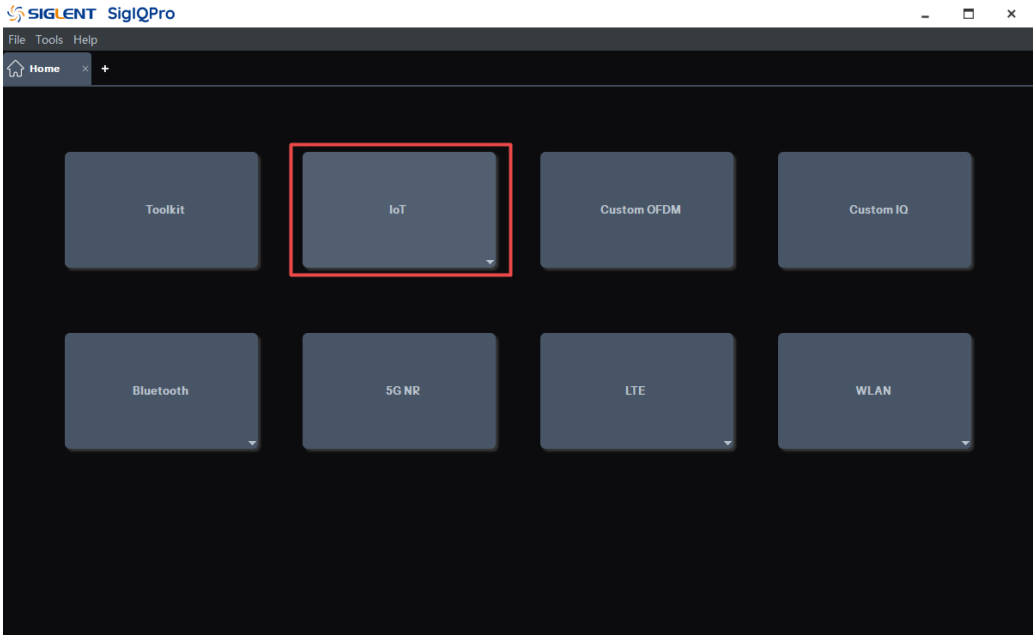


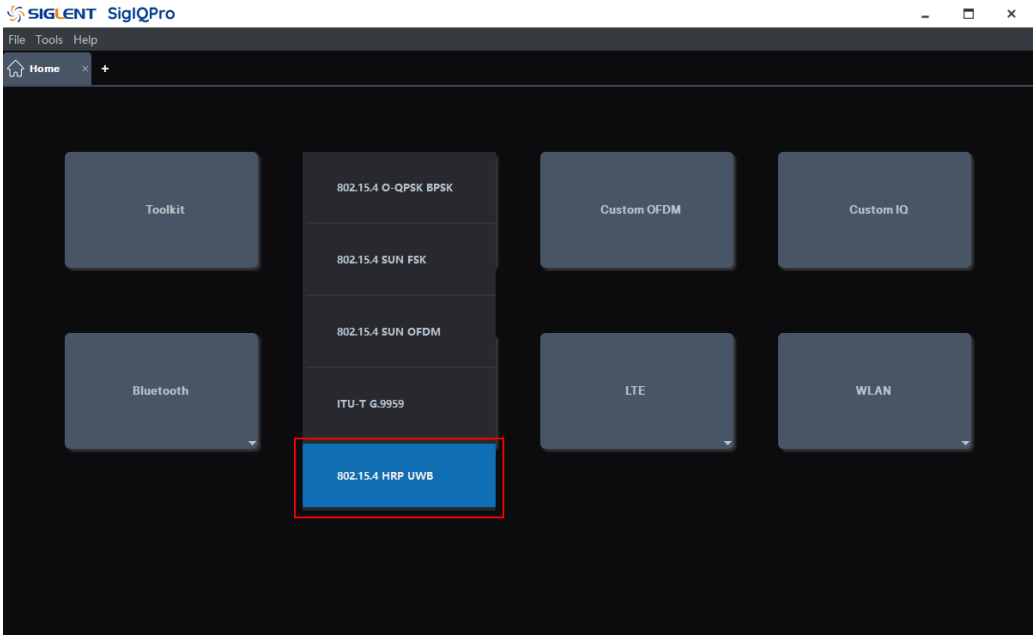2. Click on the **Packet** node in the left-side tree view to access parameter settings:
   1) Set General -> Mode to 802_15_4A;
   2) Keep all other parameters at their default values.

### 2.6.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

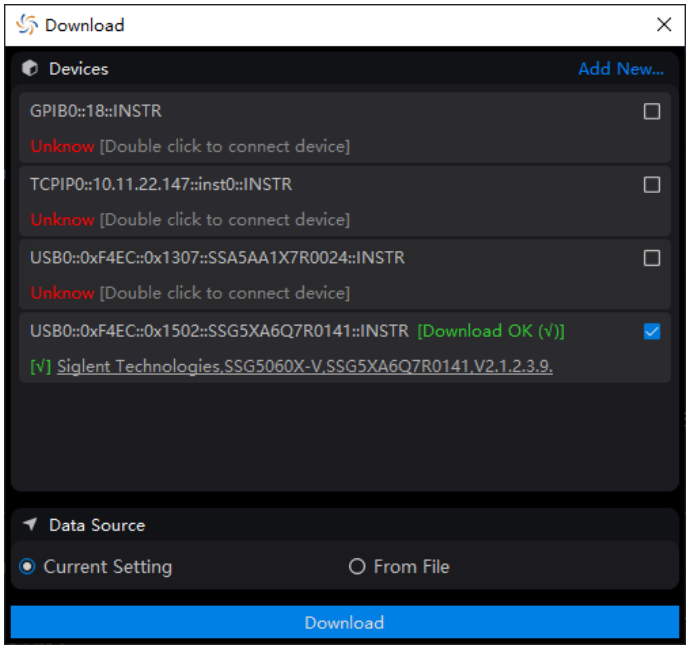


### 2.6.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing zwave_r2.

2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.6.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

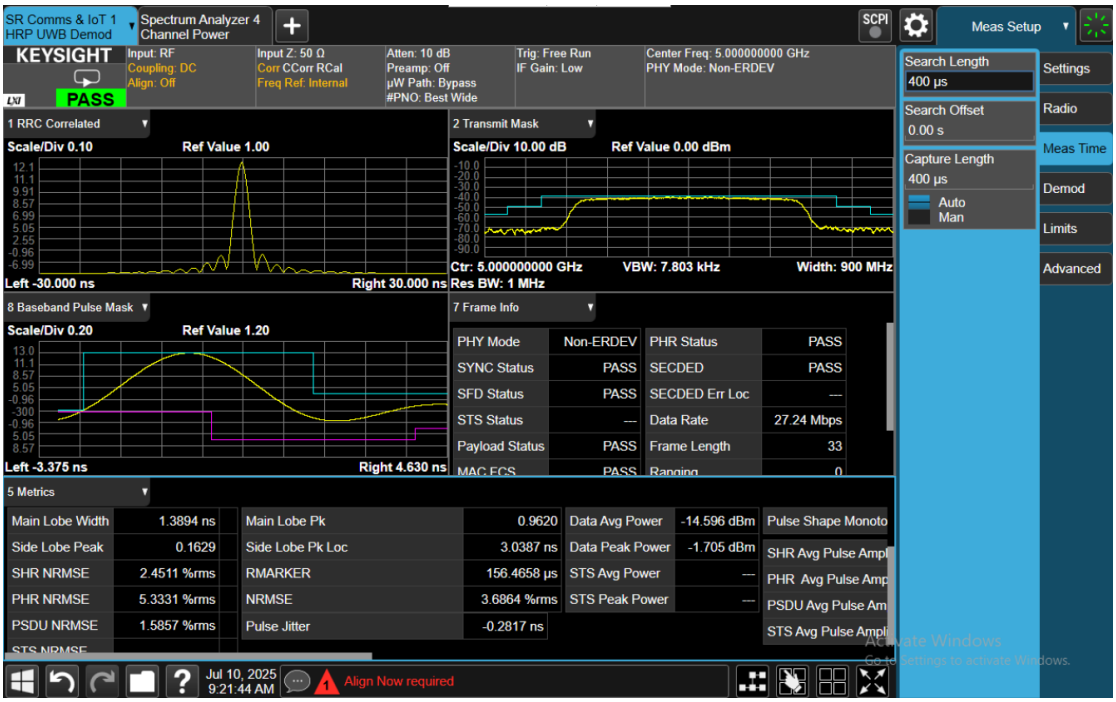


## 2.7 Create and Play WLAN Custom OFDM Waveforms

An example of how to create and play a WLAN Custom OFDM waveform is given below. First configure the waveform parameters on SiglQPro, then download the waveform to SSG5000X-V, and finally play the waveform on SSG5000X-V.

### 2.7.1 Configure waveform parameters

1. Click **Custom OFDM** on the homepage to enter the Custom OFDM setting interface.

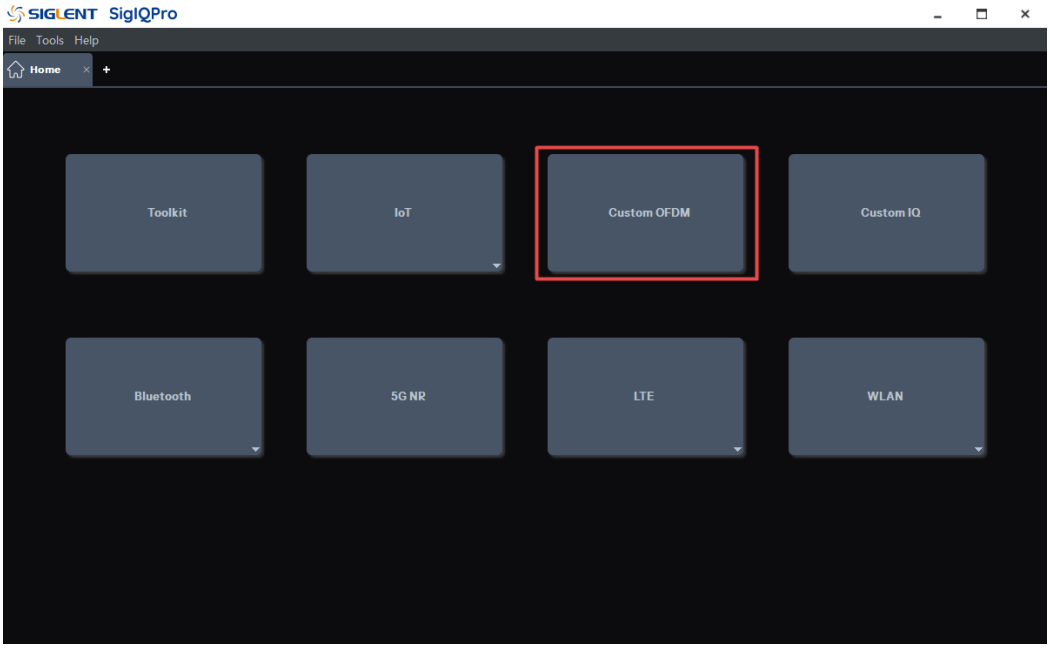



2. Click Quick Setups on the toolbar and select WLAN: IEEE 802.11a.
3. Click the **Waveform Setup** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **Waveform Name** as "WLAN_Custom_OFDM".
   2) Set **OverSampling Ratio** as "8".
   3) Keep other parameters at their default settings.

### 2.7.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.

2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
3) Then click the Download button in the Download sub-window.
4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

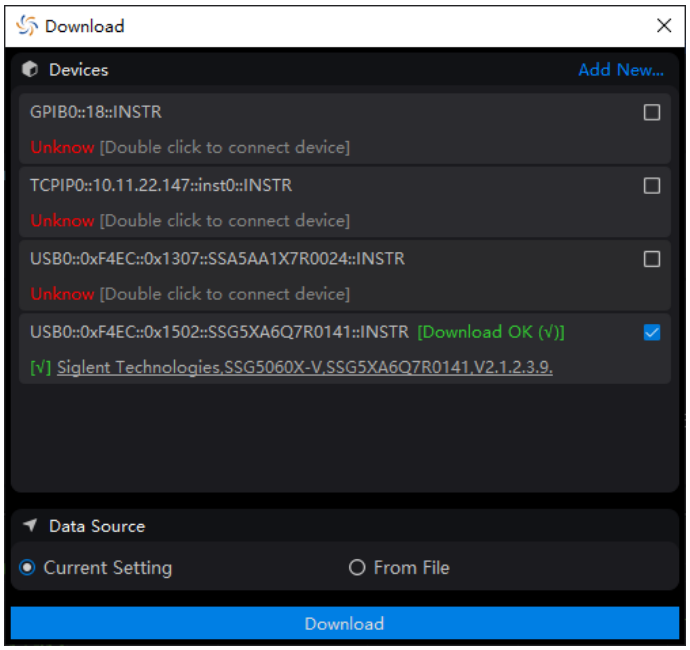



### 2.7.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:
   You can see that ARB mode is playing WLAN_Custom_OFDM.
2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.7.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

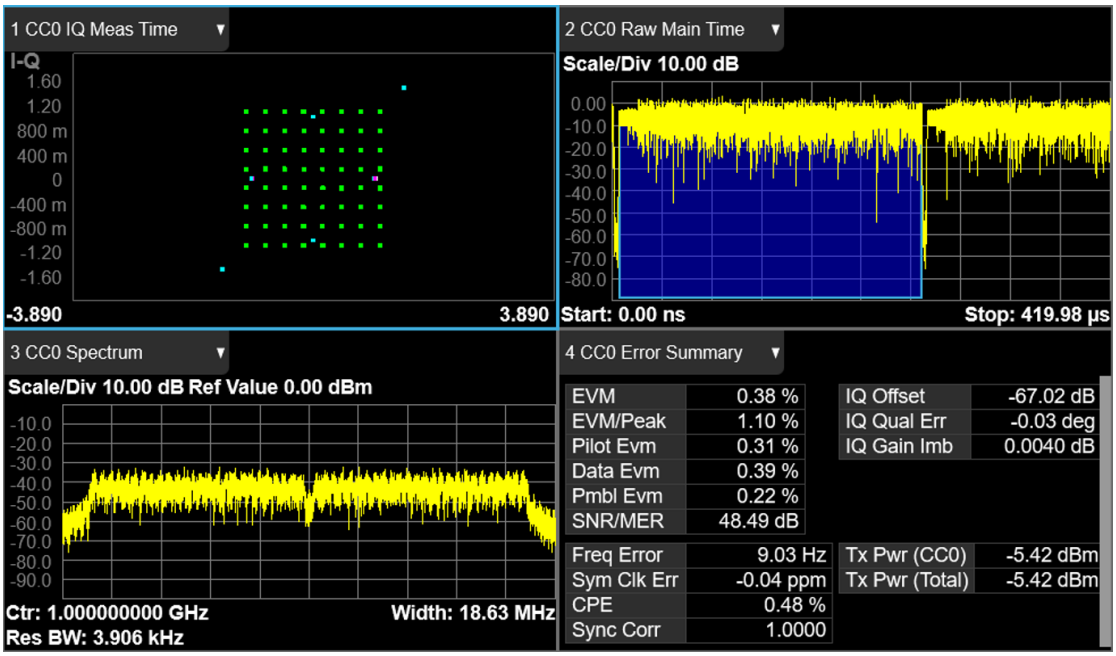

1 CC0 IQ Meas Time
I-Q
1.60
1.20
800 m
400 m
0
-400 m
-800 m
-1.20
-1.60
-3.890
3.890
2 CC0 Raw Main Time
Scale/Div 10.00 dB
0.00
-10.0
-20.0
-30.0
-40.0
-50.0
-60.0
-70.0
-80.0
Start: 0.00 ns
Stop: 419.98 µs
3 CC0 Spectrum
Scale/Div 10.00 dB Ref Value 0.00 dBm
-10.0
-20.0
-30.0
-40.0
-50.0
-60.0
-70.0
-80.0
-90.0
Ctr: 1.000000000 GHz
Width: 18.63 MHz
Res BW: 3.906 kHz
4 CC0 Error Summary
EVM 0.38 %
EVM/Peak 1.10 %
Pilot Evm 0.31 %
Data Evm 0.39 %
Pmbl Evm 0.22 %
SNR/MER 48.49 dB
IQ Offset -67.02 dB
IQ Qual Err -0.03 deg
IQ Gain Imb 0.0040 dB
Freq Error 9.03 Hz
Sym Clk Err -0.04 ppm
CPE 0.48 %
Sync Corr 1.0000
Tx Pwr (CC0) -5.42 dBm
Tx Pwr (Total) -5.42 dBm

## 2.8 Create and Play Custom IQ Waveforms

An example of how to create and play a Custom IQ 16QAM waveform is given below. First configure the waveform parameters on SiglQPro, then download the waveform to SSG5000X-V, and finally play the waveform on SSG5000X-V.

### 2.8.1 Configure waveform parameters


1. Click **Custom IQ** on the homepage to enter the Custom IQ setting interface.

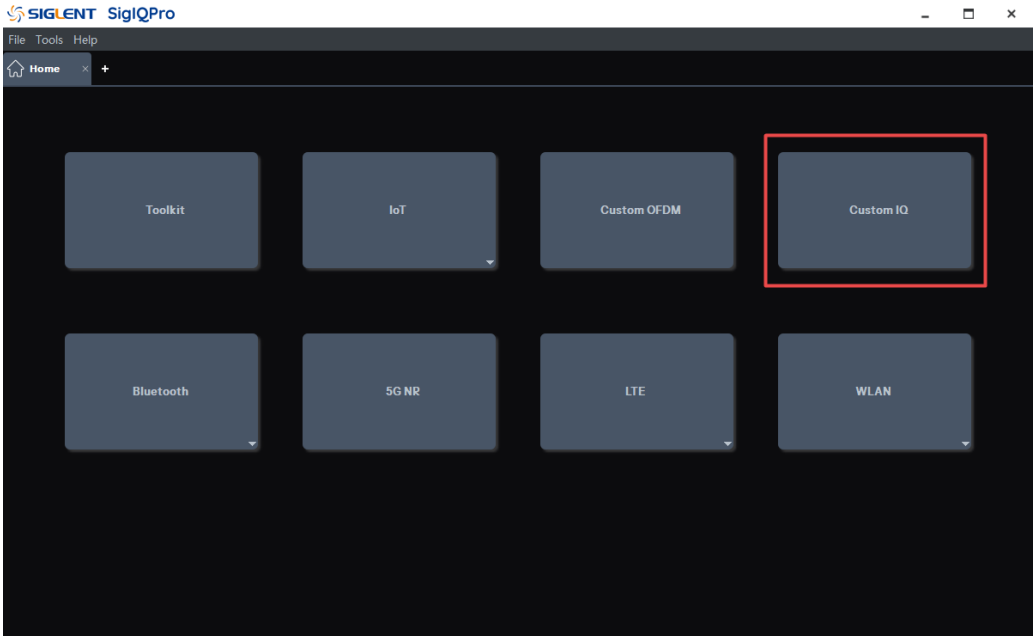


2. Keep the parameters at their default settings.

### 2.8.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

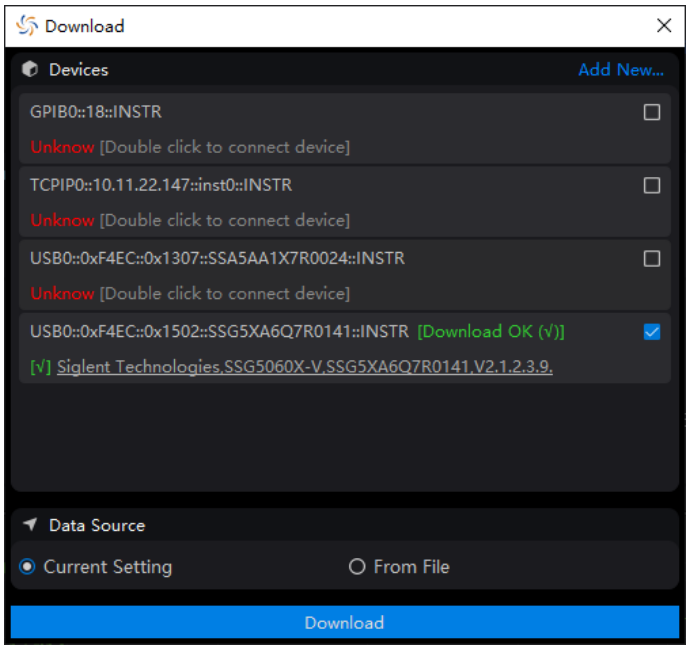



### 2.8.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing UserIQ_1 (When Waveform Name is not set, SSG5000X-V automatically names the waveform).
2. Set the RF carrier to 1 GHz, -5 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.8.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

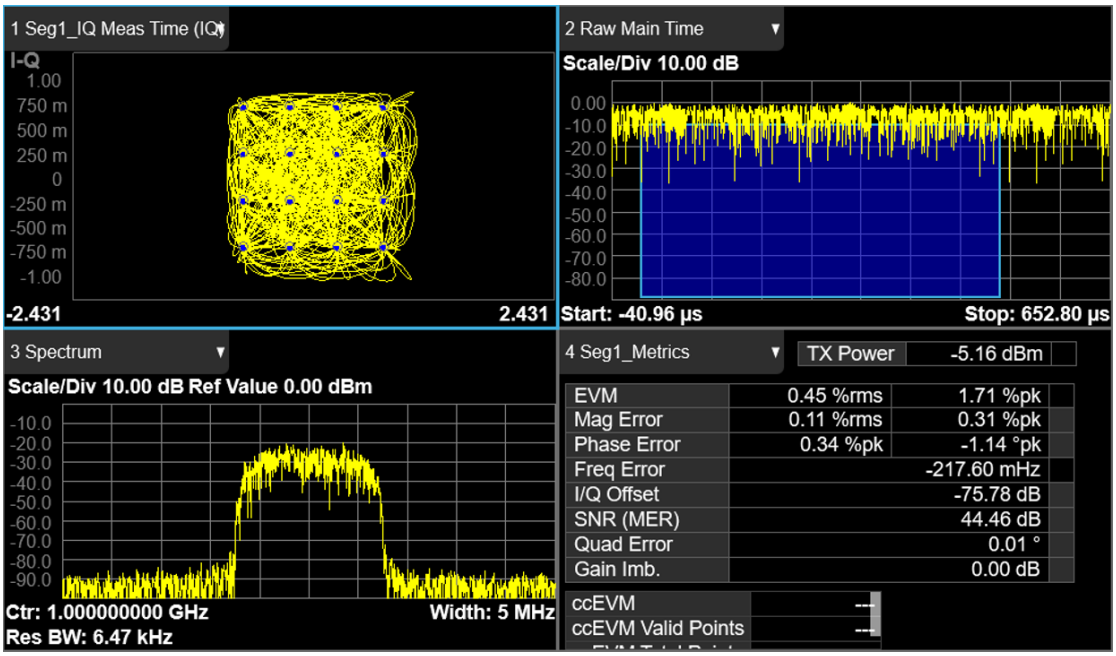

1 Seg1_IQ Meas Time (IQ)
I-Q
1.00
750 m
500 m
250 m
0
-250 m
-500 m
-750 m
-1.00
-2.431
2.431
2 Raw Main Time
Scale/Div 10.00 dB
0.00
-10.0
-20.0
-30.0
-40.0
-50.0
-60.0
-70.0
-80.0
Start: -40.96 µs
Stop: 652.80 µs
3 Spectrum
Scale/Div 10.00 dB Ref Value 0.00 dBm
-10.0
-20.0
-30.0
-40.0
-50.0
-60.0
-70.0
-80.0
-90.0
Ctr: 1.000000000 GHz
Width: 5 MHz
Res BW: 6.47 kHz
4 Seg1_Metrics
TX Power
-5.16 dBm
EVM
0.45 %rms
1.71 %pk
Mag Error
0.11 %rms
0.31 %pk
Phase Error
0.34 %pk
-1.14 °pk
Freq Error
-217.60 mHz
I/Q Offset
-75.78 dB
SNR (MER)
44.46 dB
Quad Error
0.01 °
Gain Imb.
0.00 dB
ccEVM
---
ccEVM Valid Points
---


## 2.9 Create and Play Bluetooth EDR Waveforms

An example of how to create and play Bluetooth EDR waveforms with package type DM1 is given below. First configure the waveform parameters on SigIQPro, then download the waveform to SSG5000X-V, and finally play the waveform on SSG5000X-V.

### 2.9.1 Configure waveform parameters

1. Click **Bluetooth** -> **Bluetooth BR+EDR** on the homepage to enter the Bluetooth BR/EDR setting interface.

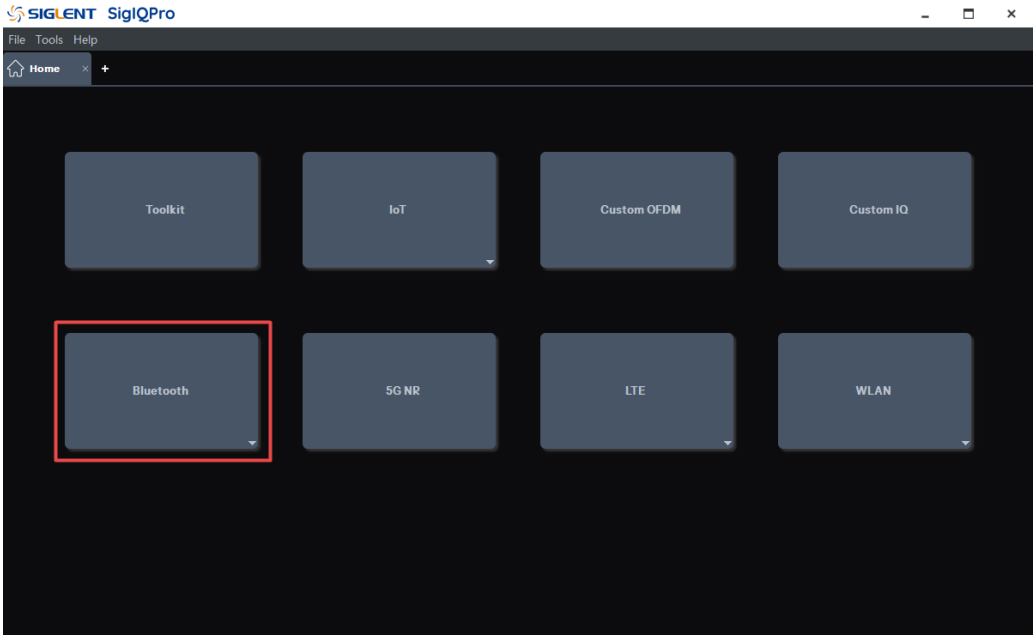


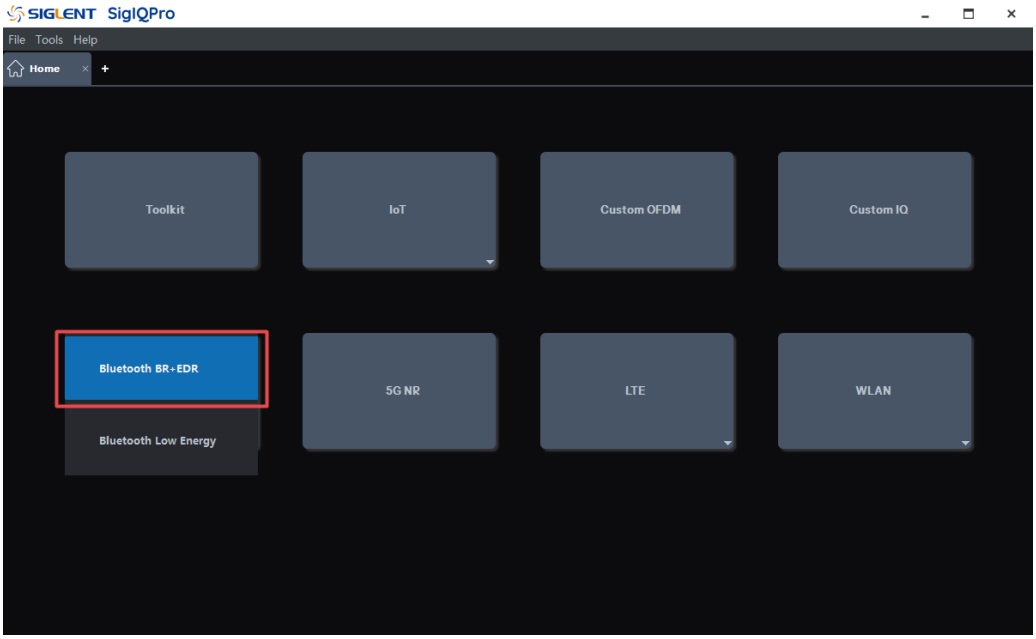2. Click the **Packet** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **Bluetooth Mode** as “Enhanced Data Rate”.
   2) Set **Transport Mode** as “ACL”.
   3) Set **Packet Type** as “DM1”.
   4) Keep other parameters at their default settings.
3. Click the **Parameters Setup** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **Waveform Name** as “EDR_DM1”.
   2) Keep other parameters at their default settings.

### 2.9.2 Download the Waveform to Signal Source


1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

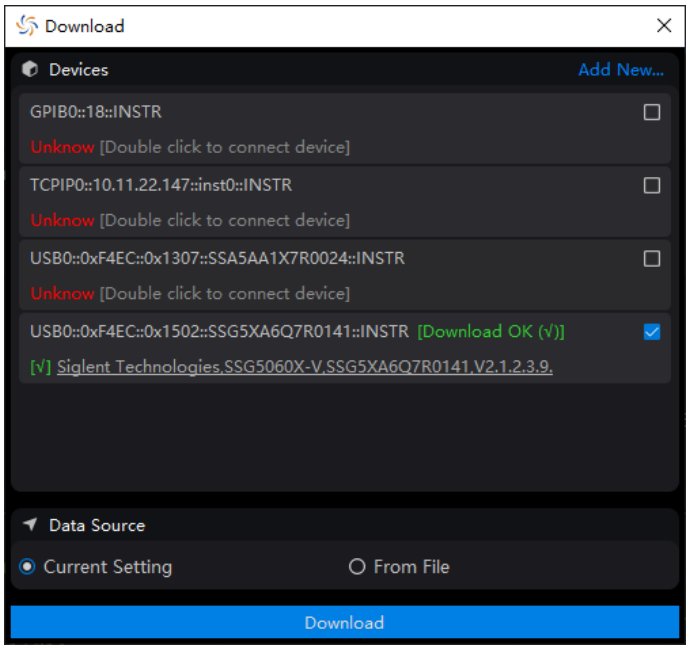


### 2.9.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing EDR_DM1.
2. Set the RF carrier to 2.402 GHz, -4 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

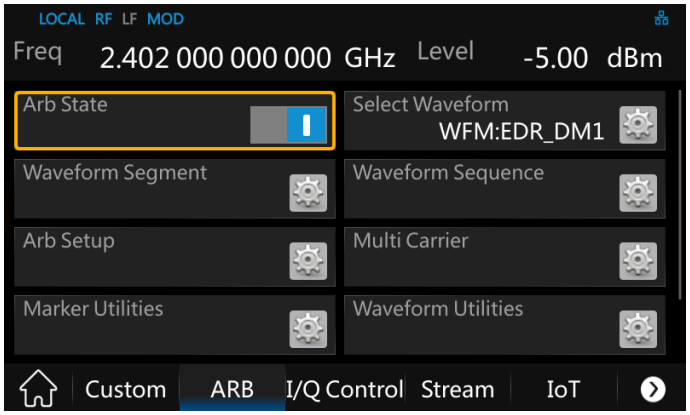

## 2.9.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

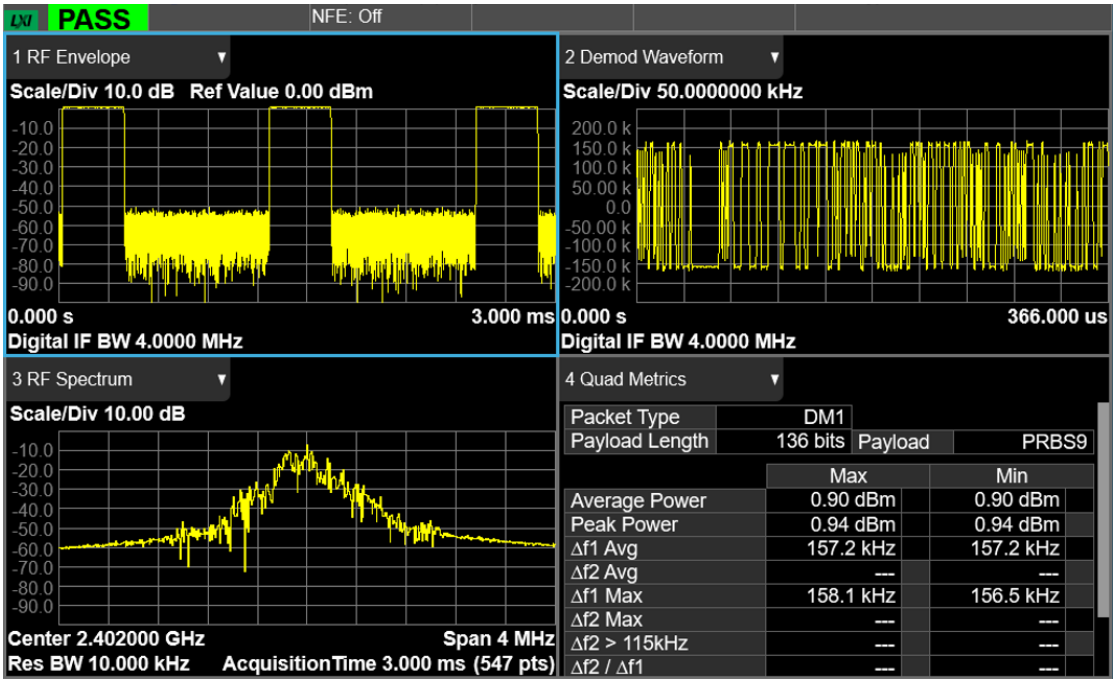



## 2.10 Create and Play Bluetooth LE Waveforms

An example of how to create and play Bluetooth Low Energy LE 1M test packet waveforms is given below. First configure the waveform parameters on SigIQPro, then download the waveform to SSG5000X-V, and finally play the waveform on SSG5000X-V.

### 2.10.1 Configure waveform parameters

1. Click **Bluetooth** -> **Bluetooth Low Energy** on the homepage to enter the Bluetooth LE setting interface.

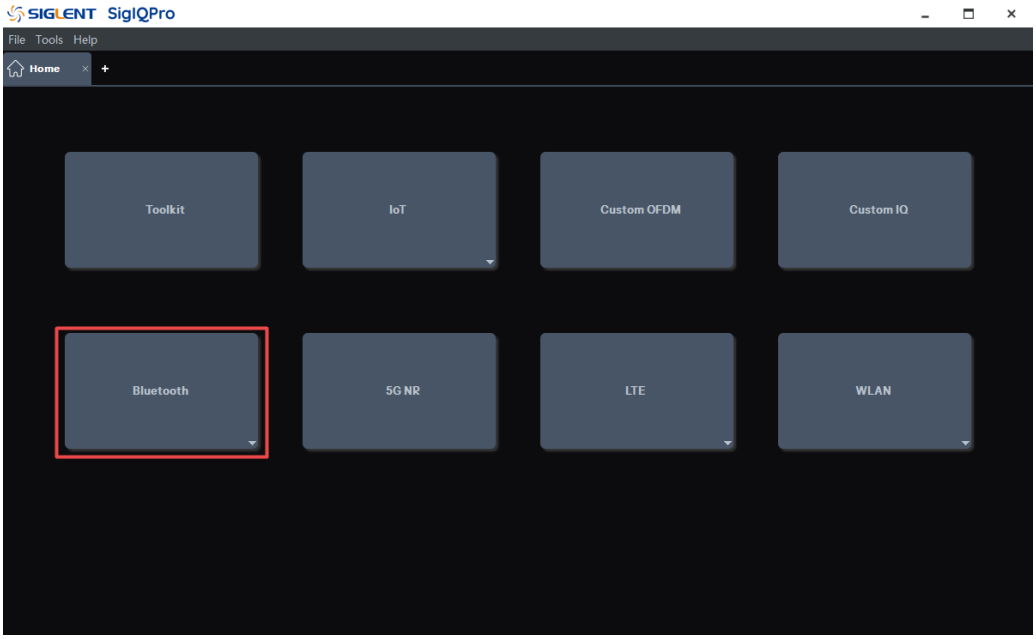


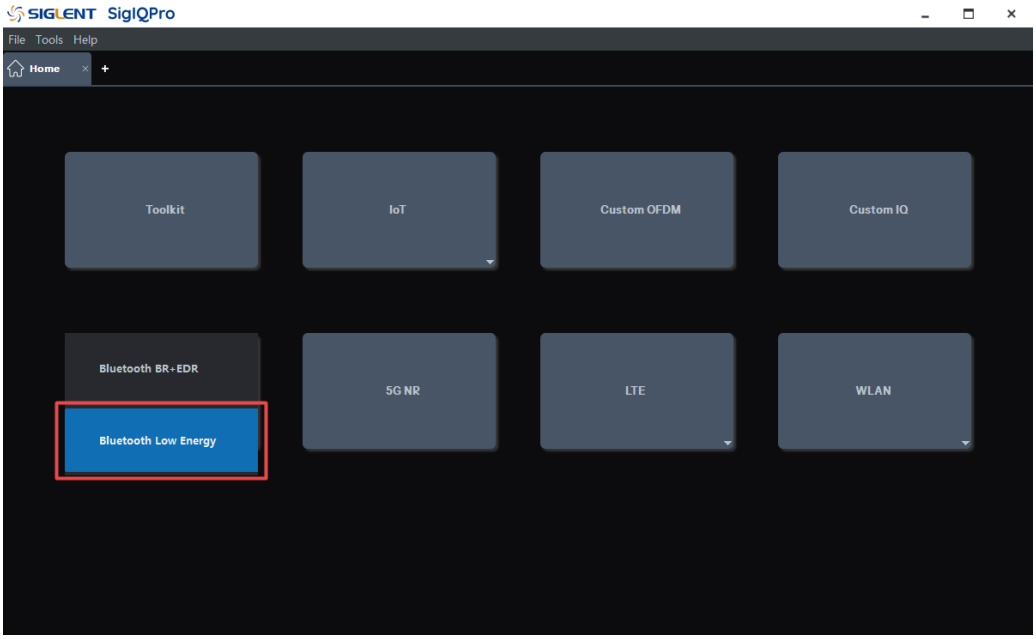2. Click the **Packet** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **Channel Type** as “Test”.
   2) Set **Packet Format** as “LE 1M”.
   3) Keep other parameters at their default settings.
3. Click the **Parameters Setup** node in the tree view on the left side of the window to enter parameter settings.
   1) Set **Waveform Name** as “LE_test”.
   2) Keep other parameters at their default settings.

### 2.10.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

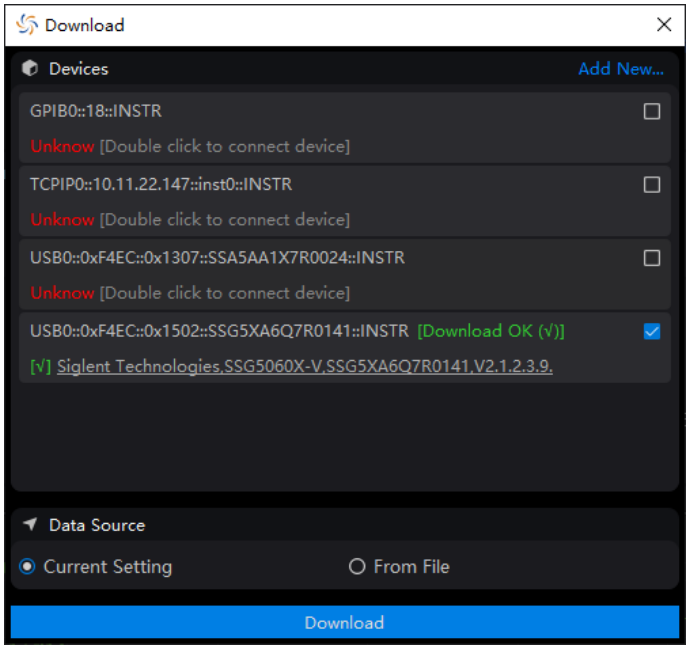

### 2.10.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.

2. Set the RF carrier to 2.402 GHz, -4 dBm.
3. Turn on modulation and RF output.
   1) Press the RF ON/OFF front panel button to turn on the RF output.
   2) Press the MOD ON/OFF front panel button to turn on the IQ Mod modulation main switch.

### 2.10.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

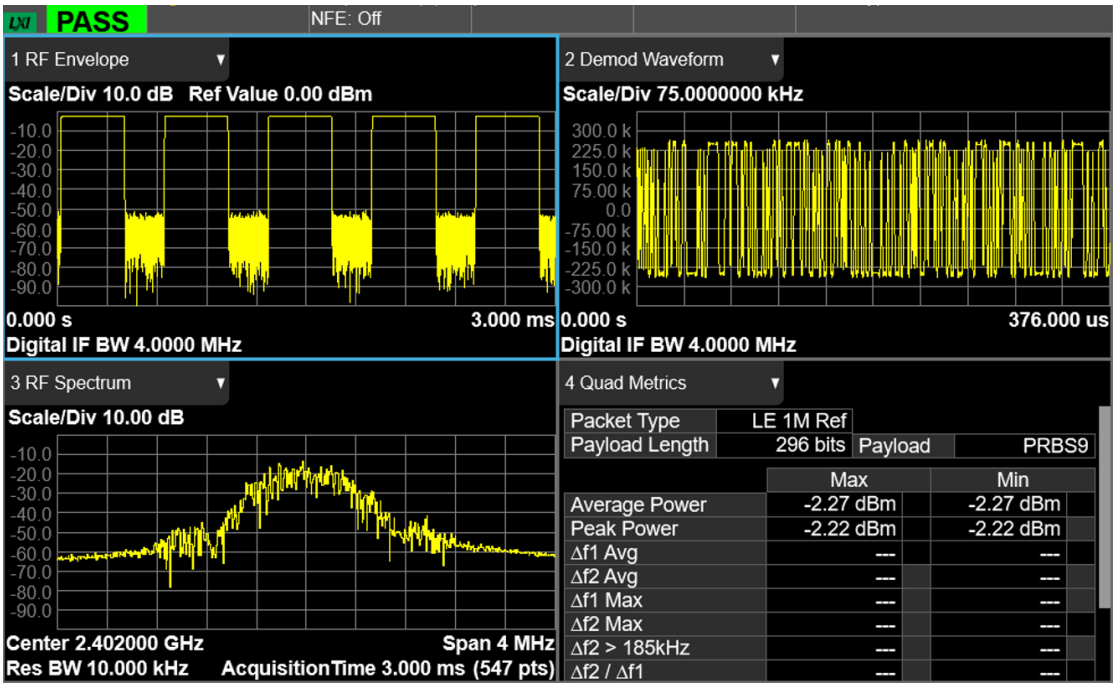


## 2.11 Creating and Playing NR Waveform Files


The following example demonstrates how to create and play NR TM1.1 waveform. First, configure the waveform parameters in SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.11.1 Configuring Waveform Parameters

1. On the home page, click **5G NR** to enter the 5G NR configuration page.

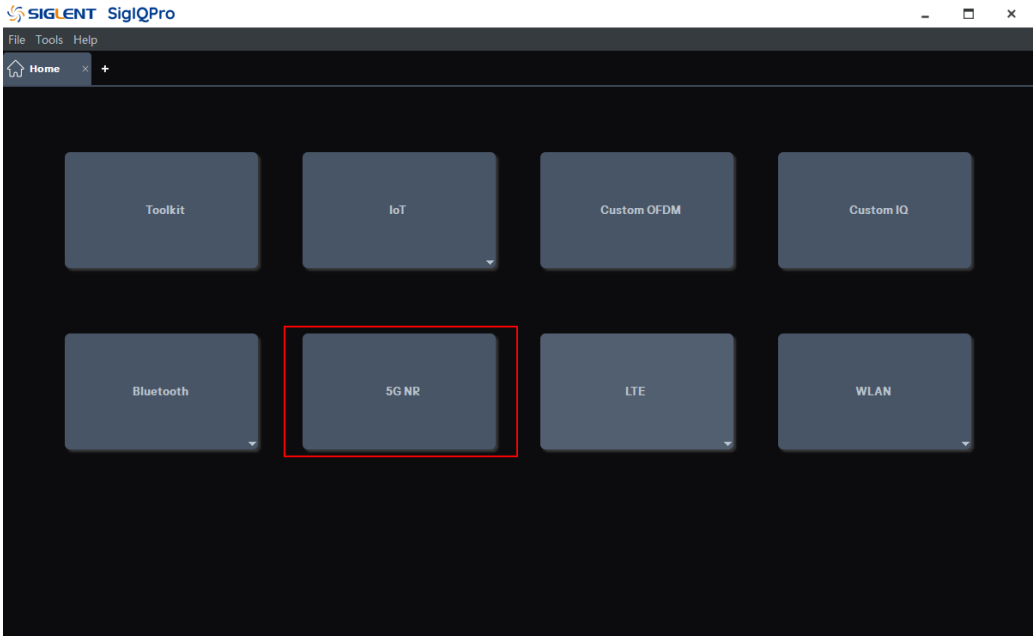



2. Click the **Carrier 1(DL)** node in the left-side tree view to access parameter settings.
3. Click the DL Test Model node in the left-side tree view to configure parameters:
   1) Set Test Model to NR-FR1-TM1.1
   2) Set Duplex Type to FDD, then click OK

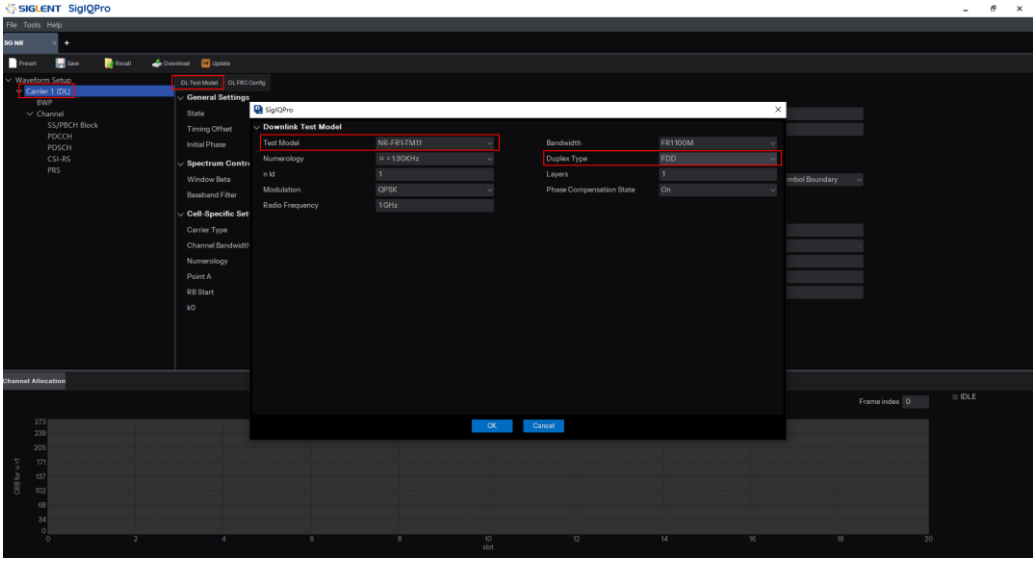

### 2.11.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

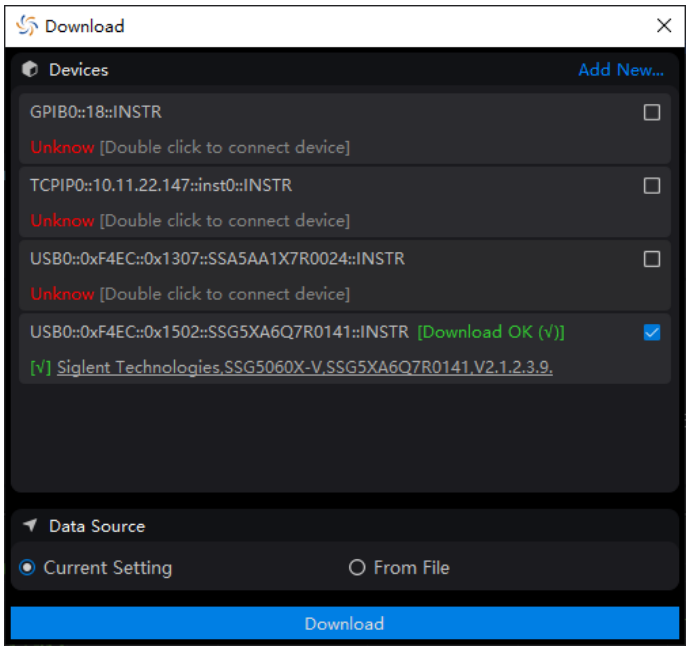


### 2.11.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.
2. Set the RF carrier to 1 GHz, -20 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main

switch.

### 2.11.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

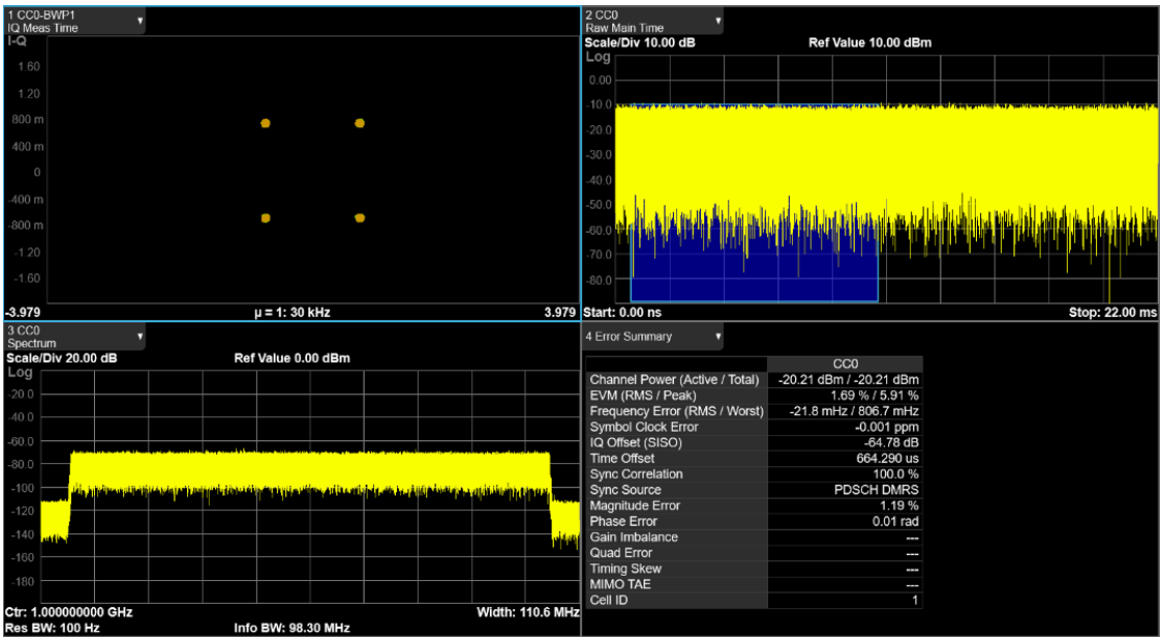


## 2.12 Creating and Playing LTE Waveform Files


The following example demonstrates how to create and play LTE-FDD TM1.1 waveforms. First, configure the waveform parameters in SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.12.1 Configuring Waveform Parameters

1. On the home page, click **LTE** → **LTE-FDD** to enter the LTE-FDD configuration interface.

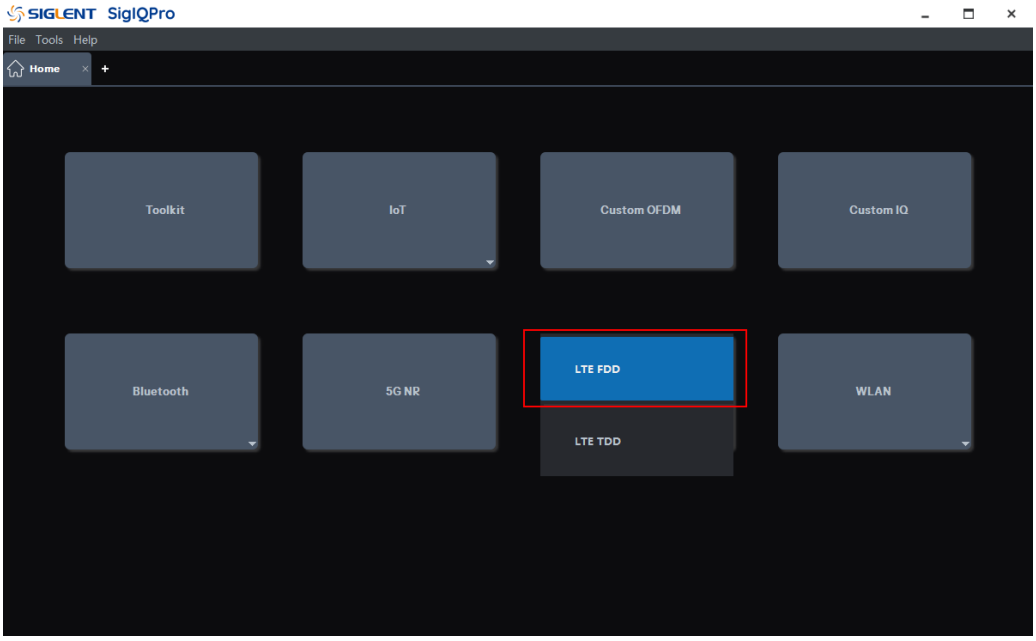



2. Click the **Carrier 1(DL)** node in the left-side tree view to access parameter settings.
3. Click the **DL Test Model** node in the left-side tree view to configure parameters:
   1) Set Bandwidth to 20M
   2) Set Test Model Type to TM1.1, then click OK to confirm

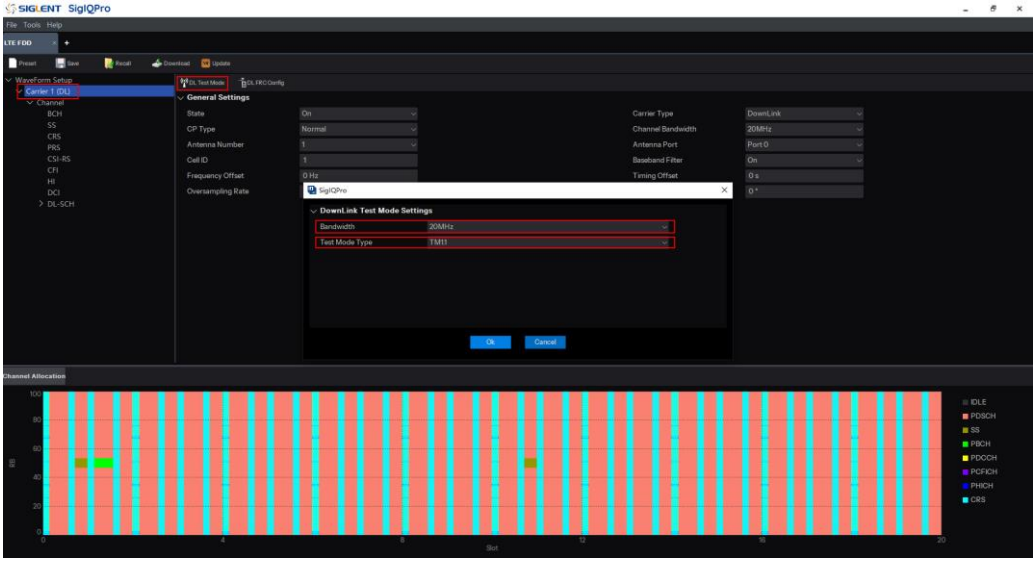

### 2.12.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

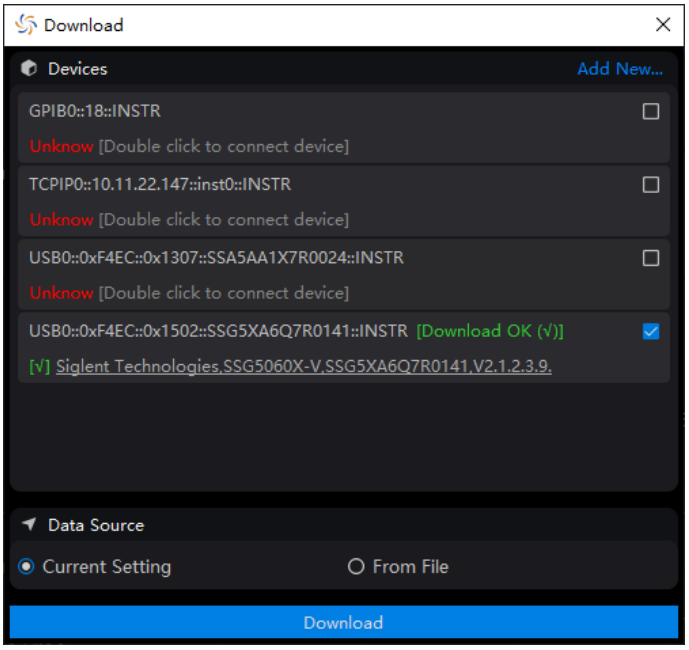



### 2.12.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.
2. Set the RF carrier to 1 GHz, -20 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.12.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

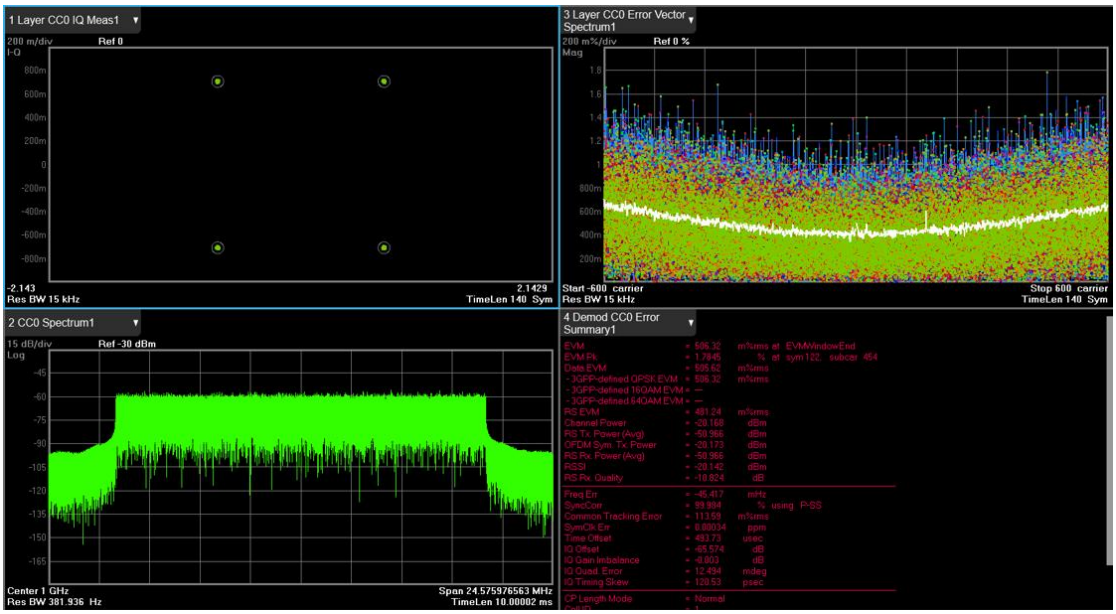

1 Layer CC0 IQ Meas1
200 m/div
I-Q
Ref 0
800m
600m
400m
200m
0
-200m
-400m
-600m
-800m
-2.143
Res BW 15 kHz
2.1429
TimeLen 140 Sym
3 Layer CC0 Error Vector Spectrum1
200 m%/div
Mag
Ref 0 %
1.8
1.6
1.4
1.2
1
800m
600m
400m
200m
Start -600 carrier
Res BW 15 kHz
Stop 600 carrier
TimeLen 140 Sym
2 CC0 Spectrum1
15 dB/div
Log
Ref -30 dBm
-45
-60
-75
-90
-105
-120
-135
-150
-165
Center 1 GHz
Res BW 381.936 Hz
Span 24.575976563 MHz
TimeLen 10.00002 ms
4 Demod CC0 Error Summary1
EVM + 586.32 m%rms at EVMWindowEnd
EVM Pk + 1.7845 % at sym122, subcar 464
Data EVM + 595.62 m%rms
- 3GPP-defined QPSK EVM + 586.32 m%rms
- 3GPP-defined 16QAM EVM + --
- 3GPP-defined 64QAM EVM + --
RS EVM + 481.24 m%rms
Channel Power + -20.168 dBm
RS Tx Power (Avg) + -59.966 dBm
OFDM Sym Tx Power + -29.173 dBm
RS Rx Power (Avg) + -59.966 dBm
RSSI + -20.142 dBm
RS Rx Quality + -10.824 dB
Freq Err + -45.417 mHz
SyncCorr + 99.994 % using P-SS
Common Tracking Error + 113.59 m%rms
SymClk Err + 0.00034 ppm
Time Offset + 483.73 usec
IQ Offset + -65.574 dB
IQ Gain Imbalance + -0.003 dB
IQ Quad. Error + 12.494 mdeg
IQ Timing Skew + 129.53 psec
CP Length Mode + Normal

## 2.13 Creating and Playing WLAN_802_11b/g Waveform Files


The following example demonstrates how to create and play WLAN_802_11b waveforms at 1Mbps rate. First, configure the waveform parameters in SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.13.1 Configuring Waveform Parameters

1. On the home page, click **WLAN** → **WLAN_802_11b/g** to enter the WLAN_802_11b/g configuration interface.

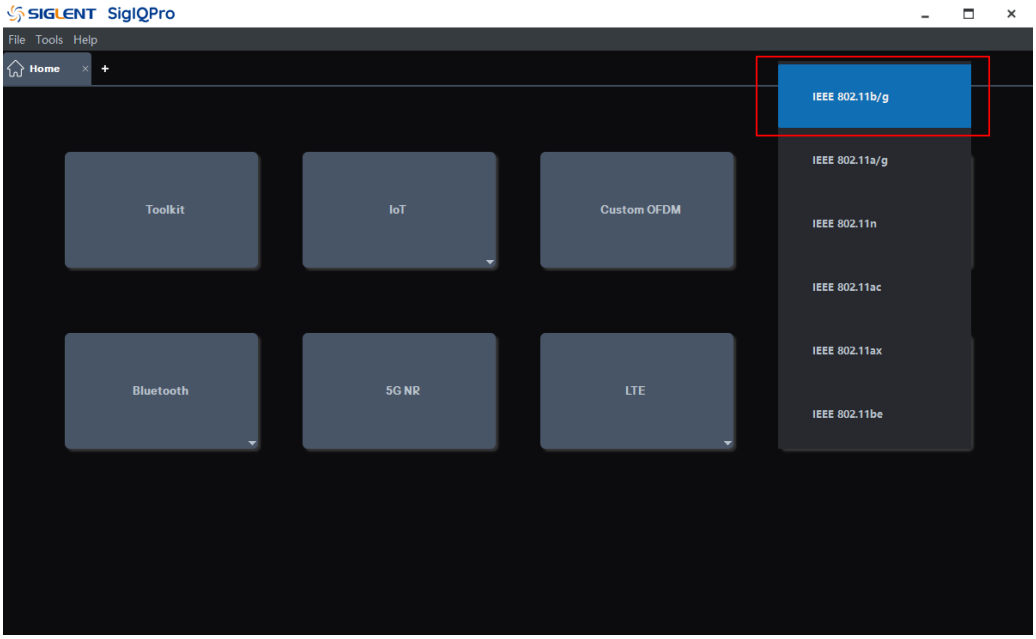



2. Click the **Waveform** node in the left-side tree view to access parameter settings:
   1) Set Generation Mode to Framed mode
   2) Set Data Rate to 1Mbps (DSSS)

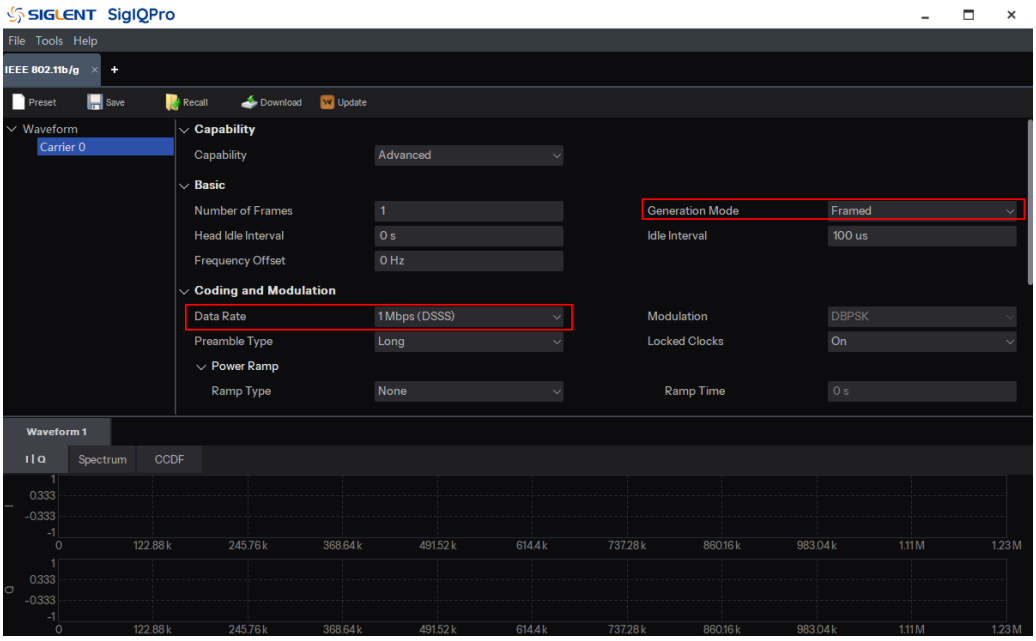


## 2.13.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

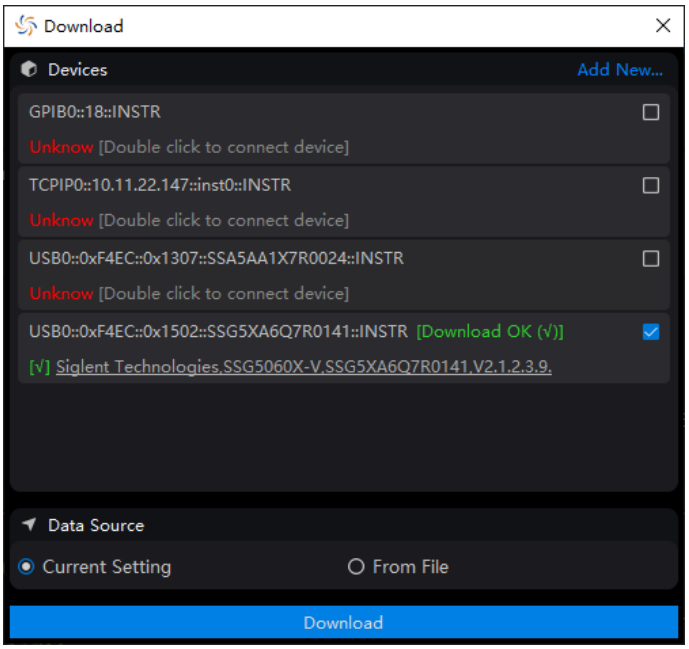


## 2.13.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-


V IQ MOD -> ARB:

You can see that ARB mode is playing LE_test.

2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

## 2.13.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

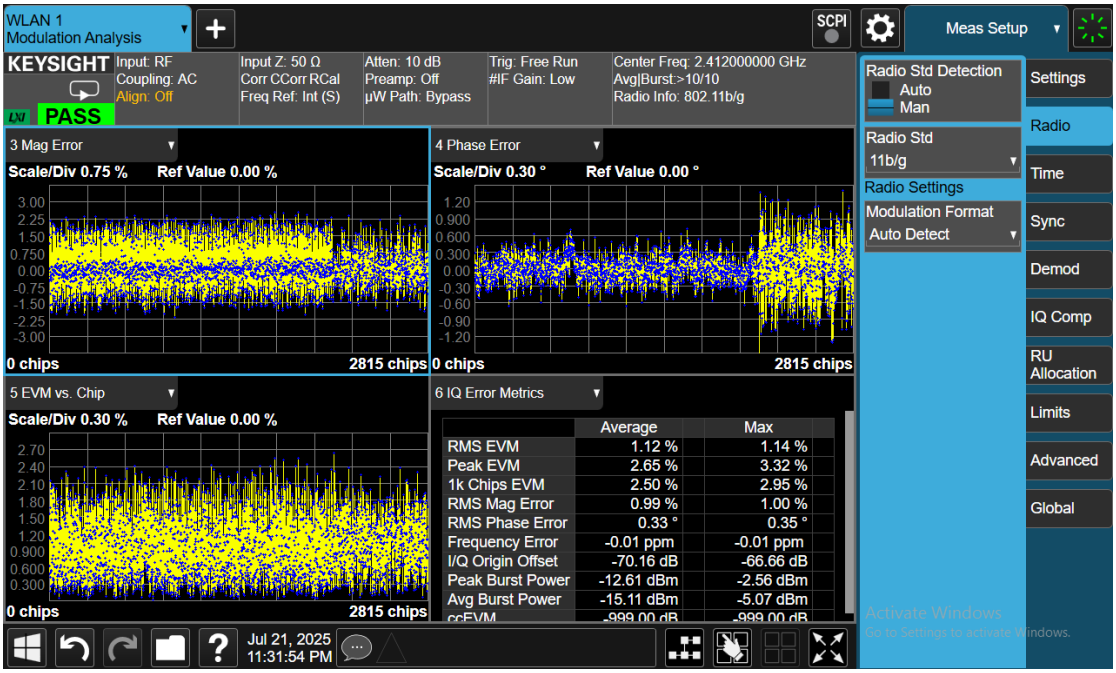


## 2.14 Creating and Playing WLAN_802_11a/g Waveform Files

The following example demonstrates how to create and play WLAN_802_11a waveforms at 6Mbps (OFDM). First, configure the waveform parameters in SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.


### 2.14.1 Configuring Waveform Parameters

1. On the home page, click **WLAN** → **WLAN_802_11a/g** to enter the WLAN_802_11a/g configuration interface.
2. Click the **Waveform** node in the left-side tree view to access parameter settings:
   1) Set Generation Mode to Framed mode
   2) Set Data Rate to 6Mbps (OFDM)

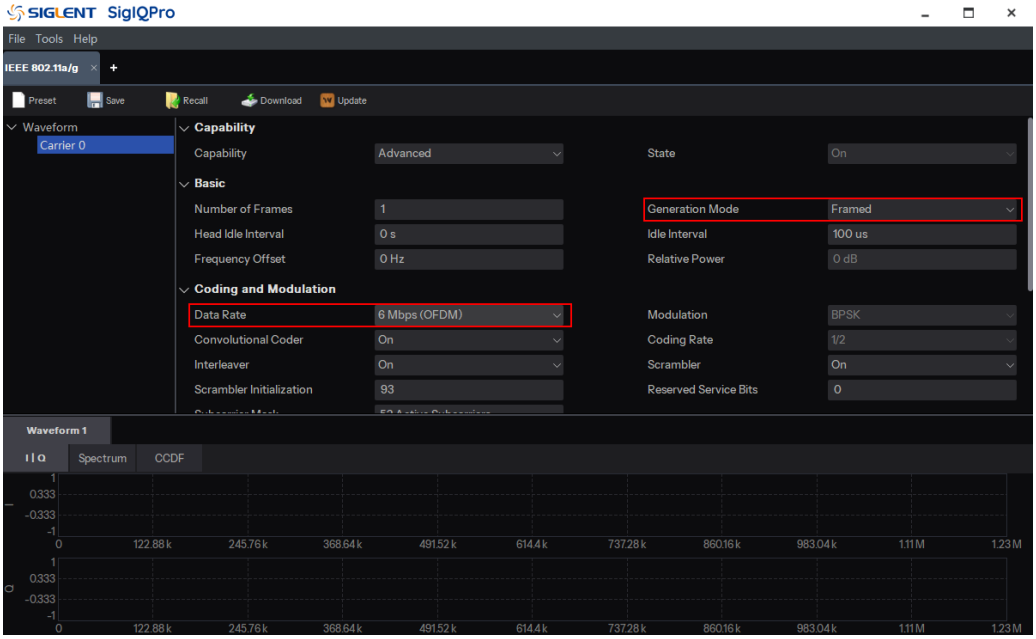


### 2.14.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

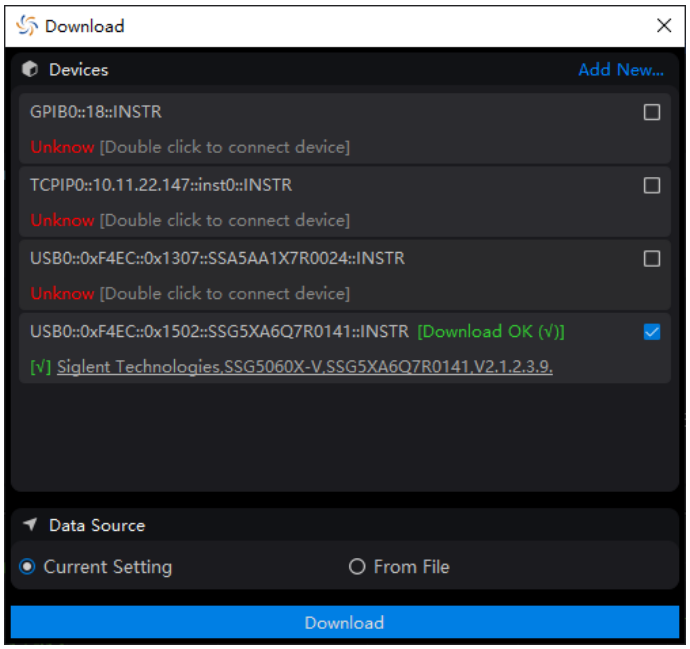



### 2.14.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.
2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.14.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

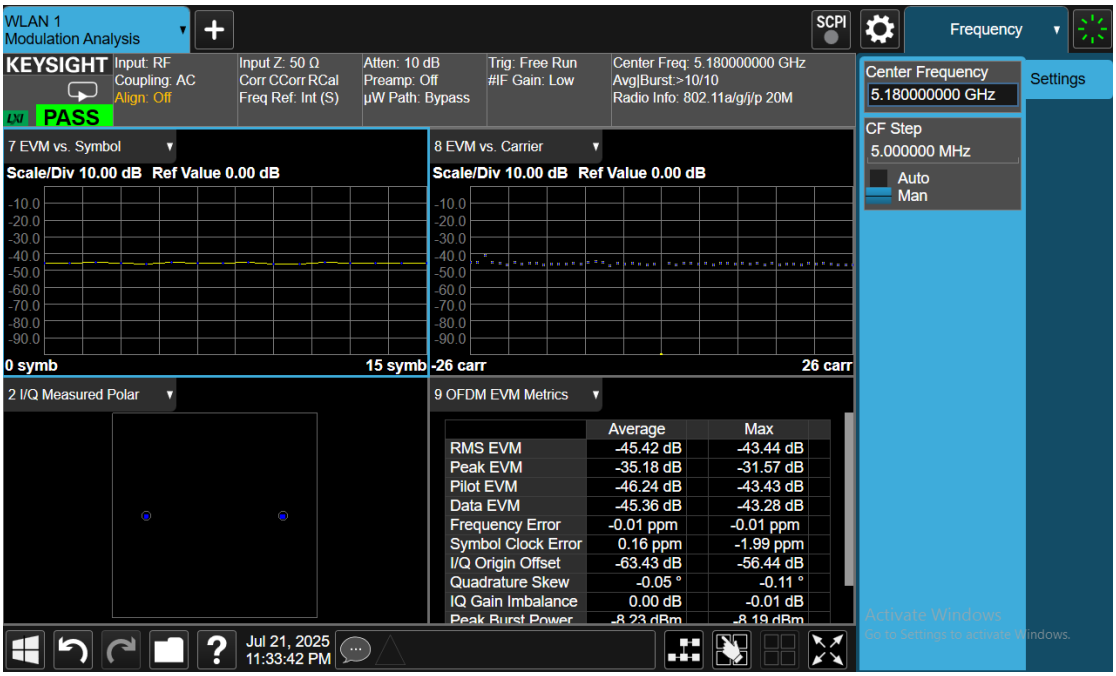

WLAN 1
Modulation Analysis
SCPI
Frequency
KEYSIGHT
Input: RF
Coupling: AC
Align: Off
Input Z: 50 Ω
Corr CCorr RCal
Freq Ref: Int (S)
Atten: 10 dB
Preamp: Off
µW Path: Bypass
Trig: Free Run
#IF Gain: Low
Center Freq: 5.180000000 GHz
Avg|Burst:>10/10
Radio Info: 802.11a/g/j/p 20M
PASS
Center Frequency
5.180000000 GHz
Settings
CF Step
5.000000 MHz
Auto
Man
7 EVM vs. Symbol
Scale/Div 10.00 dB Ref Value 0.00 dB
0 symb
15 symb
8 EVM vs. Carrier
Scale/Div 10.00 dB Ref Value 0.00 dB
-26 carr
26 carr
2 I/Q Measured Polar
9 OFDM EVM Metrics
Average
Max
RMS EVM -45.42 dB -43.44 dB
Peak EVM -35.18 dB -31.57 dB
Pilot EVM -46.24 dB -43.43 dB
Data EVM -45.36 dB -43.28 dB
Frequency Error -0.01 ppm -0.01 ppm
Symbol Clock Error 0.16 ppm -1.99 ppm
I/Q Origin Offset -63.43 dB -56.44 dB
Quadrature Skew -0.05 ° -0.11 °
IQ Gain Imbalance 0.00 dB -0.01 dB
Peak Burst Power -8.23 dBm -8.19 dBm
Jul 21, 2025
11:33:42 PM
Activate Windows
Go to Settings to activate Windows.

## 2.15 Creating and Playing WLAN_802_11n Waveform Files


The following example demonstrates how to create and play a WLAN_802_11n waveform with a bandwidth of 40M. First, configure the waveform parameters on SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.15.1 Configuring Waveform Parameters

1. On the homepage, click **WLAN** -> **WLAN_802_11n** to enter the WLAN_802_11n settings interface.

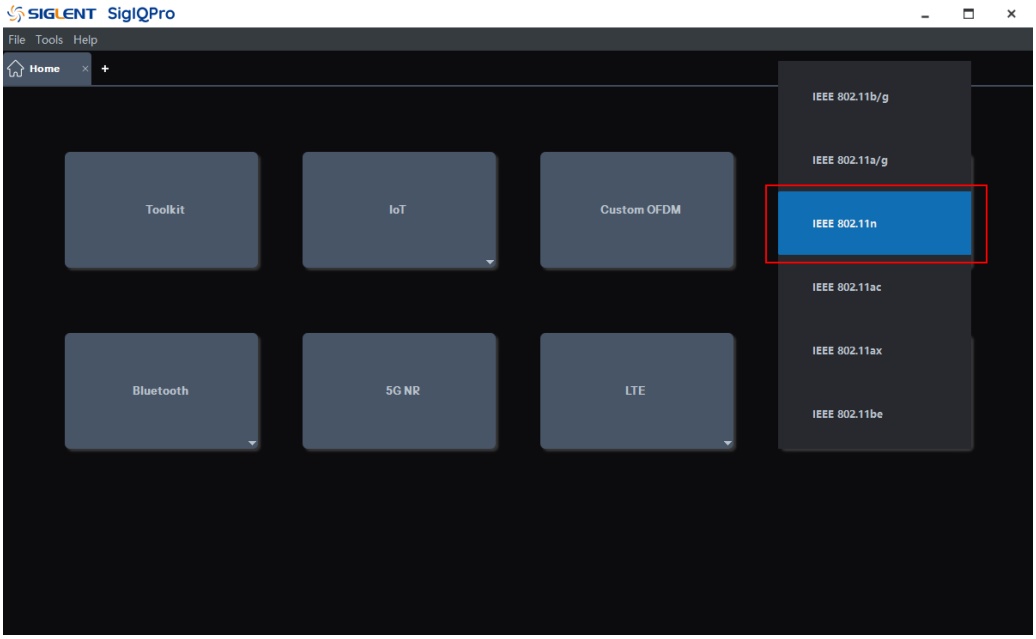



2. Click the **Waveform** node in the tree view on the left side of the window to access the parameter settings:
   1) Set Generation Mode to Framed mode.
   2) Set BandWidth to 40M.

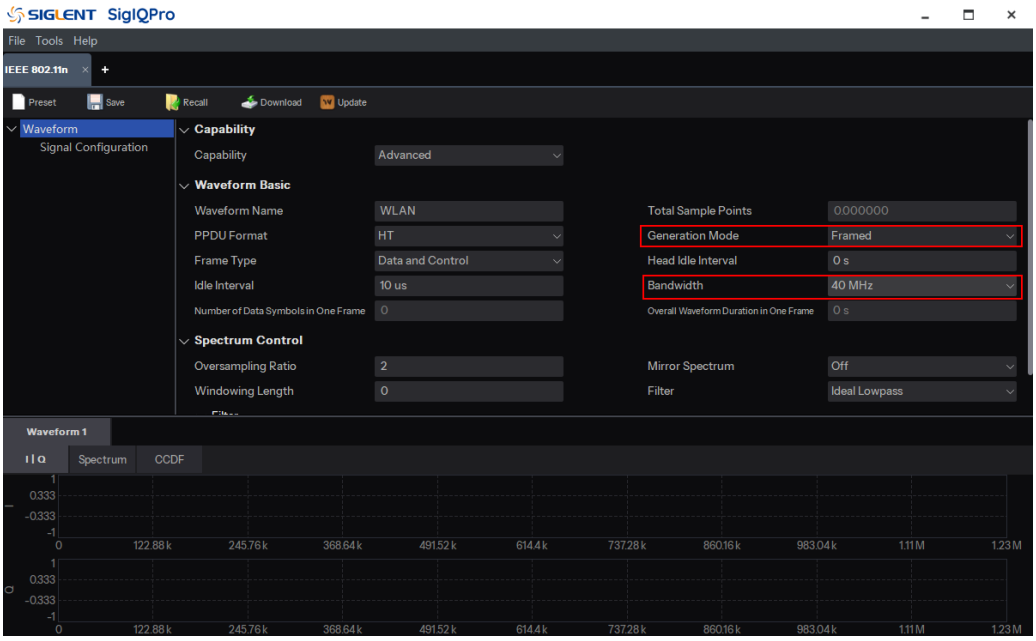


## 2.15.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

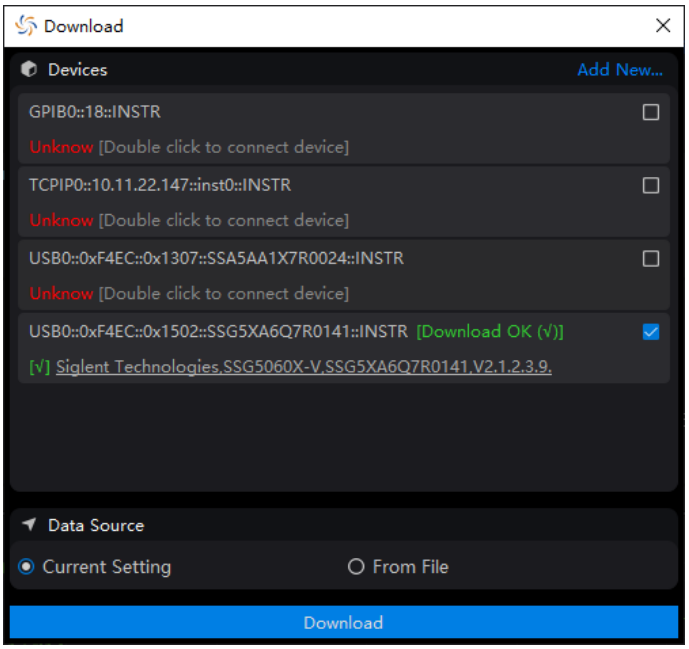


## 2.15.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-


V IQ MOD -> ARB:

You can see that ARB mode is playing LE_test.

2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

## 2.15.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

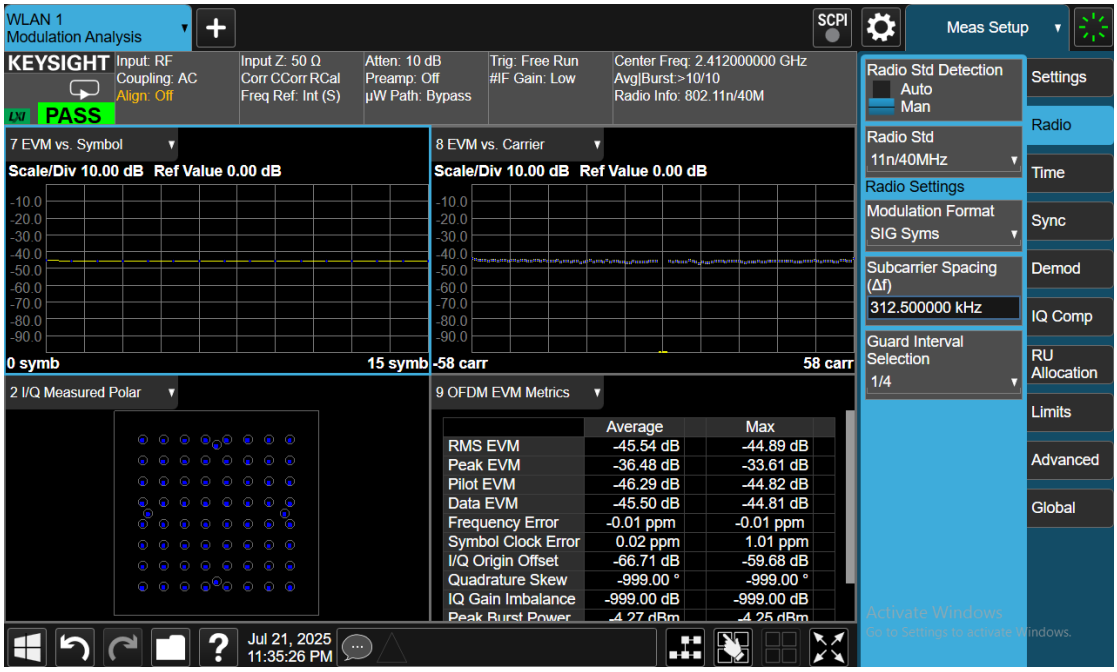


## 2.16 Creating and Playing WLAN_802_11ac Waveform Files


The following example demonstrates how to create and play a WLAN_802_11ac waveform with a bandwidth of 160M. First, configure the waveform parameters on SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.16.1 Configuring Waveform Parameters

1. On the homepage, click **WLAN** -> **WLAN_802_11ac** to enter the WLAN_802_11ac settings interface.

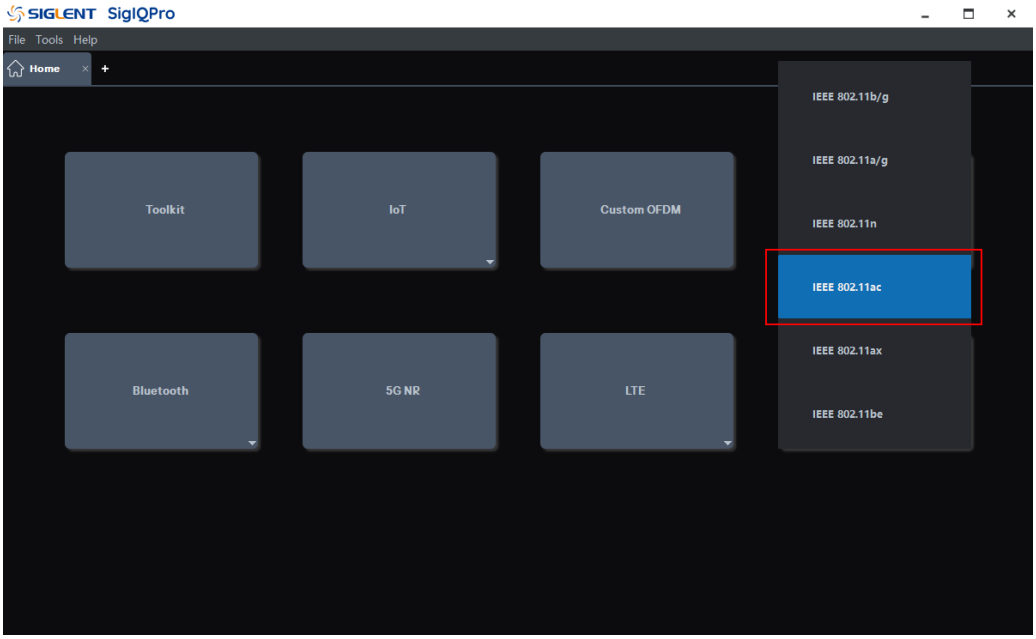



2. Click the **Waveform** node in the tree view on the left side of the window to access the parameter settings:
   1) Set Generation Mode to VHT PPDU Format mode.
   2) Set BandWidth to 160M.

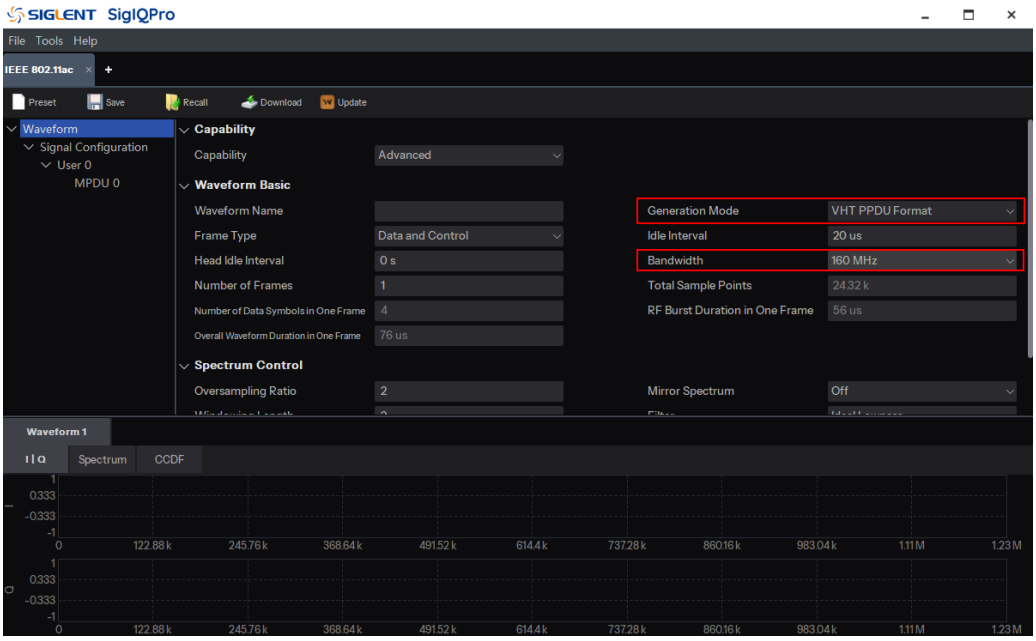


## 2.16.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

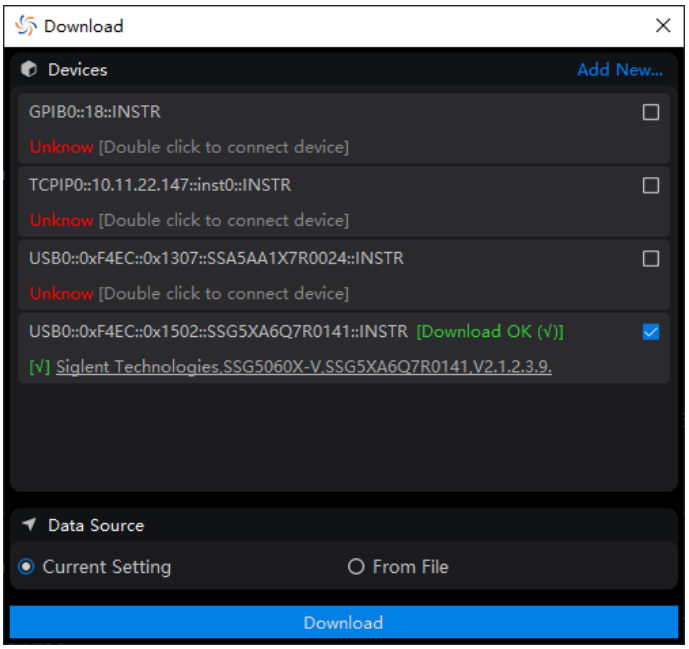


## 2.16.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-


V IQ MOD -> ARB:

You can see that ARB mode is playing LE_test.

2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

## 2.16.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

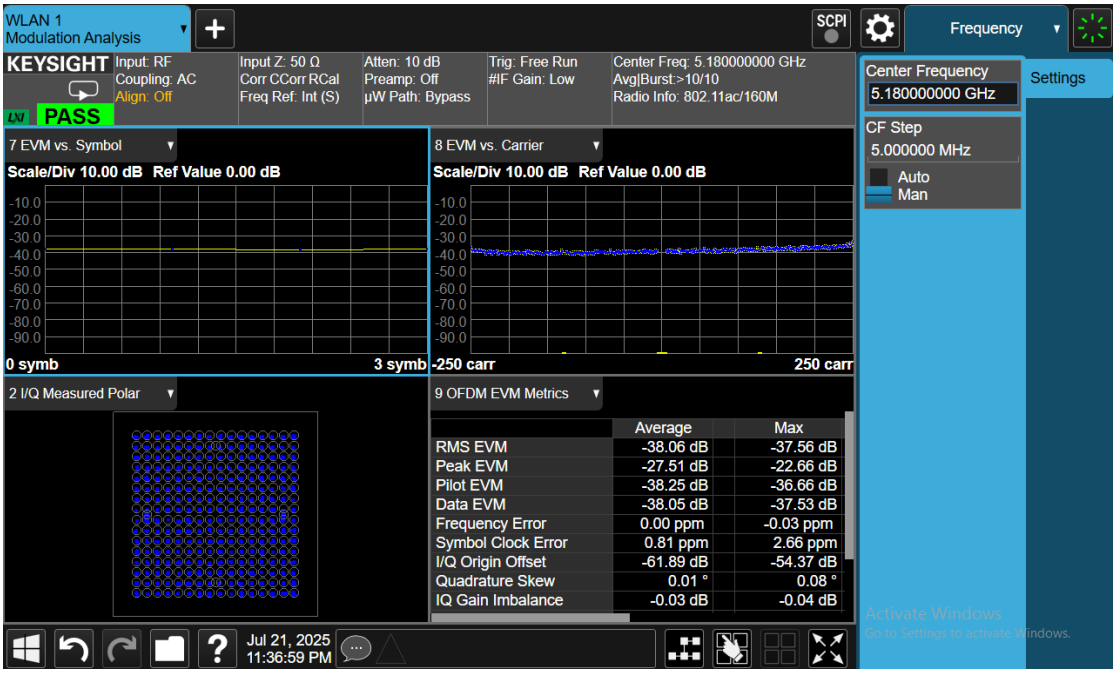


## 2.17 Creating and Playing WLAN_802_11ax Waveform Files


The following example demonstrates how to create and play a WLAN_802_11ax-HE SU PPDU-160M waveform. First, configure the waveform parameters on SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.17.1 Configuring Waveform Parameters

1. On the homepage, click **WLAN** -> **WLAN_802_11ax** to enter the WLAN_802_11ax settings interface.

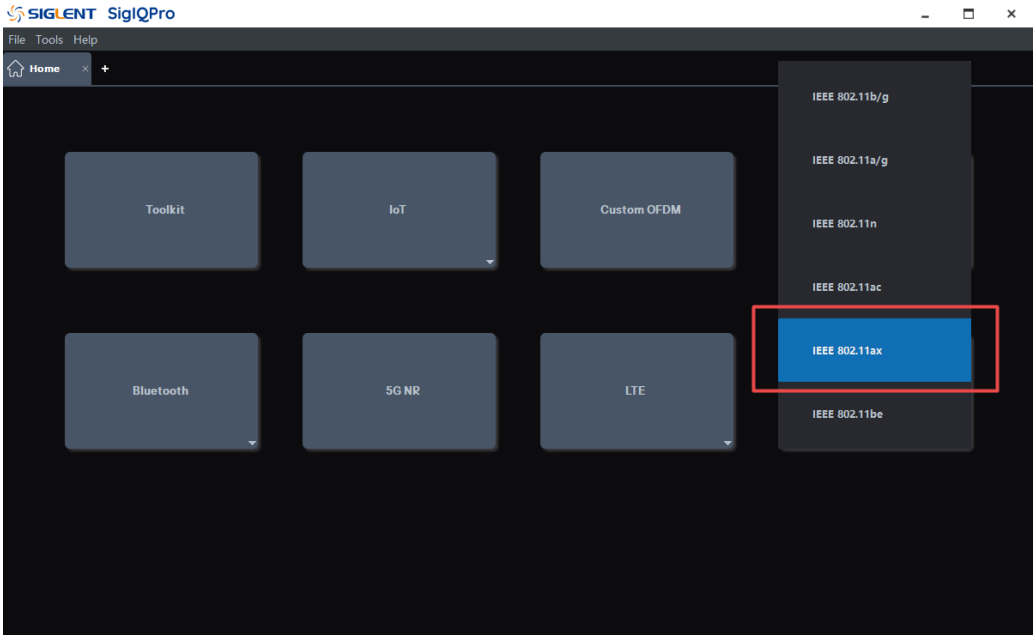



2. Click the **Waveform** node in the tree view on the left side of the window to access the parameter settings:
   1) Set Generation Mode to HE SU PPDU mode.
   2) Set BandWidth to 160M.

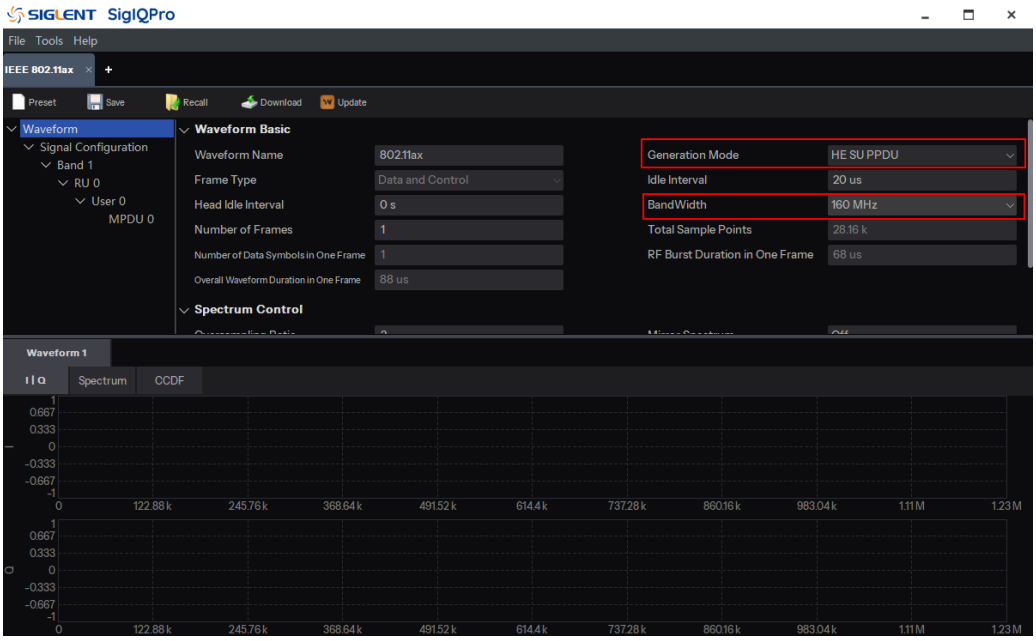


## 2.17.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

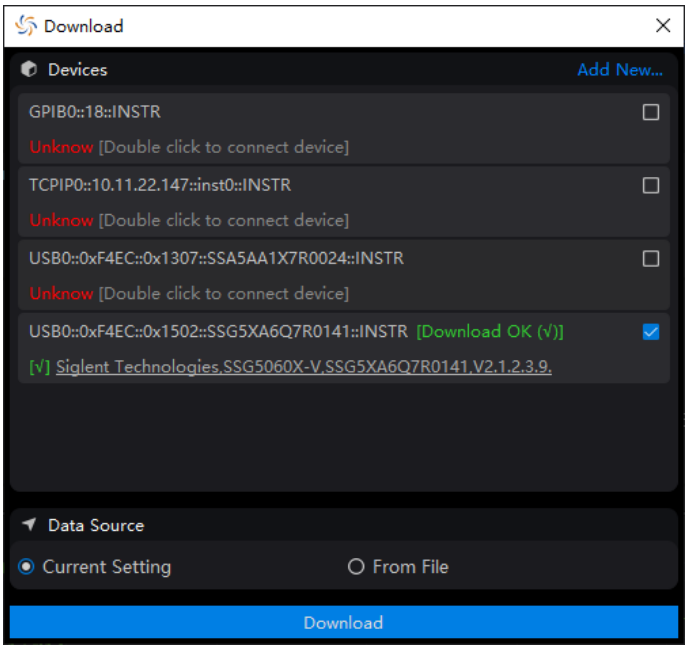


## 2.17.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-

V IQ MOD -> ARB:

You can see that ARB mode is playing LE_test.

2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.17.4 Demodulation Result

View the demodulation results in the spectrum analyzer:




## 2.18 Creating and Playing WLAN_802_11be Waveform Files


The following example demonstrates how to create and play a WLAN_802_11be-EHT MU PPDU-320M waveform. First, configure the waveform parameters on SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.18.1 Configuring Waveform Parameters

1. On the homepage, click **WLAN** → **WLAN_802_11be** to enter the WLAN_802_11be settings interface.

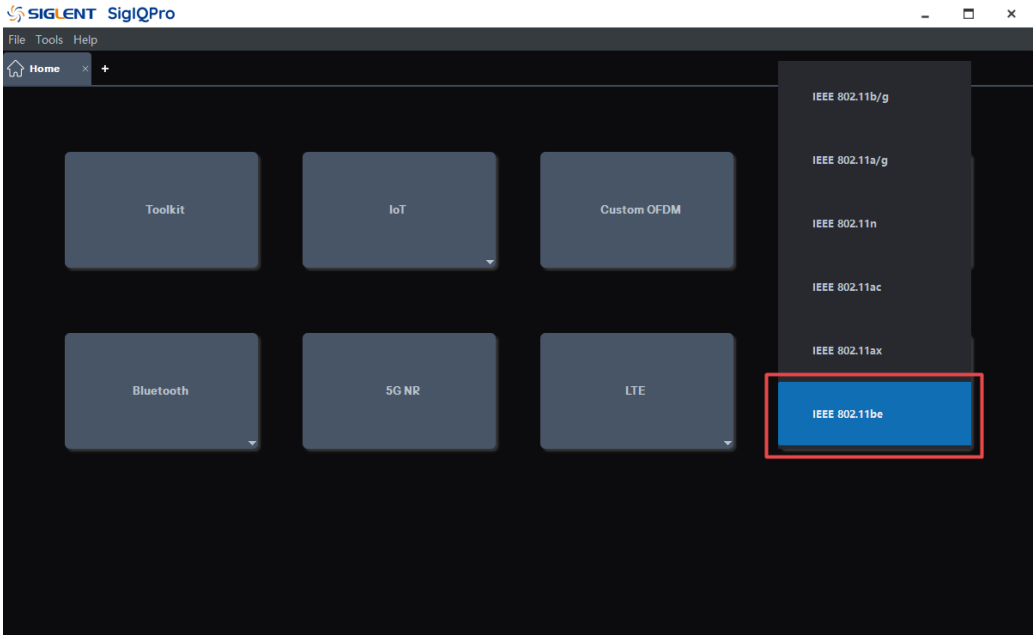



2. Click the **Waveform** node in the tree view on the left side of the window to access the parameter settings:
   1) Set Generation Mode to EHT MU PPDU mode.
   2) Set BandWidth to 320M.

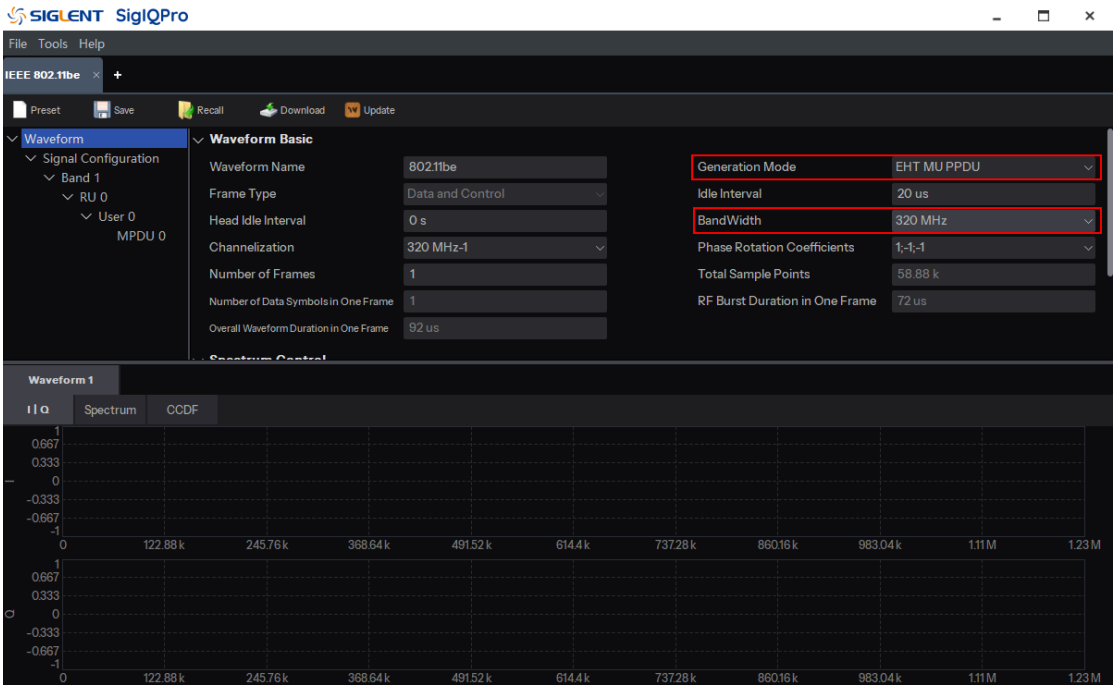


## 2.18.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

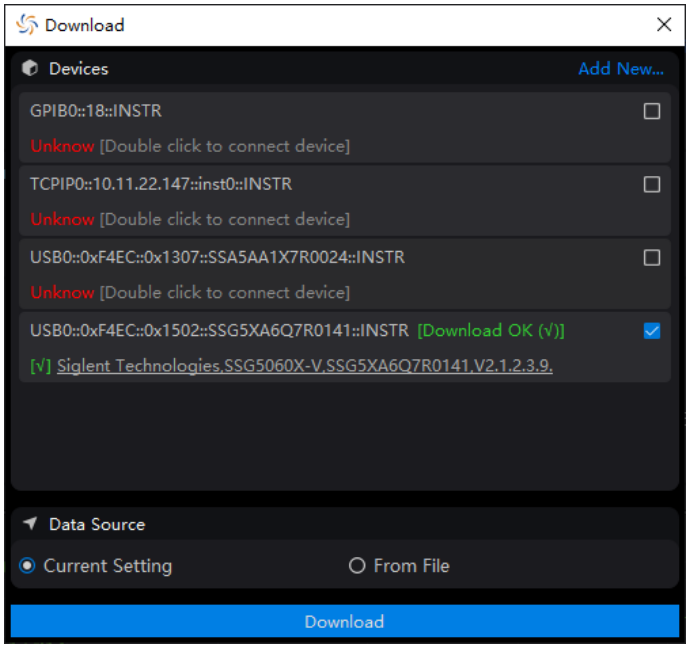


### 2.18.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.
2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.18.4 Demodulation Result


View the demodulation results in the spectrum analyzer:

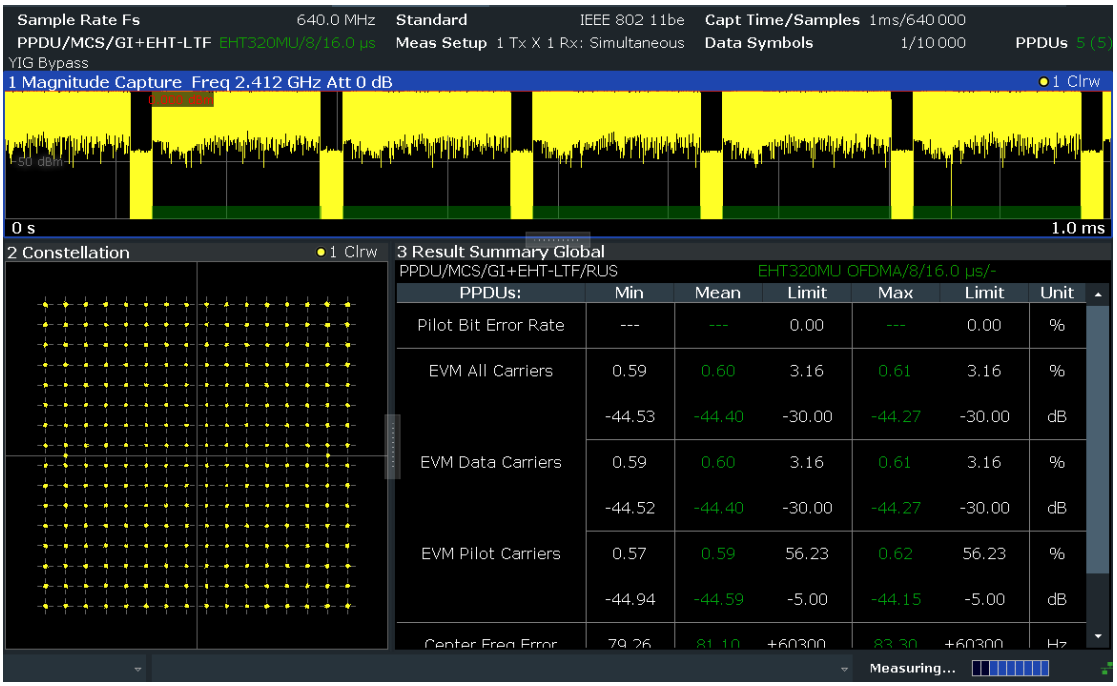


## 2.19 Creating and Playing GSM Waveform Files

The following example demonstrates how to create and play a GSM waveform. First, configure the waveform parameters on SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

1. On the homepage, click **GSM** to enter the GSM settings interface.

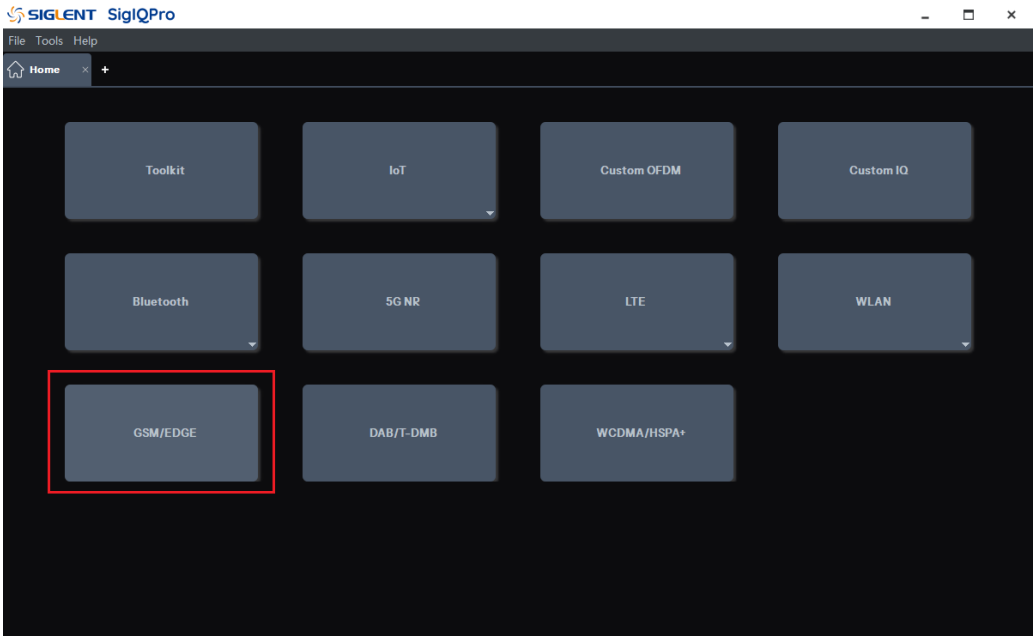



2. Click the **Carrier 1** node in the tree view on the left side of the window to access the parameter settings:
   1) Set Carrier Type to Advanced GSM/EDGE/EGPRS2-A.
   2) Set Multiframe to 52 multiframe

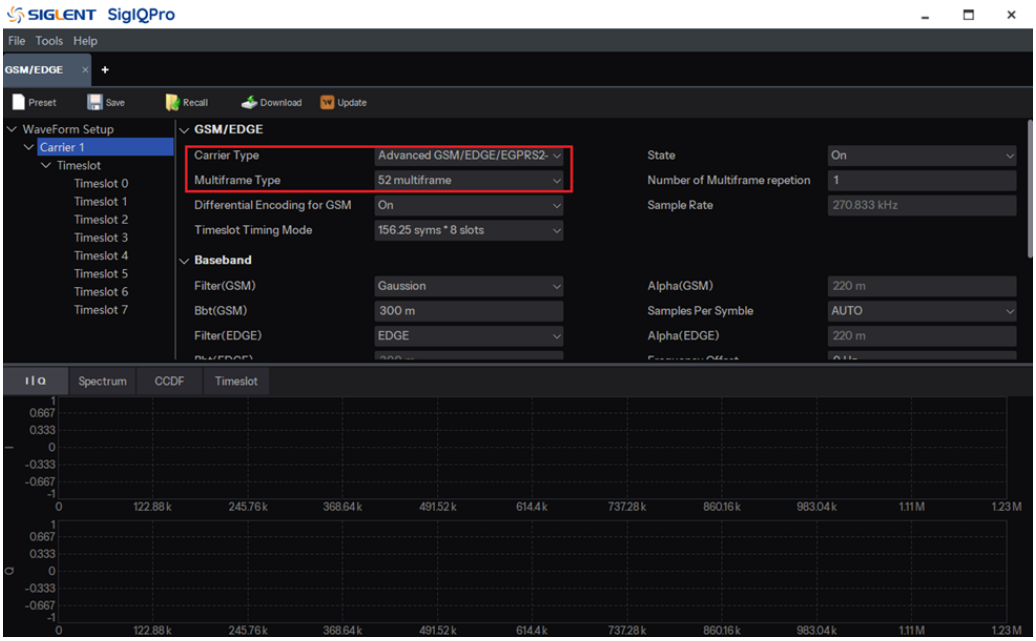


## 2.19.1 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

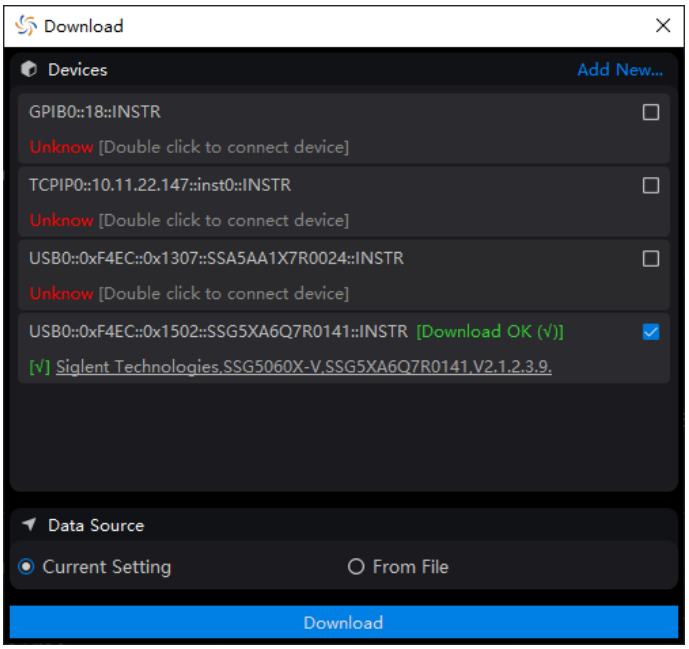


## 2.19.2 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-


V IQ MOD -> ARB:

You can see that ARB mode is playing LE_test.

2. Set the RF carrier to 935.2 MHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.

### 2.19.3 Demodulation Result

View the demodulation results in the spectrum analyzer:

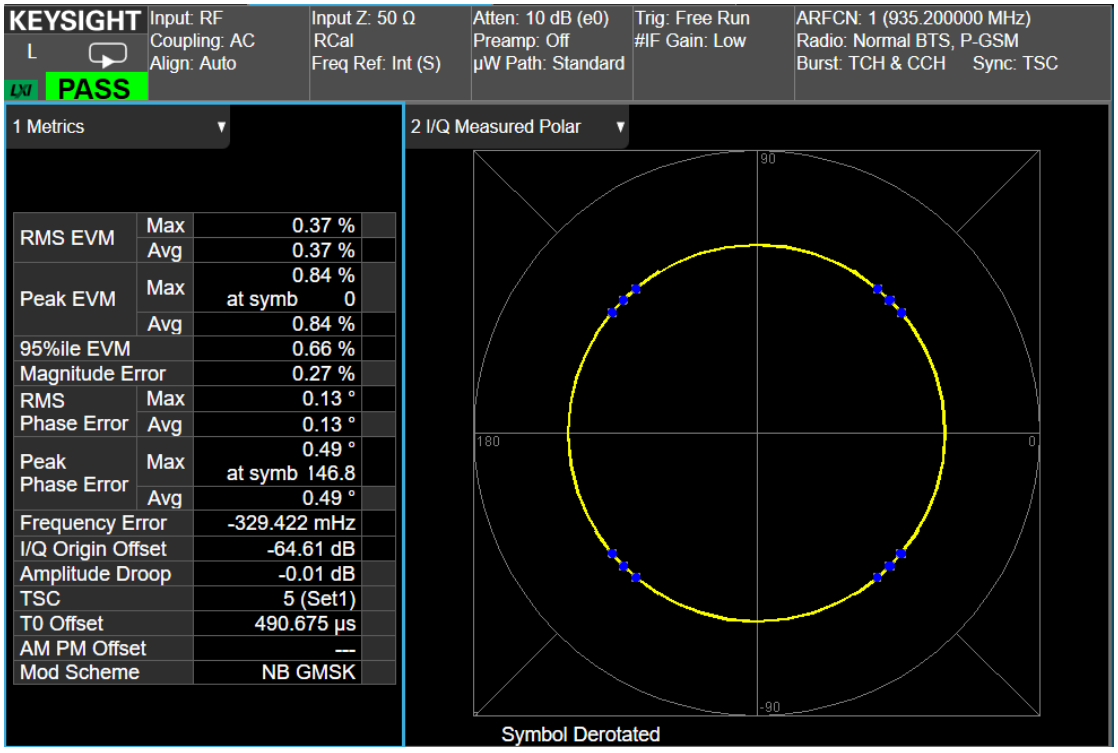


## 2.20 Creating and Playing WCDMA Waveform Files


The following example demonstrates how to create and play WCDMA/HSPA+ waveform. First, configure the waveform parameters in SigIQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.

### 2.20.1 Configuring Waveform Parameters

1. On the home page, click **WCDMA/HSPA+** to enter the WCDMA configuration page.

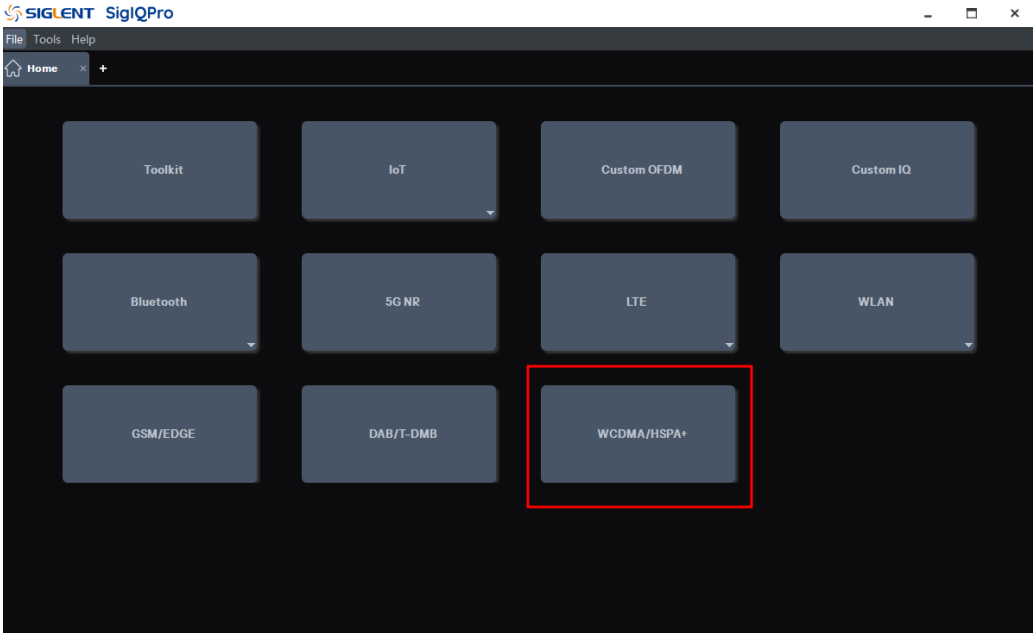



2. Click the **Channel Setup** node in the left-side tree view to access parameter settings.
   1) Set the Configuration to P-CCPCH+SCH+1DPCH

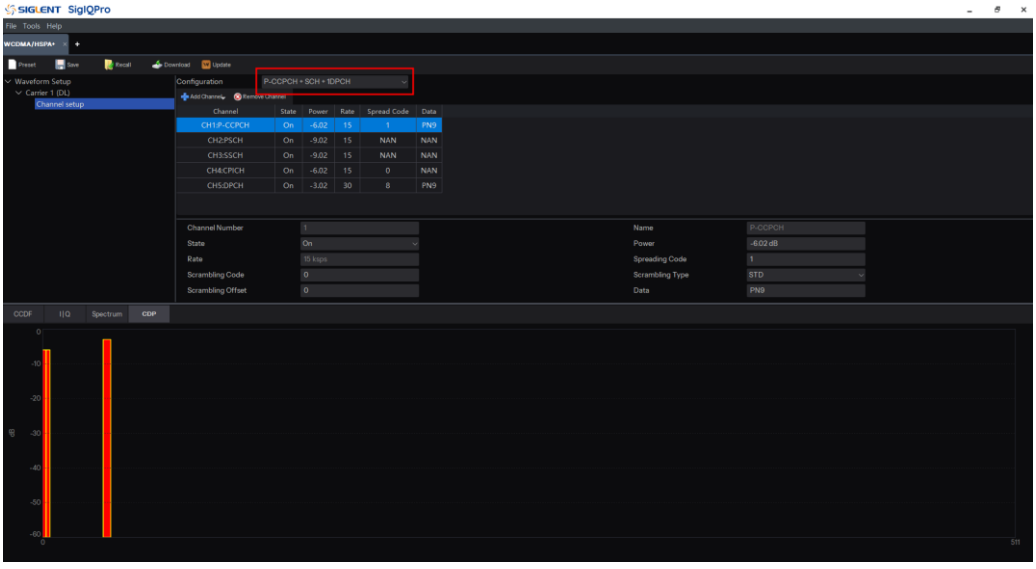

### 2.20.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.
   1) After clicking the Download button, select the instrument to play the waveform in the pop-up Download sub-window.
   2) When the instrument is not connected, please double-click the resource name of the instrument to connect to the instrument as prompted.
   3) Then click the Download button in the Download sub-window.
   4) After the download is successful, a "Download OK" prompt will appear after the name of the downloaded instrument.

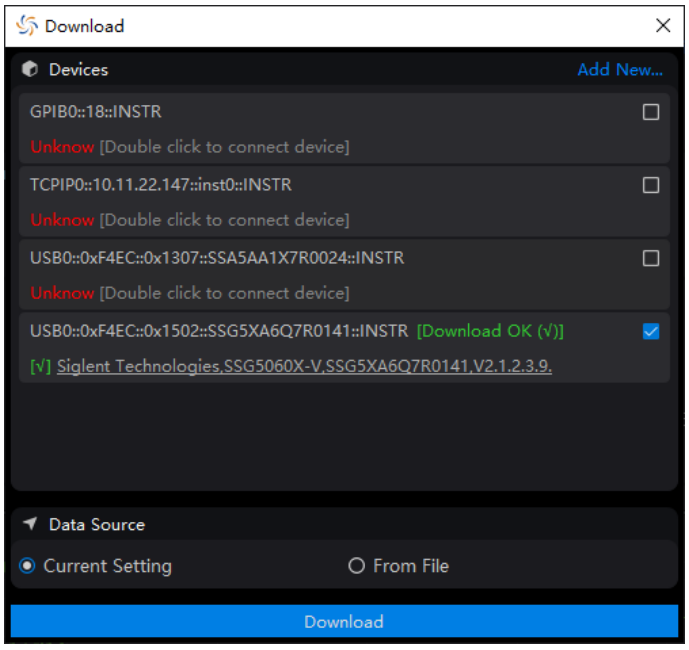


### 2.20.3 Play the Waveform in Signal Source


1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.
2. Set the RF carrier to 1 GHz, -20 dBm.
3. Turn on modulation and RF output.
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main

switch.

## 2.20.4 Demodulation Result

View the demodulation results in the spectrum analyzer:

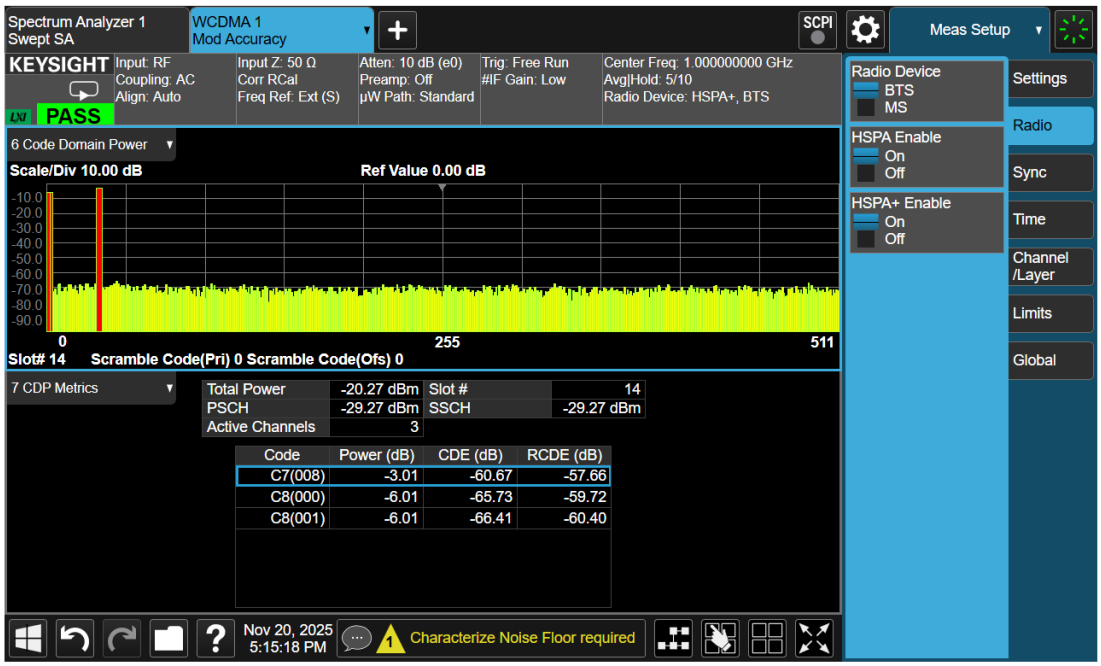


## 2.21 Creating and Playing DAB/T-DMB Waveform Files

Below is an example of how to create and play waveforms for a single DAB service component. First, configure the waveform parameters on the SiglQPro, then download the waveform to the SSG5000X-V, and finally play the waveform on the SSG5000X-V.


### 2.21.1 Configuring Waveform Parameters

1. On the homepage, click DAB/T-DMB -> DAB to enter the settings interface.

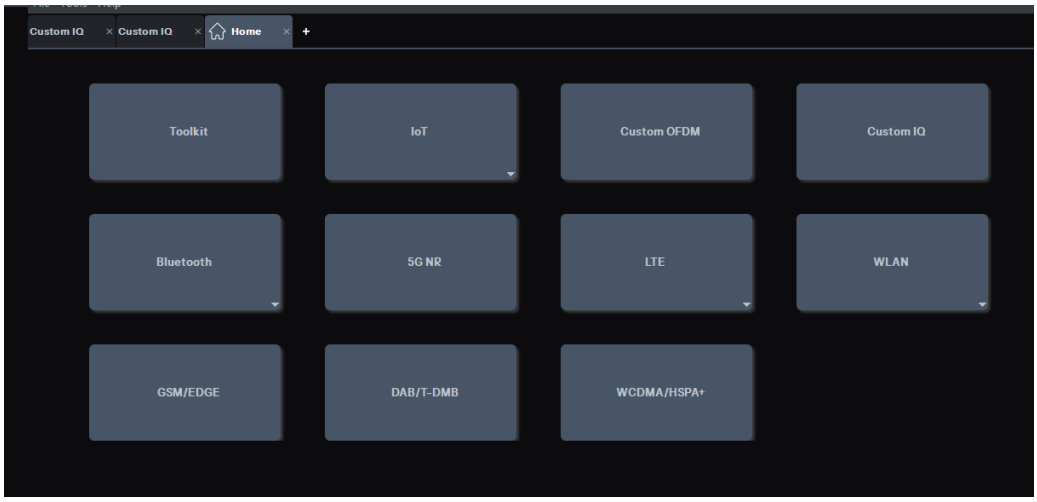



2. Click the Waveform node in the tree view on the left side of the window to enter the parameter settings:

   1) Set the format to DAB mode

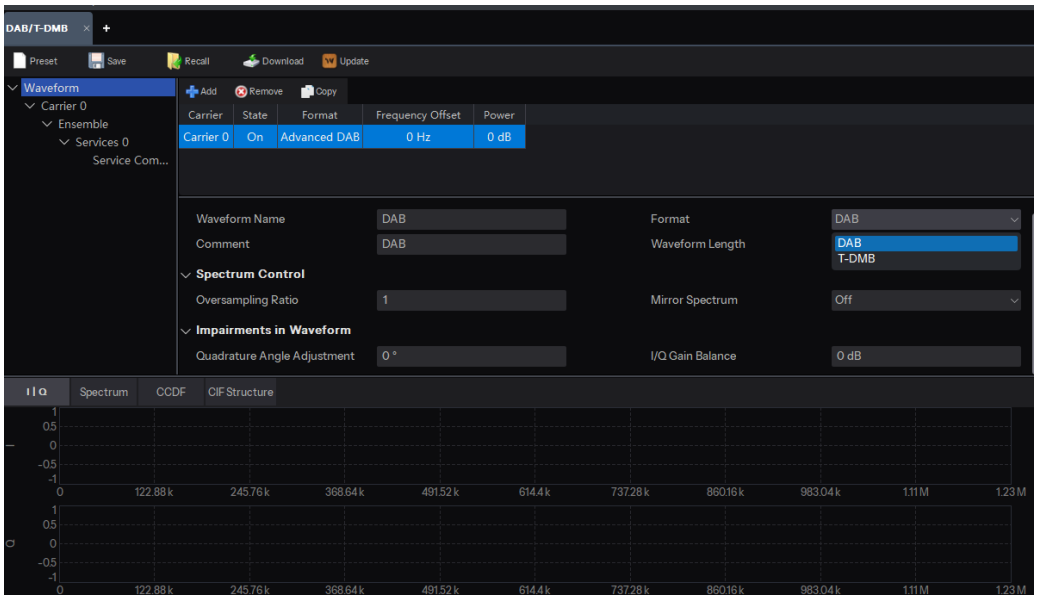

### 2.21.2 Download the Waveform to Signal Source

1. Click the Update button on the toolbar to update the I/Q waveform and spectrum display at the bottom of the software UI.
2. Click the Download button on the toolbar to download the waveform to SSG5000X-V.

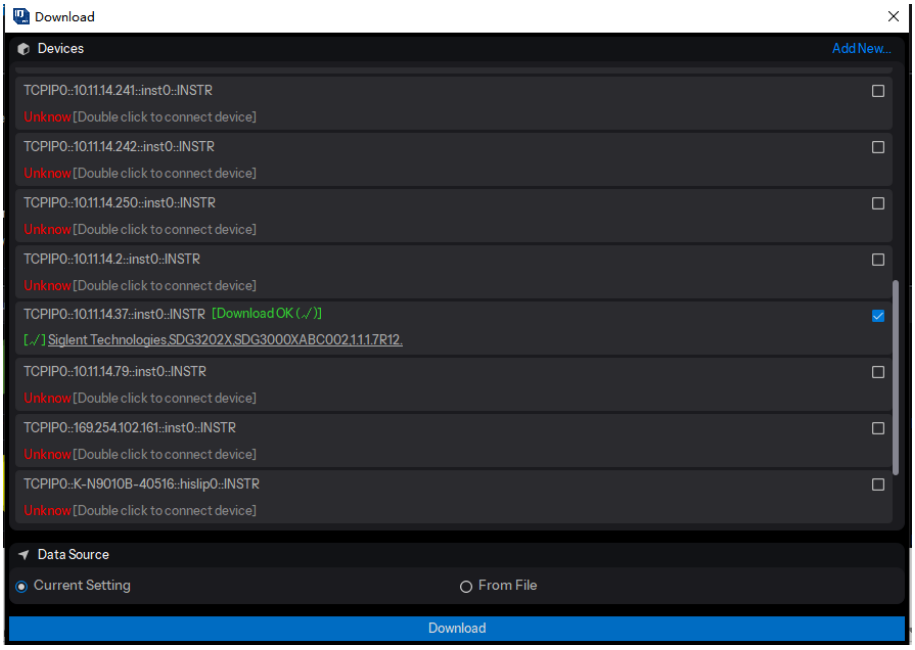


### 2.21.3 Play the Waveform in Signal Source

1. After successfully downloading the waveform, check whether there is a waveform in SSG5000X-V IQ MOD -> ARB:

   You can see that ARB mode is playing LE_test.
2. Set the RF carrier to 2.412 GHz, -5 dBm.
3. Turn on modulation and RF output:
   1) Press the **RF ON/OFF** front panel button to turn on the RF output.
   2) Press the **MOD ON/OFF** front panel button to turn on the IQ Mod modulation main switch.


### 2.21.4 Demodulation Result

View the demodulation results in the spectrum analyzer: Digital audio broadcast signal, audio signal output from a radio device demodulated by the spectrum analyzer. The spectrum analyzer currently has no parameter specifications.

# 3 User Interface Overview

This topic describes the common features of the SiglQPro user interface.

## 3.1 Home Page

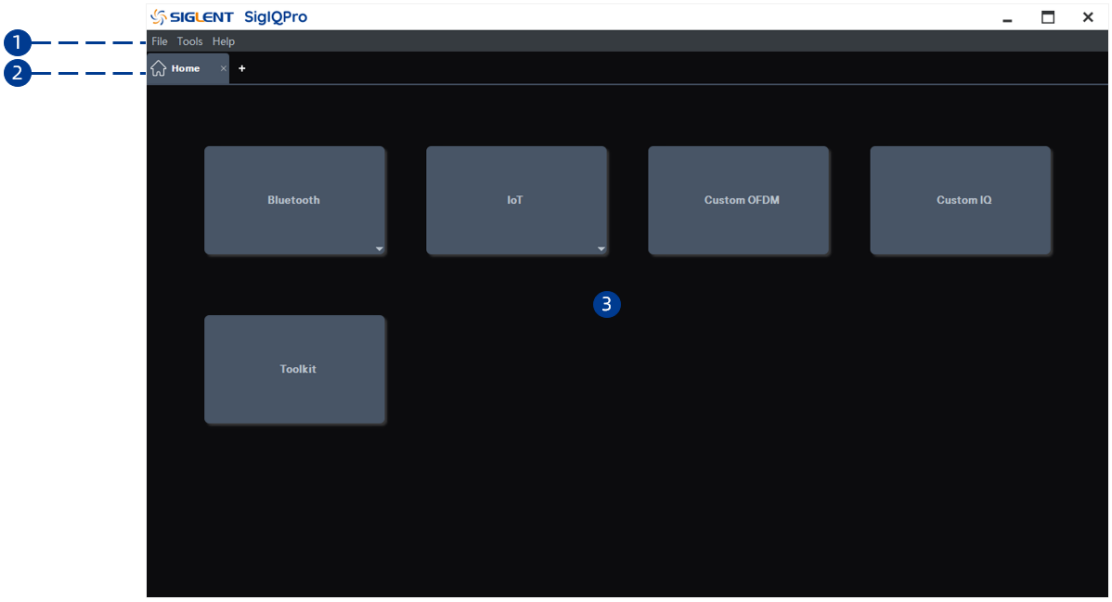


### 3.1.1 Menu Bar

**File**

- Recall: Opens a file management window where you can open a previously saved SiglQPro configuration file (*.project) to recall settings.
- Save As: Opens a file management window where you can save your current SiglQPro configuration as a file (*.project) for future use.
- Exit: Exits the SiglQPro software.

**Tools**

- Toolkit: Launches the Toolkit application.

**Help**

- Content: Shows the help file.
- Website: Opens company website.
- About: Shows software information.


### 3.1.2 Tab Bar

Displays the Home page and currently running applications. Supports the following operations:


- Clicks the tab to switch to the settings page of the application;
- Clicks “×” on the tab to exit the application;
- Clicks “+” to add a home page.

### 3.1.3 Protocol Menu

Select the protocol you want and click to open the protocol settings, such as Custom OFDM.

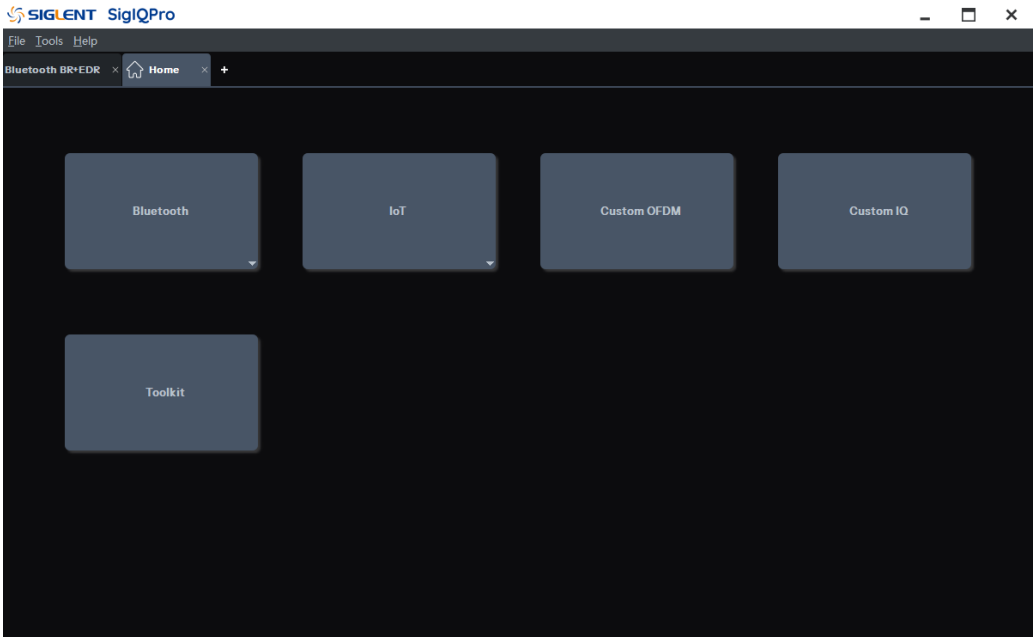

## 3.2 Parameters Setting Page

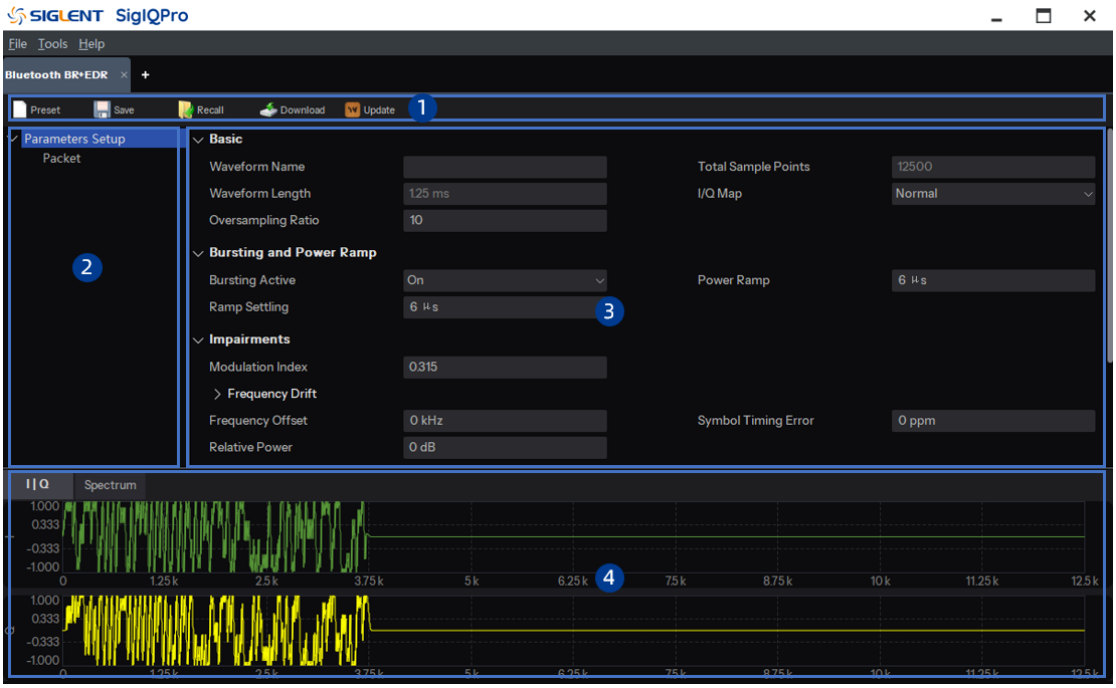


### 3.2.1 Toolbar




: Resets your current application configuration to default settings.




: Opens a file management window where you can save your current application configuration as a file (*.state) or generated waveform file (*.ARB) for future use.



: Opens a file management window where you can recall a previously saved application configuration file (*.state).



: Opens an instrument connection window where you can download a waveform, based on your application's current configuration or previously saved, to the connected instrument.



: Update the graph view based on your application's current configuration.

### 3.2.2 Tree View

The left pane of the main window is called the tree view. It is useful for navigating between the waveform setup nodes and packet setup nodes.

### 3.2.3 Parameter View

The right pane of the main window is called the parameter view. This area enables you to set the waveform parameters. Selecting an item in the tree view enables the related elements in the parameter view.

### 3.2.4 Graph View

The graph view displays different representations of the generated waveform. Click the tab at the top of the graph view to switch to different waveform graphs. Changes to the waveform configuration will not update the graph until you update the waveform.

## 3.3 Export or Import Files

SigIQPro supports importing or exporting three types of files.

### 3.3.1 Project File (*.project)

This file is used to save software configuration, includes the currently launched applications and the current parameter settings of the applications.

Export: Click “File” -> “Save as…” in the menu bar to open a file management window, then click “Save” button to save the project file.

Import: Click “File” -> “Recall…” in the menu bar to open a file management window, then open a previously saved project file (*.project) to recall settings. The software will update the interface display based on the saved configurations in the file.

### 3.3.2 State File (*.state)

This file is used to save the settings for the current application and can only be imported or exported by current application.

Export: Click “Save” icon in the toolbar of the application to open a file management window, then select save type as “App State Files (*.state)” and click “Save’ to save the state file.

Import: Click “Recall” icon in the toolbar of the application to open a file management window, then open a previously saved state file (*.state) to recall settings for current application.

### 3.3.3 Waveform File (*.ARB)

This file is used to save an encrypted waveform file (with ARB extension) to your PC. The file contains waveform information of the current application and can then be downloaded and played in licensed instruments.


Export: Click “Save” icon in the toolbar of the application to open a file management window, then select save type as “Waveform File (*.ARB)” and click “Save” to save the waveform file.

# 4 Waveform Setup

## 4.1 Toolkit

Toolkit is a file conversion tool, which can convert MAT files generated by MATLAB or ASCII files such as TXT files, DAT files or CSV files into files that can be played by SIGLENT instruments. To convert the file format, you need to import the file in "Waveform Import", fill in the information about the exported file in " Waveform Download", and click "Download" in the toolbar to download the target file.

You can click **Toolkit** on the homepage to enter the Toolkit setting interface.

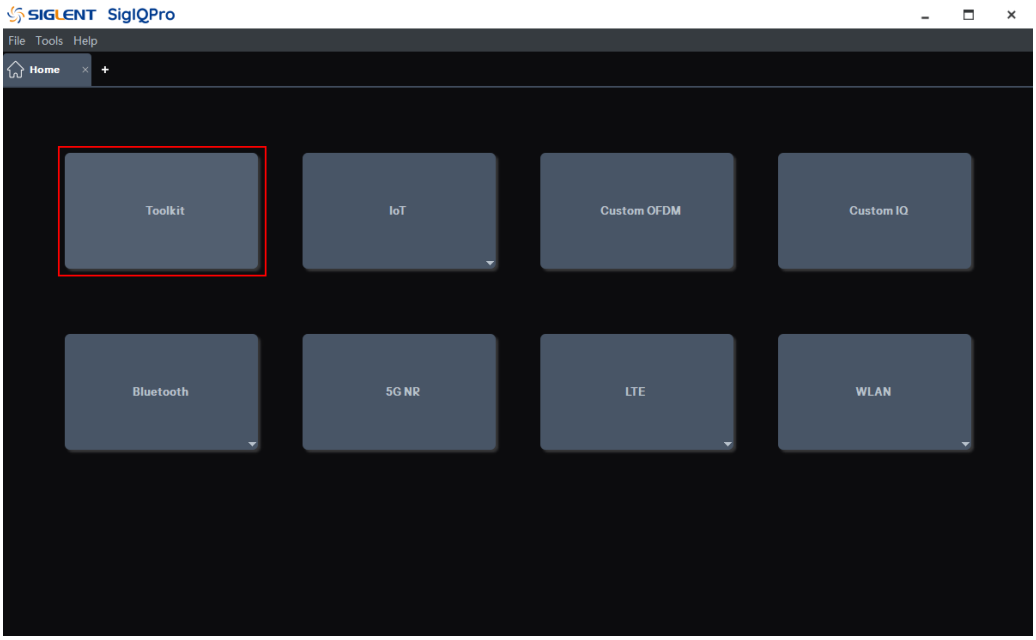


### 4.1.1 Waveform Import

This function enables you to import a waveform file, with a specific file format, from the PC.

#### 4.1.1.1 Source File Type

Use the drop-down menu to select the source file type.

Properties are displayed. Select one of the file types to navigate to that topic to view the associated waveform properties. MAT-File 5 and TXT/CSV/DAT are supported.

1. MAT-File 5

This format is currently used by MATLAB versions 5, 6, 6.5 and 7.

**Mat-File 5 Details and Code Example**

The MAT file can contain an I array of data, a Q array of data. The array variables are named by the person saving the data.

- I and Q are two separate arrays. The arrays must be the same size.

```
iIData = 1:10;                    % 10 I data points
qData = iData;                    % 10 Q data points
save('mydata', 'iData', 'qData');  % default format is .mat
```

- I, Q data can be saved as any numeric type supported by MATLAB:
  double precision floating point values -- 8 bytes per sample;
  single precision floating point values -- 4 bytes per sample;
  int32( ) -- 4 bytes per sample;
  int16( ) -- 2 bytes per sample;
  and so on.

- The application will only recognize numeric types and will discard any variable that is contained in a structure, cell or object.
  For example, if the data is placed in a structure and then stored:
  MyData = struct('I', iData, 'Q', qData);
  save 'myfile' MyData

The application will not be able to discover I, Q under this structure.

**2. ASCII /CSV/DAT**

The ASCII / CSV / DAT file must contain I and Q data, and may also include marker data. The import function searches for markers, so it must know how many markers the file contains.

**ASCII Code Example**

This is an example of ASCII code from a single file.

I1 Q1

I2 Q2

I3 Q3

#### 4.1.1.2 Source File

To select the source file:

Step1. Click the Source File box to open a dialog window.

Step2. Navigate to the desired file.

Waveform IQ data will finally be transformed into format of 4 bytes per sample to play on signal generator. Hence, Int16 format with 32767 scale is recommended for source file.

#### 4.1.1.3 I Data

This parameter takes effect only when Source File Type is set to MAT-File 5.

The drop-down list enables you to select an I data array from the imported waveform file.

#### 4.1.1.4 Q data

This parameter takes effect only when Source File Type is set to MAT-File 5.

The drop-down list enables you to select a Q data array from the imported waveform file.

#### 4.1.1.5 Use Separate Q File

This parameter takes effect only when Source File Type is set to TXT/CSV/DAT.

Use the drop-down menu to enable or disable the ability to use a separate file for Q data.

If “Yes” is selected, then only I data from the Source file is read.

#### 4.1.1.6 Q Source File

This parameter takes effect only when Source File Type is set to TXT/CSV/DAT.

To select the source file:

Step1. Click the Q Source File box to open a dialog window.

Step2. Navigate to the desired file.

#### 4.1.1.7 Data Type

This parameter takes effect only when Source File Type is set to TXT/CSV/DAT.

Choices: Decimal | Hexadecimal;

Default: Decimal.

Use the drop-down menu to select data type.

#### 4.1.1.8 Big / Little Endian

This parameter takes effect only when Source File Type is set to TXT/CSV/DAT and when the Data Type is set to hexadecimal.

Choices: Big Endian | Little Endian;

Default: Big Endian.

Use the drop-down menu to select big or little endian for HEX data.

Note: When Little Endian is selected, only 2-byte hexadecimal numbers can be parsed.

#### 4.1.1.9 Signed / Unsigned Number

This parameter takes effect only when Source File Type is set to TXT/CSV/DAT and when the Data Type is set to hexadecimal.

Choices: Signed | Unsigned;

Default: Signed.

Use the drop-down menu to select signed or unsigned type for HEX data.

#### 4.1.1.10 Swap IQ

This parameter takes effect only when Source File Type is set to TXT/CSV/DAT.

Choices: Yes | No;

Default: No.

Use the drop-down menu to set the swap IQ flag. If it is set to “Yes”, IQ data will be swapped for waveform generation.

#### 4.1.1.11 Number of Points

Displays the number of points defined by the data files in the selected waveform. Read-only.

#### 4.1.1.12 Sample Rate

Range: 100.0 Hz to 200.0 MHz;

Default: 100.00 MHz.

Enter the waveform sample rate. Instrument Sample Clock is coupled with waveform Sample Rate and Oversampling Ratio.

Sample Clock = Sample Rate * Oversampling Ratio.

### 4.1.2 Waveform Download

#### 4.1.2.1 Waveform Name

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

#### 4.1.2.2 Mirror Spectrum

Use the drop-down menu to control the Mirror Spectrum state. This feature inverts the Q channel, resulting in a mirrored spectrum. In some systems, as a signal propagates normally through the up-conversion process, the signal spectrum may be inverted. Use this feature to convert the signal back to a non-mirrored spectrum.

#### 4.1.2.3 Oversampling Ratio

Range: 1 - 10 ; Default: 1.

When Oversampling Ratio is set to value other than 1, waveform is re-sampled. A larger Oversampling Ratio results in using more waveform memory. So, set it to 1 if re-sampling is not required.

Instrument Sample Clock is coupled with waveform Sample Rate and Oversampling Ratio.


Sample Clock = Sample Rate * Oversampling Ratio.

## 4.2 IEEE 802.15.4 O-QPSK BPSK

O-QPSK PHY and BPSK PHY are physical layer specifications defined in IEEE standard 802.15.4 for low data rate wireless connections.

Protocol version: IEEE Std 802.15.4 -2020

You can click **IoT** -> **802.15.4 O-QPSK BPSK** on the homepage to enter the ZigBee setting interface.

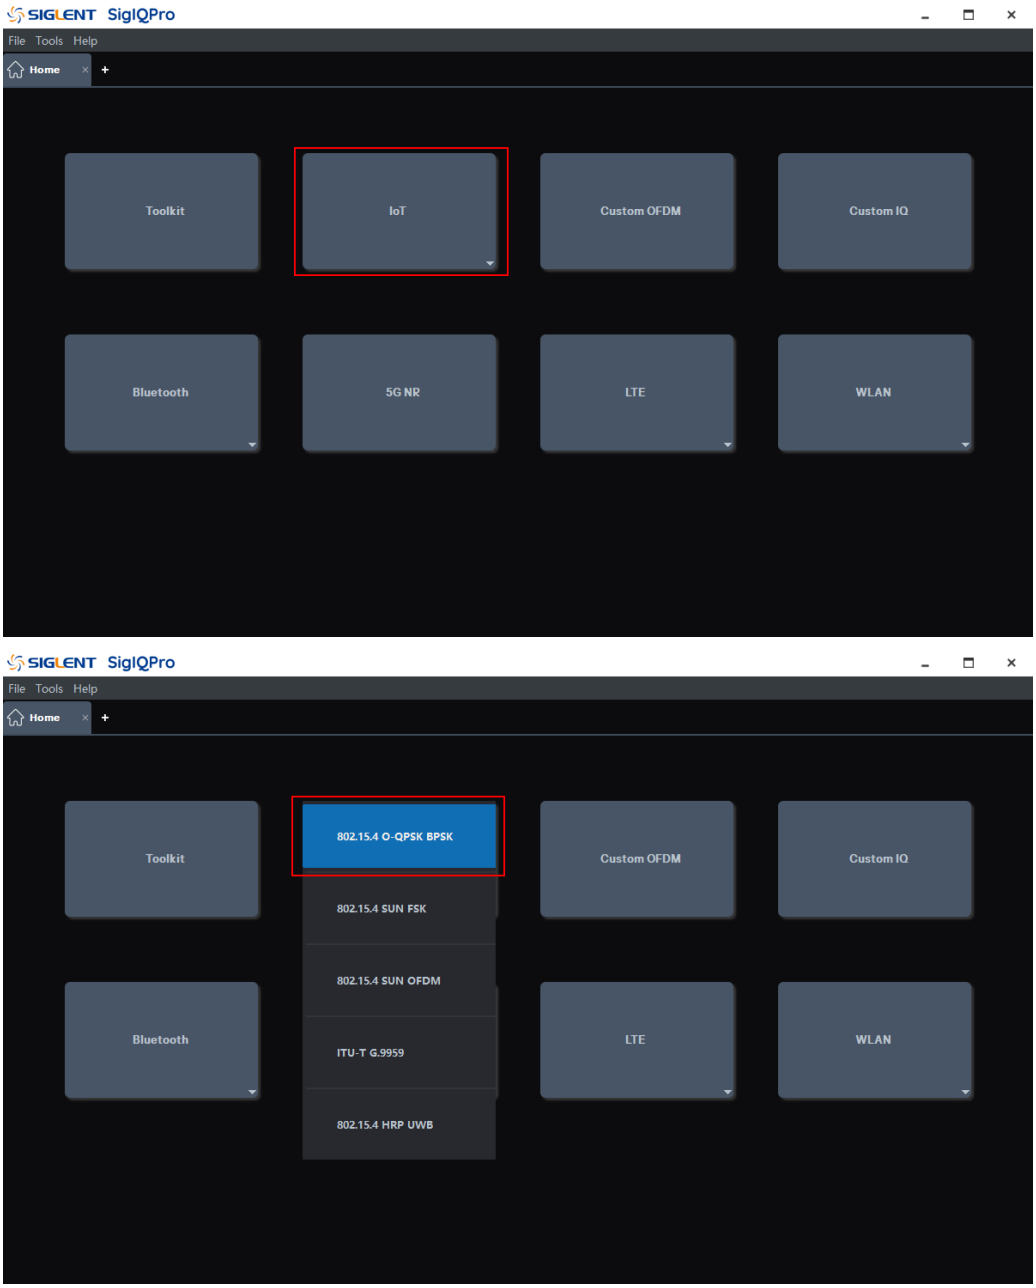

### 4.2.1 Waveform Setup

Press **Waveform Setup** in the left window to enter parameter settings.

#### 4.2.1.1 Basic

**1. Waveform Name**

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Number of Frames**

Range: 1 to 2000 ; Default: 1.

Set the number of frames included in the generated waveform.

**3. OverSampling Ratio**

Range: 2 to 100 ; Default: 10.

Set the number of samples calculated per I/Q symbol.

**4. Total Sample Points**

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

**5. Waveform Length**

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

#### 4.2.1.2 Marker

**1. Marker 1 Source**

Choice: Waveform Start | Frame Start ; Default: Waveform Start.

Use the drop-down menu to select the type of Mark 1 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

**2. Marker 2 Source**

Choice: Waveform Start | Frame Start ;

Default: Frame Start.

Use the drop-down menu to select the type of Mark 2 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

## 4.2.2 Packet

Press **Packet** in the left window to enter parameter settings.

### 4.2.2.1 General Setting

**1. PHY Scheme**

Choices: O-QPSK | BPSK ;

Default: O-QPSK.

Use the drop-down menu to select the 802.15.4 PHY scheme.

**2. Idle Interval (us)**

Range: 0 – 200000 ; Default: 100.

Set the idle interval in-between frames in microseconds. When idle interval is set to zero, a continuous waveform will be generated.

**3. Data Rate**

Displays the data rate for current 802.15.4 PHY scheme.

### 4. Frequency Band

Choices: 780 MHz | 868 MHz | 915 MHz | 2450 MHz ;

Default: 2450 MHz .

Use the drop-down menu to select the frequency band of 802.15.4 PHY scheme.

Note 1: If PHY Scheme is set to BPSK, 780 MHz and 2450 MHz cannot be selected.

Note 2: The selected frequency band does not actually change the center frequency of the signal source.

#### 4.2.2.2 Packet Setting




#### 1. Preamble (Hex)

Displays the Preamble field of PPDU in hexadecimal format.

Note: This parameter is displayed only and cannot be edited.

#### 2. SFD (Hex)

Displays the SFD (Start of Frame Delimiter) field of PPDU in hexadecimal format.

Note: This parameter is displayed only and cannot be edited.

#### 3. PHR (Hex)

Displays the PHR (Payload Header) field of PPDU in hexadecimal format. The value is automatically updated when the PSDU settings are changed.


Note: This parameter is displayed only and cannot be edited.

#### 4. PSDU

These are the Settings for the Physical Service Data Unit (PSDU) portion of the frame that contains the payload data.

##### 1) MHR (MAC Header)

Use the drop-down menu to enable or disable the MAC Header filed.

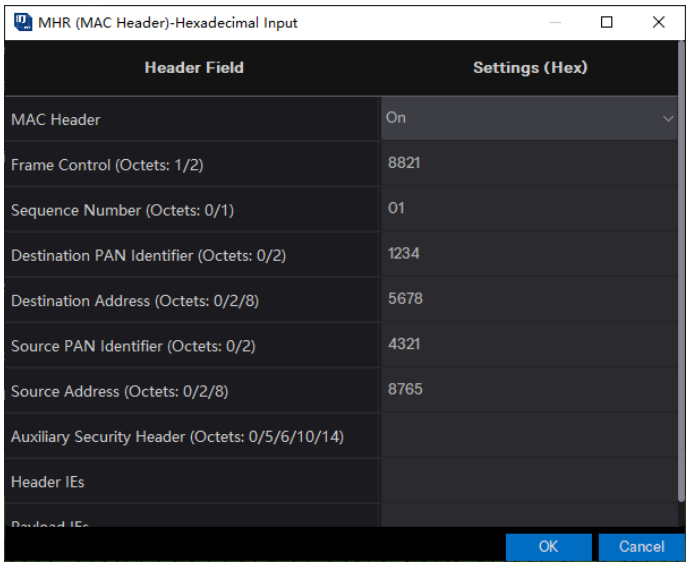



For more information on the MAC header, refer to the IEEE standards 802.15.4.

### 2) Data Type

Choices: PN9 | PN15 | USER ; Default: PN9.

Use the drop-down menu to set the type of packet payload.

- PN9: A pseudo-random binary sequence of order 9 is used to fill the packet payload
- PN15: A pseudo-random binary sequence of order 15 is used to fill the packet payload
- USER: A user-defined binary sequence is used to fill the packet payload

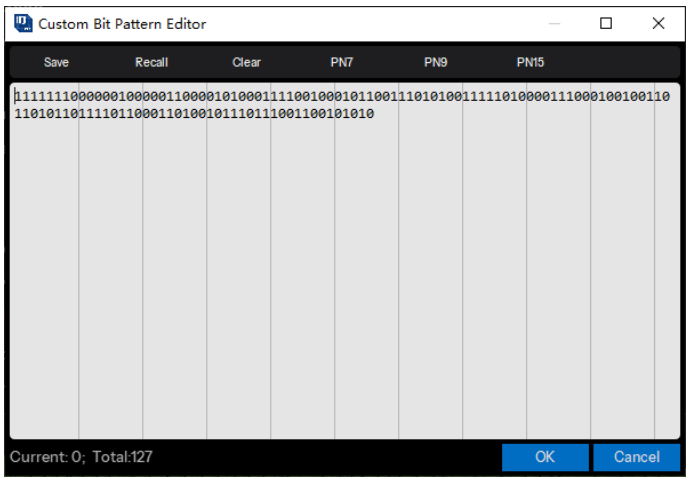


### 3) Seed

Set the seed value used to generate the pseudo-random binary sequence.

When Data Type PN9 is selected: Range: 0x0 – 0x1FF ; Default: 0x1FF.

When Data Type PN15 is selected: Range: 0x0 – 0x7FFF ; Default: 0x7FFF.

Note: This parameter can be edited only when the Data Type is PN9 or PN15.

#### 4) Data Length (Octets)

Range: 0 – 127 ; Default: 20.

Set the length of packet payload in octets.

#### 5) Data Mode

Choices: Continuous | Truncated ;

Default: Continuous.

For multi-frame signals, select the mode applied to the packet payload. If there is only one frame in the signal, then there is no difference in selection.

- Continuous: packet payload data bits are distributed consecutively across multiple frames
- Truncated: packet payload data bits are the same for all frames, with the data size truncated for one frame

#### 6) MAC FCS

Choices: On | Off ; Default: On.

Use the drop-down menu to enable or disable the MAC FCS (frame check sequence). For more information on the MAC FCS, refer to the IEEE standards 802.15.4.

### 4.2.2.3 Impairments

#### 1. Symbol Timing Error

Range: -300 to 300ppm ;

Default: 0ppm.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the signal. It is used to simulate transmission when the device's sampling clock is slightly off.

#### 2. Frequency Offset

Range: -200 to 200kHz ;

Default: 0kHz.

Set the static offset of the carrier frequency. This static offset is used to simulate the device transmitting at a frequency slightly offset from the specified carrier.


## 4.3 IEEE 802.15.4 SUN FSK


SUNs PHY defined in IEEE standard 802.15.4. The smart utility network is a principally outdoor, low data rate wireless network that supports two-way communications among sensing, measurement, and control devices in the smart grid.

SUNs enable multiple applications to operate over shared network resources, providing monitoring and control of a utility system. SUN devices are designed to operate in very large-scale, low-power wireless applications and often require using the maximum transmit power available under applicable regulations, in order to provide long-range, point-to-point connections. Frequently, SUNs are required to cover geographically widespread areas containing a large number of outdoor devices. In these cases, SUN devices typically employ mesh or peer-to-peer multihop techniques to communicate with an access point.

SUN FSK is one of the physical layers defined in the standard.
Protocol version: IEEE Std 802.15.4 -2020

You can click **IoT** -> **802.15.4 SUN FSK** on the homepage to enter the 802.15.4 SUN FSK setting interface.

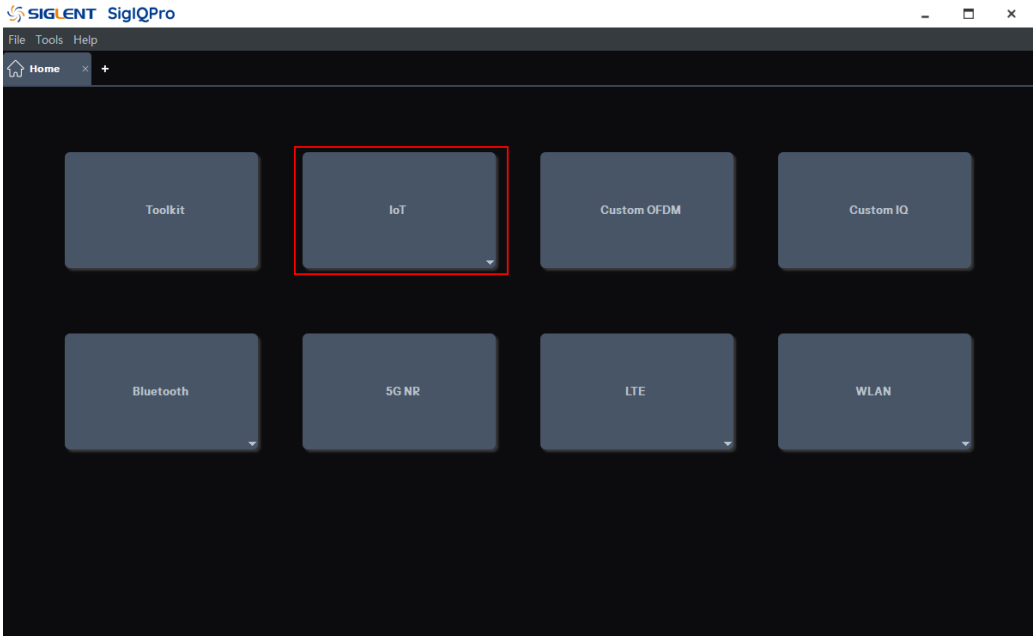

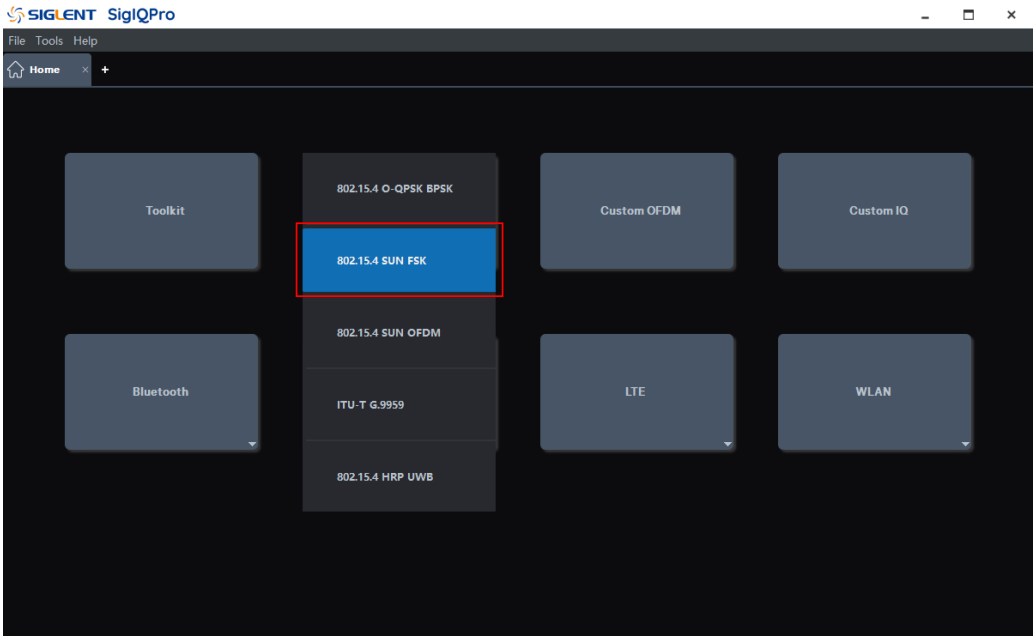


### 4.3.1 Waveform Setup

Press **Waveform Setup** in the left window to enter parameter settings.

#### 4.3.1.1 Basic

**1. Waveform Name**

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Number of Frames**

Range: 1 to 2000 ; Default: 1.

Set the number of frames included in the generated waveform.

**3. Oversampling Ratio**

Range: 2 to 100 ; Default: 10.

Set the number of samples calculated per I/Q symbol.

**4. Total Sample Points**

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

**5. Waveform Length**

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

#### 4.3.1.2 Marker

**1. Marker 1 Source**

Choice: Waveform Start| Frame Start ;

Default: Waveform Start.

Use the drop-down menu to select the type of Mark 1 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start ; Set the first point of the waveform to an active marker point.
- Frame Start ; Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

**2. Marker 2 Source**

Choice: Waveform Start| Frame Start ;

Default: Frame Start.

Use the drop-down menu to select the type of Mark 2 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

### 4.3.2 Packet

Press **Packet** in the left window to enter parameter settings.

#### 4.3.2.1 General Setting

**1. Data Rate**

Range: 2.4 kb/s – 400 kb/s ; Default: 100 kb/s.

Set the data rate of FSK modulation in kb/s.

For more information on Data Rates, please refer to "Modulation and Coding for SUN FSK" in Section 19.3 of the IEEE Std 802.15.4-2020.

**2. Modulation**

Choice: 2FSK | 4FSK ; Default: 2FSK.

Use the drop-down menu to select the FSK modulation level.

For more information on the Modulation, please refer to " Modulation and Coding for SUN FSK " in Section 19.3 of the IEEE Std 802.15.4-2020.

**3. Modulation Index**

Range: 0.33 – 2 ; Default: 1.

Set the modulation index for FSK.

For more information on the Modulation Index, please refer to " Modulation and Coding for SUN FSK " in Section 19.3 of the IEEE Std 802.15.4-2020.

**4. Idle Interval**

Range: 0 – 200000 us ; Default: 1000 us.

Set the idle interval time in-between frames in microseconds. When idle interval is set to zero, a continuous waveform will be generated.

**5. Ramp Symbols**

Range: 1 – 10 ; Default: 4.

Set the symbol duration for waveform ramp up and down.

Note: This parameter is visible and configurable only when the idle interval is not zero.

**6. Ramp Up/Down Symbol**

Choice: First/Last | Center | One | Zero ;

Default: First/Last.

Use the drop-down menu to select the symbol for the period of waveform ramp up and down.

- First/Last: Use the first data symbol value as the ramp up symbol value and the last data symbol value as the ramp down symbol value.
- Center: Set the ramp up/down symbol when frequency deviation is zero.
- One: Set the ramp up/down symbol when frequency deviation is negative.
- Zero: Set the ramp up/down symbol when frequency deviation is positive.

Note: This parameter is visible and configurable only when the idle interval is not zero.

#### 4.3.2.2 SHR (Synchronization Header)

**1. Preamble Sequence**

Default: 0101 0101.

Set the preamble sequence used by the Synchronization Header. The sequence length should be a multiple of 8 for 2FSK and a multiple of 16 for 4FSK.

Note: The final preamble field will contain several multiples of the preamble sequence.

**2. Preamble Length**

Range: 32 – 8000 for 2FSK , 64 – 16000 for 4FSK ;

Default: 32.

Set the preamble length in bits in Synchronization Header.

The Preamble Length should be the integer multiple of the length of preamble sequence.

For more information on the preamble, please refer to "PPDU format for SUN FSK" in Section 19.2 of the IEEE Std 802.15.4-2020.

**3. SFD Index**

Choices: 0 | 1 ; Default: 0.

Set the index of SFD (Start of Frame Delimiter) sequence in Synchronization Header. It corresponds to the PIB attribute *phySunFskSfd* defined in IEEE Std 802.15.4-2020. See section 19.2.3.2 for details.

**4. SFD Customized**

Choices: On | Off ; Default: Off.

Use the drop-down menu to enable or disable customized SFD.

If SFD Customized is off, the standard SFD sequence is used, and the SFD Sequence is read-only. For more information on the standard SFD sequence, see Section 19.2.3.2 of the IEEE Std 802.15.4-2020.

If SFD Customized is on, the SFD Sequence can be edited, and the custom SFD sequence is used. The SFD Sequence length should be 16 for 2FSK and 32 for 4FSK, otherwise it will be truncated or padded with zeros.

#### 5. SFD Sequence

Displays the value of the SFD fields in the Synchronization Header. For more information on the SFD sequence, see Section 19.2.3.2 of the IEEE Std 802.15.4-2020.

Note: This parameter can be edited only when SFD Customized is on.

### 4.3.2.3 PHR (PHY Header)

#### 1. Mode Switch

Choices: Off | On ; Default: Off.

Use the drop-down menu to enable or disable the Mode Switch PHR.

- On: A mode switch packet is generated. The Mode Switch field of the packet shall be set to one, indicating that a mode switch shall occur.
- Off: A normal packet is generated. The Mode Switch field of the packet shall be set to zero, indicating that the entire packet shall be transmitted at a single data rate and using a single modulation scheme.

It will be included in Mode Switch field of PHR. For more information on the Mode Switch, see Section 19.2.4 and 19.2.5 of the IEEE Std 802.15.4-2020.

#### 2. FCS Type

Choices: 0 = 4-octets | 1 = 2-octets;

Default: 0 = 4-octets.

Use the drop-down menu to select the FCS type. The FCS Type field of PHR indicates the length of the FCS field contained in the MPDU.

It will be included in FCS Type field of PHR. The FCS Type field of PHR shall be set to zero for a 4-octet FCS and shall be set to one for a 2-octet FCS. For more information on the FCS Type, see Section 19.2.4 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible and configurable only when the Mode Switch is off.

#### 3. Data Whitening

Choices: On | Off ; Default: On.

Use the drop-down menu to enable or disable the data whitening of PSDU upon transmission. It will be included in Data Whitening field of PHR. For more information on the Data Whitening, see Section 19.2.4 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible and configurable only when the Mode Switch is off.

**4. Frame Length**

Display the total number of octets contained in the PSDU (prior to FEC encoding, if enabled). It will be included in Frame Length field of PHR. For more information on the Frame Length, see Section 19.2.4 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible and configurable only when the Mode Switch is off.

**5. Mode Switch Parameter**

Range: 0 – 3 ; Default: 0.

Set the parameter group used for mode switch. It will be included in Mode Switch Parameter field of PHR. For more information on the Mode Switch Parameter, see Section 19.2.5 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible and configurable only when the Mode Switch is on.

**6. New Mode FEC**

Choices: On | Off ; Default: Off.

Use the drop-down menu to specify whether the packet following the mode switch PPDU is transmitted using FEC. It will be included in New Mode FEC field of PHR. For more information on the New Mode FEC, see Section 19.2.5 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible and configurable only when the Mode Switch is on.

**7. New Mode**

**1) Page**

Range: 0 – 1 ; Default: 0.

Set the Page in New Mode Field of mode switch PHR. The Page field shall be set to zero to indicate channel page nine or set to one to indicate channel page ten.

Note: This parameter is visible and configurable only when the Mode Switch is on.

**2) Modulation Scheme**

Range: 0 – 3 ; Default: 0.

Set the Modulation Scheme in New Mode Field of mode switch PHR. The Modulation Scheme field indicates the modulation scheme.

| Modulation Scheme Field value | Description |
|---|---|
| 0 | SUN FSK |
| 1 | SUN OFDM |
| 2 | SUN O-QPSK |
| 3 | Additional modes |

Note: This parameter is visible and configurable only when the Mode Switch is on.

**3) Mode**

Range: 0 – 15 ; Default: 0.

Set the Mode in New Mode field of mode switch PHR. The Mode field specifies the new mode of operation. For more information on the Mode, see Section 19.2.5 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible and configurable only when the Mode Switch is on.

**8. Checksum**

Display the checksum field in mode switch PHR. This value is read-only and automatically updated with PHR value. For more information on the Checksum, see Section 19.2.5 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible only when the Mode Switch is on.

**9. Parity Check**

Display the parity check field in mode switch PHR. This value is read-only and automatically updated with PHR value. For more information on the Parity Check, see Section 19.2.5 of the IEEE Std 802.15.4-2020.

Note: This parameter is visible only when the Mode Switch is on.

#### 4.3.2.4 PSDU

These are the settings for the physical service data unit (PSDU) part of the frame when Mode Switch is off.

### 1. FEC

Choices: None | RSC | NRNSC ; Default: None.

Use the drop-down menu to select whether FEC is enabled and what type of FEC is used. For more information on the FEC, see Section 19.3.5 of the IEEE Std 802.15.4-2020.

### 2. Interleaving

Choices: On | Off ; Default: Off.

Use the drop-down menu to select whether interleaving is enabled after FEC. Interleaving is always enabled for NRNSC coding and disabled when FEC is not used. For more information on the interleaving, see Section 19.3.6 of the IEEE Std 802.15.4-2020.

### 3. Padding Bits


Display the number of padding bits appended to the tail bits, when interleaving is used in conjunction with convolutional coding.

The padding bits are required to fill up the last interleaver buffer completely, and the padding bits length is usually 5 or 13. This value is read-only and automatically updated with PHR and PSDU length. For more information on the padding bits, see Section 19.3.6 of the IEEE Std 802.15.4-2020.

### 4. PHY Payload

#### 1) MHR (MAC Header)

Use the drop-down menu to enable or disable the MAC Header filed.

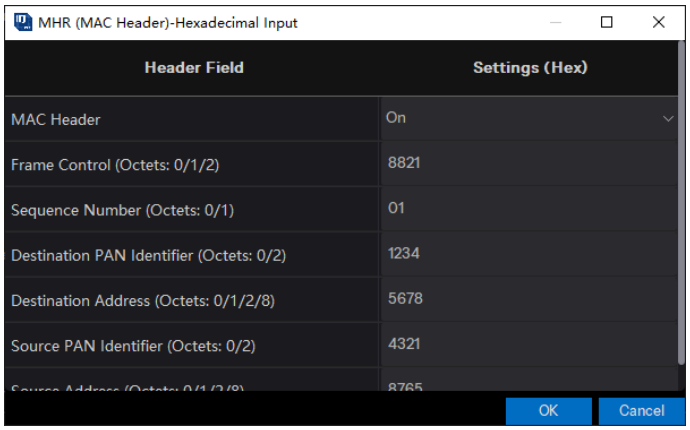


For more information on the MAC header, refer to the IEEE standards 802.15.4.

#### 2) Data Type

Choices: PN9 | PN15 | USER ;


Default: PN9.

Use the drop-down menu to set the type of packet payload.

PN9: A pseudo-random binary sequence of order 9 is used to fill the packet payload

PN15: A pseudo-random binary sequence of order 15 is used to fill the packet payload

USER: A user-defined binary sequence is used to fill the packet payload

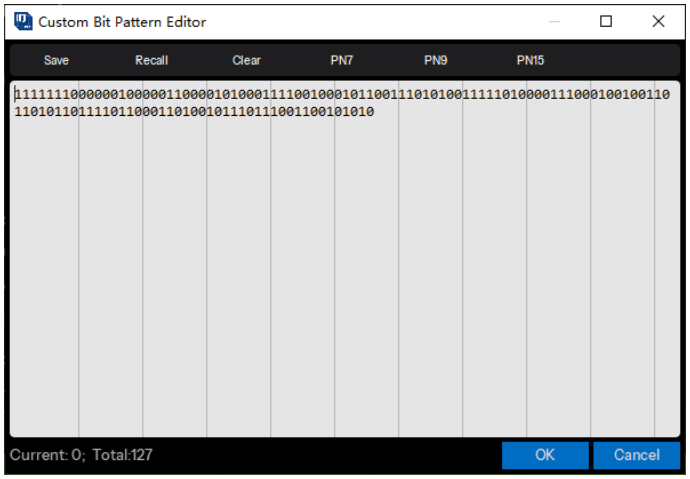


### 3) Seed

Set the seed value used to generate the pseudo-random binary sequence.

When Data Type PN9 is selected: Range: 0x0 – 0x1FF ; Default: 0x1FF.

When Data Type PN15 is selected: Range: 0x0 – 0x7FFF ; Default:0x7FFF.

Note: This parameter can be edited only when the Data Type is PN9 or PN15.

### 4) Data Length (Octets)

Range: 0 – 2047 ; Default: 1024.

Set the length of MAC payload in octets.

### 5) Data Mode

Choices: Continuous | Truncated ;

Default: Continuous.

For multi-frame signals, select the mode applied to the packet payload. If there is only one frame in the signal, then there is no difference in selection.

- Continuous: packet payload data bits are distributed consecutively across multiple frames
- Truncated: packet payload data bits are the same for all frames, with the data size truncated for one frame

### 6) MAC FCS

Choices: On | Off ; Default: On.

Use the drop-down menu to enable or disable the MAC FCS (frame check sequence). For more information on the MAC FCS, refer to the IEEE standards 802.15.4.

#### 4.3.2.5 Encoding

These are the encoding settings when Mode Switch is on.

**1. FEC**

Choices: None | RSC | NRNSC ;

Default: None.

Use the drop-down menu to select whether FEC is enabled and what type of FEC is used. For more information on the FEC, see Section 19.3.5 of the IEEE Std 802.15.4-2020.

**2. Interleaving**

Choices: On | Off ; Default: Off.

Use the drop-down menu to select whether interleaving is enabled after FEC. Interleaving is always enabled for NRNSC coding and disabled when FEC is not used. For more information on the interleaving, see Section 19.3.6 of the IEEE Std 802.15.4-2020.

**3. Padding Bits**

Display the number of padding bits appended to the tail bits, when interleaving is used in conjunction with convolutional coding.

The padding bits are required to fill up the last interleave buffer completely， and the padding bits length is usually 5 or 13. This value is read-only and automatically updated with PHR and PSDU length. For more information on the interleaving, see Section 19.3.6 of the IEEE Std 802.15.4-2020.

#### 4.3.2.6 Impairments

**1. Symbol Timing Error**

Range: -300 to 300ppm ; Default: 0ppm.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the signal. It is used to simulate transmission when the device's sampling clock is slightly off.

**2. Frequency Offset**

Range: -200 to 200kHz ;

Default: 0kHz.

Set the static offset of the carrier frequency. This static offset is used to simulate the device transmitting at a frequency slightly offset from the specified carrier.

**3. Frequency Deviation Scaling**

Range: 50 – 150% ;

Default: 100%.

Set the additional scaling to the nominal FSK frequency deviation. This is equivalent to apply scaling to FSK modulation index.

**4. Gaussian BT**

Range: 0.1 – 1.0 ;

Default: 0.5.

Set the BT product of the Gaussian filter applied to FSK modulation.

## 4.4 IEEE 802.15.4 SUN OFDM


SUNs PHY defined in IEEE standard 802.15.4. The smart utility network is a principally outdoor, low data rate wireless network that supports two-way communications among sensing, measurement, and control devices in the smart grid.


SUNs enable multiple applications to operate over shared network resources, providing monitoring and control of a utility system. SUN devices are designed to operate in very large-scale, low-power wireless applications and often require using the maximum transmit power available under applicable regulations, in order to provide long-range, point-to-point connections. Frequently, SUNs are required to cover geographically widespread areas containing a large number of outdoor devices. In these cases, SUN devices typically employ mesh or peer-to-peer multihop techniques to communicate with an access point.

SUN OFDM is one of the physical layers defined in the standard, which supports data rates ranging from 12.5 kb/s to 2400 kb/s. The subcarrier spacing is constant and is equal to 10416-2/3 Hz. The symbol rate is 8-1/3 kSymbol/s, which corresponds to 120 us per symbol.

Protocol version: IEEE Std 802.15.4 -2020

You can click **IoT** -> **802.15.4 SUN OFDM** on the homepage to enter the 802.15.4 SUN OFDM setting interface.

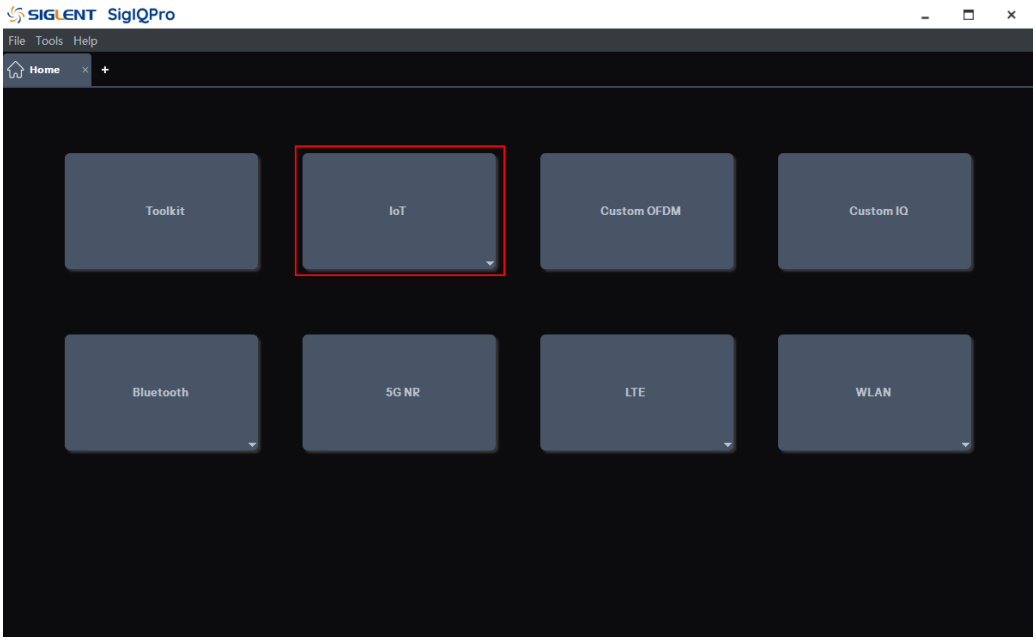

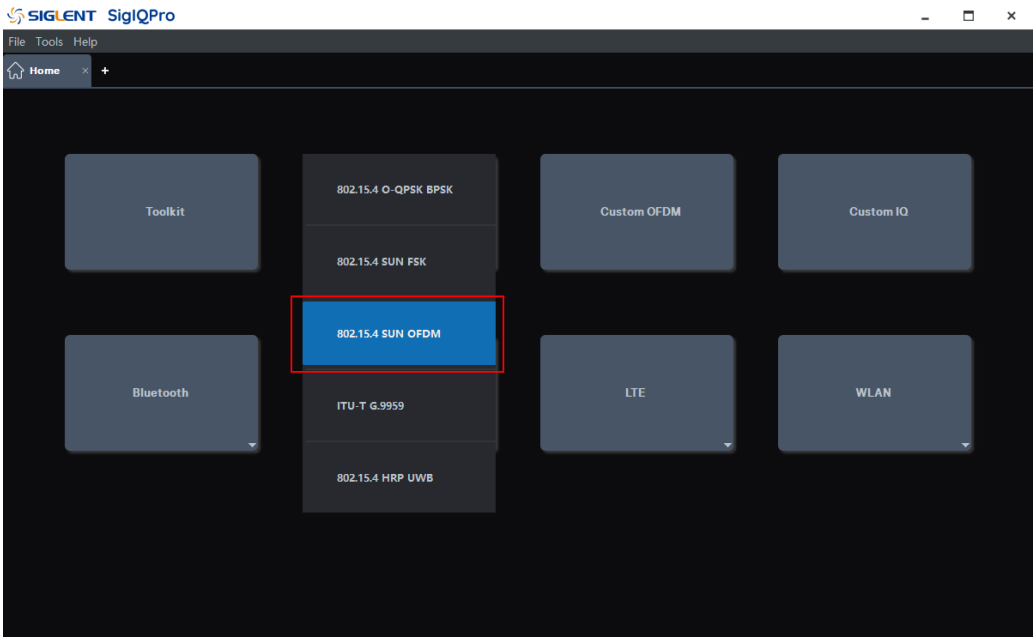
## 4.4.1 Waveform Setup

Press **Waveform Setup** in the left window to enter parameter settings.

### 4.4.1.1 Basic

#### 1. Waveform Name

When you download the waveform, the name you defined here will be displayed on the signal

generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Number of Frames**

Range: 1 to 2000 ;

Default: 1.

Set the number of frames included in the generated waveform.

**3. Oversampling Ratio**

Range: 2 to 100 ;

Default: 10.

Set the number of samples calculated per I/Q symbol.

**4. Total Sample Points**

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

**5. Waveform Length**

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

#### 4.4.1.2 Marker

**1. Marker 1 Source**

Choice: Waveform Start | Frame Start;

Default: Waveform Start.

Use the drop-down menu to select the type of Mark 1 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

**2. Marker 2 Source**

Choice: Waveform Start | Frame Start;

Default: Frame Start.

Use the drop-down menu to select the type of Mark 2 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

### 4.4.2 Packet

Press **Packet** in the left window to enter parameter settings.

#### 4.4.2.1 OFDM Setting

**1. Option**

Choices: Option 1 | Option 2 | Option 3 | Option 4 ;

Default: Option 2.

Use the drop-down menu to select PHY option. This PHY includes four options, each one being characterized by the number of active tones during the PHR or PSDU. Please refer to Table 20-10 in IEEE Std 802.15.4-2020 for more information.

**2. FFT Size**

Display the FFT size of selected OFDM option. This value is read-only and automatically updated when Option is changed. Please refer to Table 20-10 in IEEE Std 802.15.4-2020 for more information.

**3. Idle Interval**

Range: 0 – 200000 us ;

Default: 1000 us.

Set the idle interval time in-between frames in microseconds. When idle interval is set to zero, a continuous waveform will be generated.

### 4. Windowing Length


Range: 0 – FFT Size * Oversampling Ratio * 0.5;

Default: 16.

Set the raised cosine window length used to smooth the OFDM symbol transition. The maximum windowing length is limited to avoid exceeding the cyclic prefix (CP) part based on the option of OFDM signal.

To achieve a balance between ACP and EVM test results, it is necessary to set an appropriate windowing length. If you increase the windowing length to enhance the ACP result, the EVM result may deteriorate.

Note: Window length must be even.

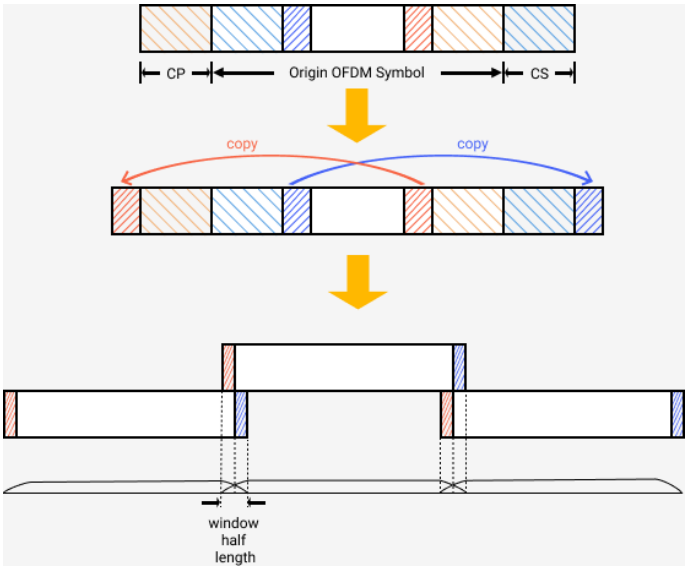


### 5. Filter for STF Symbols

Choices: On | Off ; Default: On.

Use the drop-down menu to enable or disable an ideal low pass filter that is applied to STF symbols. This filter will help eliminate the out-of-band spurs that are caused by the negated half of the 4th STF symbol.

### 6. Filter

Choices: None | Gaussian | Root Nyquist | Nyquist ;

Default: None.

Use the drop-down menu to select the pulse shape filter type to be applied to the waveform.

#### 4.4.2.2 PSDU

These are the settings for the physical service data unit (PSDU) part of the frame that includes the payload data.

**1. MCS**

Range:0 – 6 ;

Default: 3.

Set the MCS level for PSDU. The MCS level affects the modulation and coding for PSDU. Please refer to Table 20-10 in IEEE Std 802.15.4-2020 for more information.

**2. Modulation and Coding**

Display the modulation and coding scheme under selected MCS level. This value is read-only and automatically updated when MCS is changed. Please refer to Table 20-10 in IEEE Std 802.15.4-2020 for more information.

**3. Scrambler**

Choices: 00 (Seed 000010111) | 01 (Seed 101110111) | 10 (Seed 000011100) | 11 (Seed 101111100);

Default: 00 (Seed 000010111).

Use the drop-down menu to select the seed for scrambling PN sequence generation. It will be included in Scrambler field of PHR. Please refer to section 20.2.4 in IEEE Std 802.15.4-2020 for more information.

**4. OFDM Interleaving**

Choices: 0 | 1 ;

Default: 0.

Set the SUN OFDM interleaving attribute. This value affects the depth of interweaving. It corresponds to the PIB attribute *phyOfdmInterleaving* defined in IEEE Std 802.15.4-2020.

0: The interleaving depth of one symbol

1: The interleaving depth of the number of symbols equal to the frequency domain spreading factor.

For more information on the interleaving, see Section 20.4.5 of the IEEE Std 802.15.4-2020.

**5. FCS Type**

Choices: 0 = 4-octets | 1 = 2-octets;


Default: 0 = 4-octets.

Use the drop-down menu to select the FCS type. The FCS Type indicates the length of the FCS field contained in the MPDU.

## 6. PHY Payload

### 1) MHR (MAC Header)

Use the drop-down menu to enable or disable the MAC Header filed.

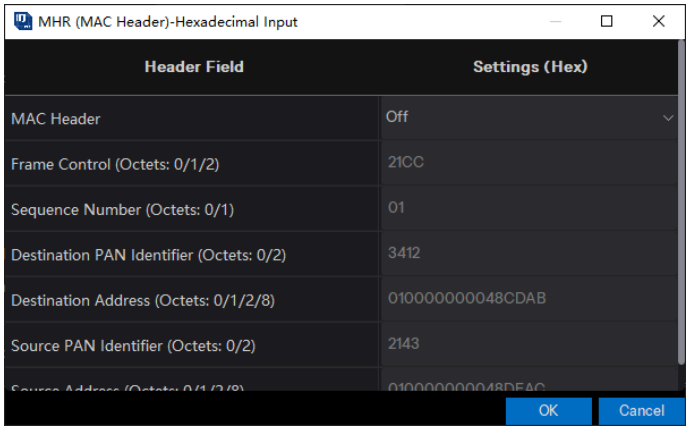


For more information on the MAC header, refer to the IEEE standards 802.15.4.


### 2) Data Type

Choices: PN9 | PN15 | USER ;

Default: PN9.

Use the drop-down menu to set the type of packet payload.

- PN9: A pseudo-random binary sequence of order 9 is used to fill the packet payload.
- PN15: A pseudo-random binary sequence of order 15 is used to fill the packet payload.
- USER: A user-defined binary sequence is used to fill the packet payload.

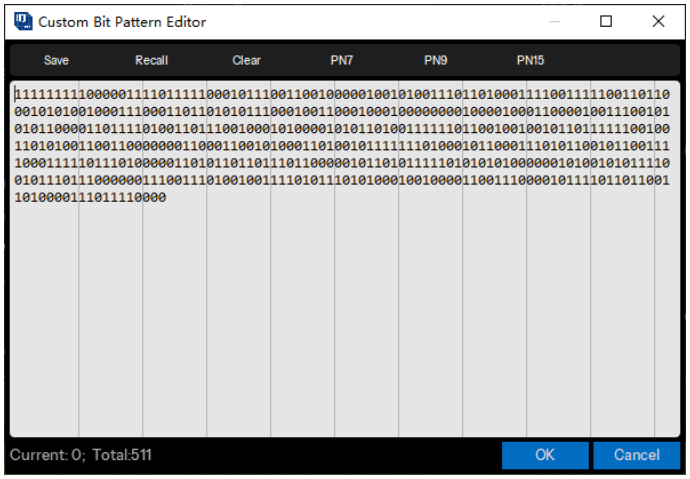


### 3) Seed

Set the seed value used to generate the pseudo-random binary sequence.

When Data Type PN9 is selected: Range: 0x0 – 0x1FF ; Default: 0x1FF.

When Data Type PN15 is selected: Range: 0x0 – 0x7FFF ; Default: 0x7FFF.

Note: This parameter can be edited only when the Data Type is PN9 or PN15.

#### 4) Data Length (Octets)

Range: 0 – 2047 ;

Default: 1024.

Set the length of MAC payload in octets.

#### 5) Data Mode

Choices: Continuous | Truncated ;

Default: Continuous

For multi-frame signals, select the mode applied to the packet payload. If there is only one frame in the signal, then there is no difference in selection.

- Continuous: packet payload data bits are distributed consecutively across multiple frames
- Truncated: packet payload data bits are the same for all frames, with the data size truncated for one frame

#### 6) MAC FCS

Choices: On | Off ;

Default: On.

Use the drop-down menu to enable or disable the MAC FCS (frame check sequence). For more information on the MAC FCS, refer to the IEEE standards 802.15.4.

### 7. Padding Bits

Display the number of padding bits appended to the tail bits in PSDU. The appended bits in PSDU are set to zeros, and to ensure that the number of bits in the PHY Payload field are multiple of Ncbps. For more information on the padding bits, see Section 20.4.10 of the IEEE Std 802.15.4-2020.

This value is read-only and automatically updated with Option, MCS, Frame Length and OFDM Interleaving.

### 8. Number of OFDM Symbols

Display the number of OFDM symbols of PSDU. This value is read-only and automatically updated with Option, MCS, OFDM Interleaving and PSDU settings.

#### 4.4.2.3 PHR (PHY Header) Info

These are the settings for PHY Header. All configuration items are read-only and automatically updated with OFDM setting and PSDU settings.

1. MCS

Display the MCS level for PHR. The MCS level affects the modulation and coding for PHR. The PHR shall be transmitted using the lowest supported MCS level for Option 1 and Option 2. For OFDM option 3 and OFDM Option 4, the PHR shall be transmitted using MCS1 and MCS2 respectively.
This value is read-only and automatically updated when Option is changed. Please refer to Section 20.2.4 in IEEE Std 802.15.4-2020 for more information.

2. Modulation and Coding

Display the modulation and coding scheme under selected MCS level. This value is read-only and automatically updated when MCS is changed. Please refer to Table 20-10 in IEEE Std 802.15.4-2020 for more information.

3. Frame Length

Display the total number of octets contained in the PSDU (prior to FEC encoding). It will be included in Frame Length field of PHR. This value is read-only and automatically updated with PSDU settings. Please refer to Section 20.2.4 in IEEE Std 802.15.4-2020 for more information.

4. HCS

Display the HCS (header check sequence) field of PHR in HEX. The HCS shall be computed using the first 22 bits of the PHR. This value is read-only and automatically updated when any of the PHR filed settings is changed. Please refer to Section 20.2.4 in IEEE Std 802.15.4-2020 for more information.

5. Padding Bits

Display the number of padding bits appended to the tail bits in PHR. The appended bits in PHR are set to zeros, and to ensure that the number of bits in the PHR field are multiple of Ncbps. For more information on the padding bits, see Section 20.4.10 of the IEEE Std 802.15.4-2020.
This value is read-only and automatically updated with Option, MCS, Frame Length and OFDM

Interleaving.

### 6. Number of OFDM Symbols


Display the number of OFDM symbols of PHR. This value is read-only and automatically updated with Option, MCS, and OFDM Interleaving.


## 4.5 ITU-T G.9959

ITU-T G.9959 PHY is defined in short range narrow-band digital radiocommunication transceivers -- PHY, MAC, SAR and LLC layer specifications.

Protocol version: IEEE Std 802.15.4 -2020.

You can click **IoT** -> **ITU-T G.9959** on the homepage to enter the ITU-T G.9959 setting interface.

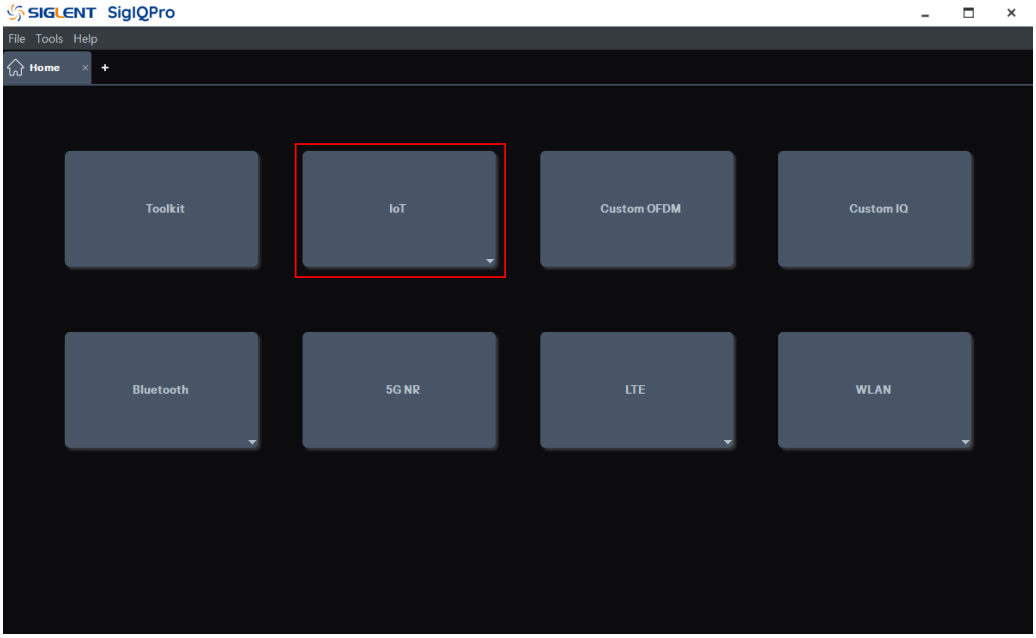

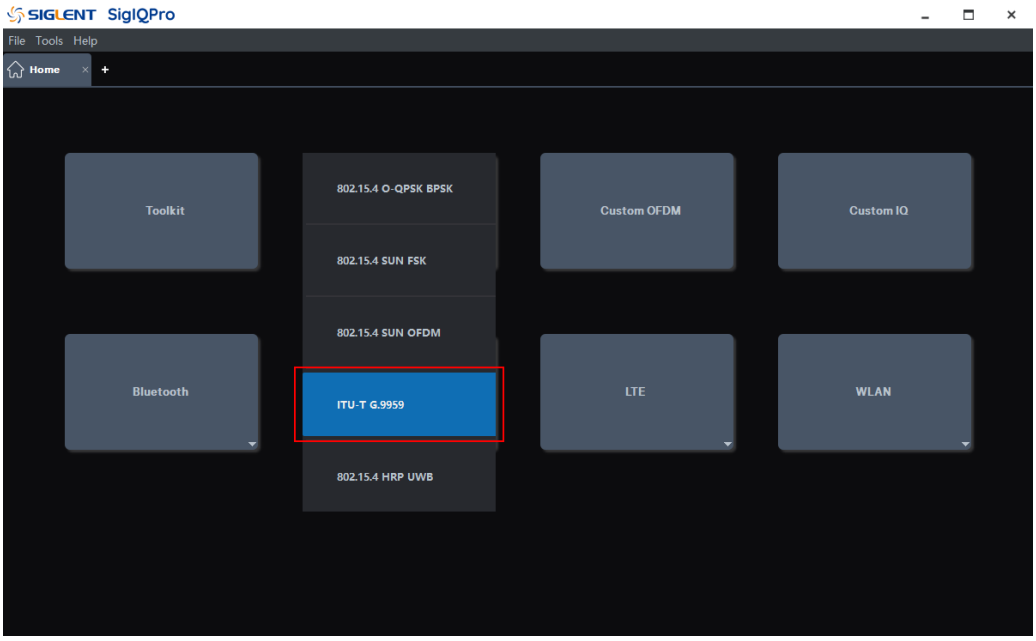


### 4.5.1 Waveform Setup

Press **Waveform Setup** in the left window to enter parameter settings.

#### 4.5.1.1 Basic

**1. Waveform Name**

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Number of Frames**

Range: 1 to 2000 ;

Default: 1.

Set the number of frames included in the generated waveform.

**3. Oversampling Ratio**

Range: 2 to 100 ;

Default: 10.

Set the number of samples calculated per I/Q symbol.

**4. Total Sample Points**

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

**5. Waveform Length**

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

#### 4.5.1.2 Marker

**1. Marker 1 Source**

Choice: Waveform Start | Frame Start;

Default: Waveform Start.

Use the drop-down menu to select the type of Mark 1 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

**2. Marker 2 Source**

Choice: Waveform Start | Frame Start;

Default: Frame Start.

Use the drop-down menu to select the type of Mark 2 Source to set the active mark points within the waveform. When the signal generator encounters an active mark point, a pulse signal is output via the IQ_EVENT connector on the rear panel. For more information, see the Signal Generator's User guide.

- Waveform Start : Set the first point of the waveform to an active marker point.
- Frame Start : Set the first point of the frame to an active marker point.

Note: A waveform may contain multiple frames.

## 4.5.2 Packet

Press **Packet** in the left window to enter parameter settings.

### 4.5.2.1 General Setting

**1. Data Rate**

Choices: R1 – 9.6 kbps | R2 – 40 kbps | R3 – 100 kbps;

Default: R1 – 9.6 kbps.

Use the drop-down menu to select the data rate type of PHY.

- R1: Data Rate Type 1 (9.6 kbit/s).
- R2: Data Rate Type 2 (40 kbit/s).
- R3: Data Rate Type 3 (100 kbit/s).

For more information on Data Rate, please refer to "Data rates" in Section 7.1.2.2 of the ITU-T G.9959 -2015.

**2. Modulation**

Choices: FSK | GFSK;

Default: FSK for R1/R2, GFSK for R3.

Use the drop-down menu to select the modulation type for PHY. For more information on Modulation, please refer to "Modulation and encoding" in Section 7.1.2.4 of the ITU-T G.9959 -2015.

**3. Coding**

Displays the coding type. This value is read-only and automatically updated when Data Rate is changed.

Manchester code shall be used for data symbol encoding at data rate R1 and non-return-to-zero (NRZ) shall be used for data symbol encoding at data rates R2 and R3. Please refer to Section 7.1.2.4 in ITU-T G.9959 -2015 for more information.

**4. Separation**

Displays the separation of FSK. This value is read-only and automatically updated when Data Rate is changed. Please refer to Table 7-4 in ITU-T G.9959 -2015 for more information.

**5. Idle Interval**

Range: 0 – 200000 us ; Default: 1000 us.

Set the idle interval time in-between frames in microseconds. When idle interval is set to zero, a continuous waveform will be generated.

**6. Ramp Symbols**

Range: 1 – 10 ; Default: 4.

Set the symbol duration for waveform ramp up and down.

Note: This parameter is visible and configurable only when the idle interval is not zero.

**7. Ramp Up/Down Symbol**

Choice: First/Last | Center | One | Zero;

Default: First/Last.

Use the drop-down menu to select the symbol for the period of waveform ramp up and down.

- First/Last : Use the first data symbol value as the ramp up symbol value and the last data symbol value as the ramp down symbol value.
- Center : Set the ramp up/down symbol when frequency deviation is zero.
- One : Set the ramp up/down symbol when frequency deviation is negative.
- Zero : Set the ramp up/down symbol when frequency deviation is positive.

Note: This parameter is visible and configurable only when the idle interval is not zero.

#### 4.5.2.2 PPDU Settings

These are the settings to configure the physical protocol data unit (PPDU) which is the frame.

**1. PPDU Length (Octets)**

Display the total PPDU length in bytes. This value is read-only and automatically updated with PPDU Settings.

**2. Preamble Length (Octets)**

Range: 10 – 100 ; Default: 10.

Set the preamble length in bytes in SHR (Synchronization Header). For more information on preamble, please refer to " Preamble field" in Section 7.1.3.2 of the ITU-T G.9959 -2015.

**3. Start of Frame Delimiter (Hex)**

Range: 00 to FF ; Default: F0.


Set the SOF field in hex in SHR (Synchronization Header). The SOF is an 8-bit field terminating the

preamble field and the start of the PSDU. For more information on SOF, please refer to "Start of frame (SOF) field " in Section 7.1.3.3 of the ITU-T G.9959 -2015.

## 4. PSDU

### 1) MHR (MAC Header)

Use the drop-down menu to enable or disable the MAC Header filed.

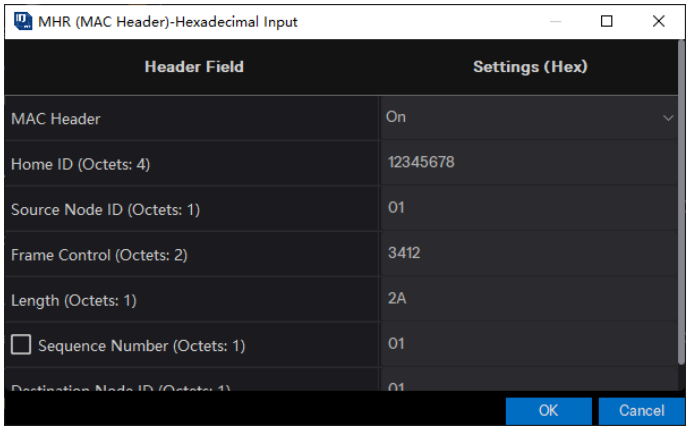


For more information on the MAC header, please refer to " MPDU format " in Section 8.1.3 of the ITU-T G.9959 -2015.

### 2) Data Type

Choices: PN9 | PN15 | USER ; Default: PN9.

Use the drop-down menu to set the type of packet payload.

- PN9: A pseudo-random binary sequence of order 9 is used to fill the packet payload
- PN15: A pseudo-random binary sequence of order 15 is used to fill the packet payload
- USER: A user-defined binary sequence is used to fill the packet payload




### 3) Seed

Set the seed value used to generate the pseudo-random binary sequence.

When Data Type PN9 is selected: Range: 0x0 – 0x1FF ; Default:0x1FF.

When Data Type PN15 is selected: Range: 0x0 – 0x7FFF ; Default:0x7FFF.

Note: This parameter can be edited only when the Data Type is PN9 or PN15.

#### 4) Data Length (Octets)

Range: 0 – 64 for R1 or R2; 0 – 170 for R3 ;

Default: 32.

Set the length of MAC payload in octets.

#### 5) Data Mode

Choices: Continuous | Truncated;

Default: Continuous.

For multi-frame signals, select the mode applied to the packet payload. If there is only one frame in the signal, then there is no difference in selection.

- Continuous: packet payload data bits are distributed consecutively across multiple frames .
- Truncated: packet payload data bits are the same for all frames, with the data size truncated for one frame.

#### 6) MAC FCS

Choices: On | Off ; Default: On.

Use the drop-down menu to enable or disable the MAC FCS (frame check sequence). For more information on the MAC FCS, refer to Section 8.1.3.8 and Section 8.1.3.9 of the ITU-T G.9959 -2015.

### 5. End of Frame Delimiter

Choices: On | Off ; Default: On.

Use the drop-down menu to enable or disable EOF in the PPDU. The EOF delimiter field shall be sent only when transmitting at data rate R1. For more information on the EOF, refer to Section 7.1.3.5 of the ITU-T G.9959 -2015.

## 4.5.2.3 Impairments

### 1. Symbol Timing Error

Range: -300 to 300ppm ; Default: 0ppm.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the signal.

It is used to simulate transmission when the device's sampling clock is slightly off.

**2. Frequency Offset**

Range: -200 to 200kHz ; Default: 0kHz.

Set the static offset of the carrier frequency. This static offset is used to simulate the device transmitting at a frequency slightly offset from the specified carrier.

**3. Frequency Deviation Scaling**

Range: 50 – 150% ; Default: 100%.

Set the additional scaling to the nominal FSK frequency deviation. This is equivalent to apply scaling to FSK modulation index.

**4. Gaussian BT**

Range: 0.1 – 1.0 ; Default: 0.6.

Set the BT product of the Gaussian filter applied to FSK modulation.

Note: This parameter is visible only when the Modulation selection is GFSK.


## 4.6 IEEE 802.15.4 HRP UWB

UWB has three major characteristics: carrier-free pulse, ultra-wide spectrum, and low power density. It has centimeter-level positioning accuracy and strong anti-interference ability. It can not only be used for data transmission, but also for radar imaging and ranging positioning, becoming the underlying supporting technology for smart cars, Industry 4.0 and spatial computing.

HRP UWB is based on pulse radio communication, using nanosecond narrow pulses to transmit data. It works in three frequency bands: sub-GHz (249.6~749.6 MHz), low band (3.1~4.8 GHz), high band (6.0~10.6 GHz).

The protocol version implemented by this software is: IEEE Std 802.15.4-2024.

You can click **IoT** -> **802.15.4 HRP UWB** to enter the 802.15.4 HRP UWB settings interface.

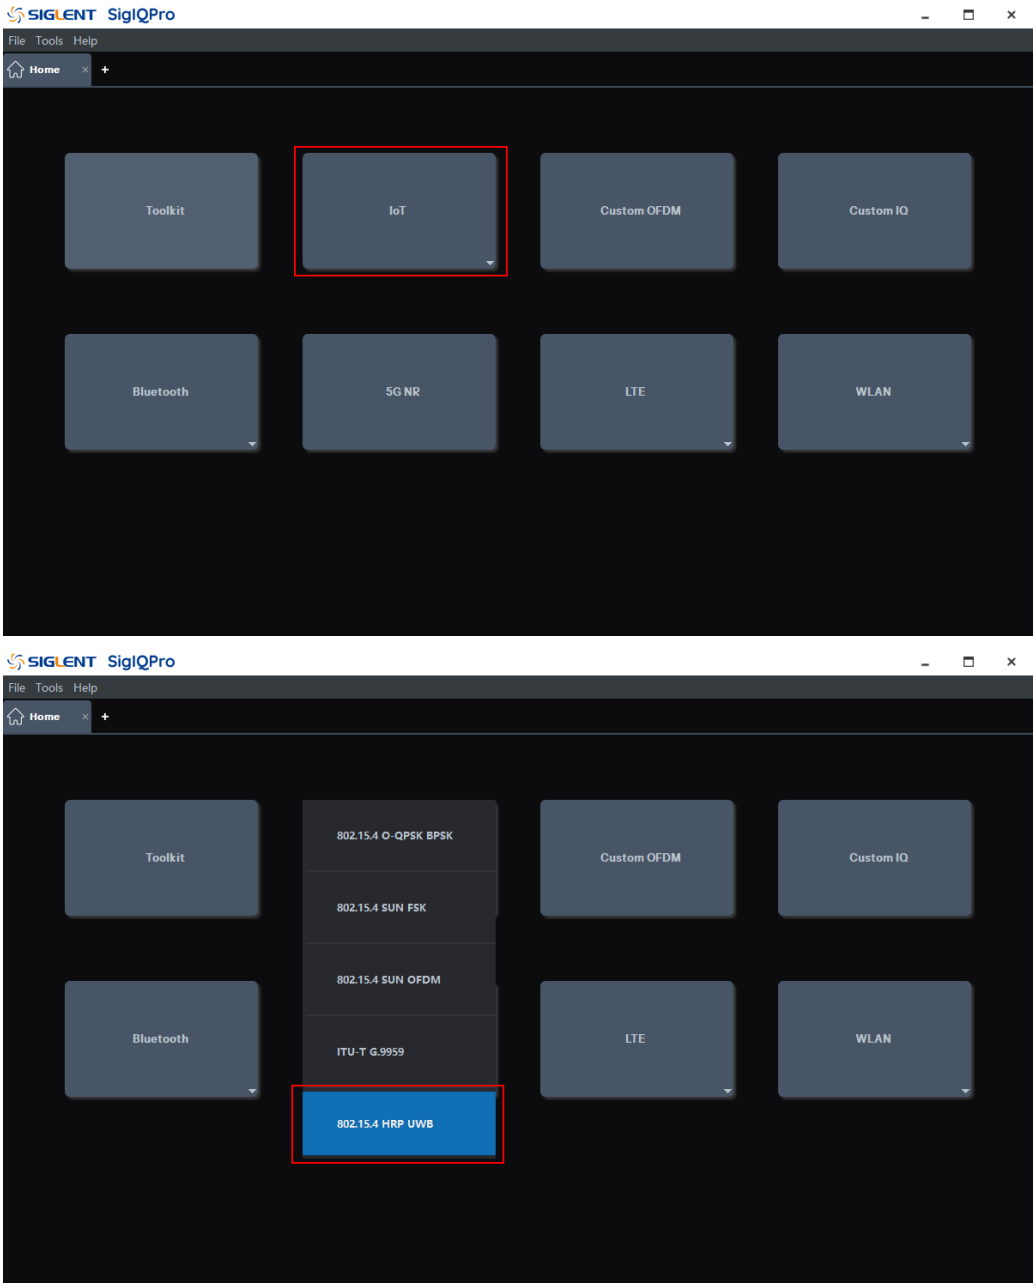


### 4.6.1 Waveform Setup

Click the Waveform Setup node in the tree view on the left side of the window to enter the waveform setup.

#### 4.6.1.1 Basic

**1. Waveform Name**

This parameter is used to define the waveform name displayed when it is downloaded to the signal generator. If it is not defined, the signal generator will automatically assign a unique name to the

waveform.

**2. Number of Frames**

Available range: 1 ~ 2000.

Default value: 1.

Set the number of frames contained in the generated waveform.

### 4.6.2 Packet

Click the Packet node in the tree view on the left side of the window to enter the parameter settings.

#### 4.6.2.1 Basic

**1. Samples Per Pulse**

Available range: 4 ~ 64 (when Channel is 4, 7, 11 or 15), 2 ~ 64 (when Channel is not 4, 7, 11 or 15).

Default value: 2.

The number of sampling points for each pulse is an integer multiple of the peak PRF (499.2 MHz).

**2. Idle Time**

The adjustable range is: 0 ~ 1000000 (unit: us), the default value is: 50 us.

Idle time between frames.

#### 4.6.2.2 General

**1. Mode**

Possible range: 'HPRF' | 'BPRF' | '802.15.4a' .

Default value: 'HPRF' .

Set the mode of HRP UWB PHY.

**2. STS Packet**

Available range: 0~3.

Default value: 1.

STS packet type configuration, indicating the location of STS in the PPDU.

**3. Channel**

Available range: 0~15, default value: 9 .

Channel number.

#### 4.6.2.3 Header

**1. Code Index**

Mode is '802.15.4a', options: 1~24

Mode is 'BPRF', options: 9~24

Mode is 'HPRF', options: 1~32

Default value: 9

The preamble number used by the HRP UWB PHY channel to generate the SYNC segment, which is associated with the Mode and Channel.

**2. Preamble Duration**

Mode is '802.15.4a' | 'BPRF', options: 16 | 64 | 1024 | 4096

Mode is 'HPRF', options: 16 | 24 | 32 | 48 | 64 | 96 | 128 | 256

The preamble length, that is, the number of symbols in the SYNC segment (or the number of times the preamble symbol is repeated), is associated with the Mode.

**3. Delta Length**

Mode is '802.15.4a', options: 4 | 16 | 64

Mode is 'BPRF', options: 4

Mode is 'HPRF', options: 4 | 16 | 64

Default value: 4.

The length of the Delta function. The Delta function is used to expand the preamble code into the preamble symbol.

Delta Length is associated with Mode, Channel, and Code Index.

**4. SFD Number**

Mode is 'BPRF', options: 0 | 2

Mode is 'HPRF', options: 1~4

SFD sequence number, that is, select SFD0~4, and Mode is 'HPRF' | 'BPRF' to take effect.

5. SFD Length (Symbols)

After selecting SFD Number, the corresponding SFD Length value is automatically displayed.

6. Preamble Mean PRF

When Code Index is 1-8, options are: 16.1 | 4.03

When Code Index is 9-24, it is fixed to: 62.89

When Code Index is 25-32, it is fixed to: 111.09

Default value: 62.89

Preamble average pulse repetition frequency, unit: MHz

7. PHR Data Rate (Mb/s)

Only valid when Mode is 'BPRF', options: 0.85 | 6.81

Among them, 0.85 corresponds to DRBM_LP; 6.81 corresponds to DRBM_HP

Default value: 0.85

The (bit) data rate of PHR, in Mb/s.

#### 4.6.2.4 PSDU

1. Mean PRF

When Mode is '802.15.4a', Channel is [0:3 5:6 8:10 12:14], options: 3.9 | 15.6 | 62.4

Channel is {4 7 11 15}, options: 15.6 | 62.4

Mode is 'BPRF', fixed at 62.4

Mode is 'HPRF', options: 124.8 | 249.6

Default value: 249.6

The average pulse repetition frequency of the PSDU part in the frame is related to Mode and Channel.

2. Data Rate (Mb/s)

When Mode is '802.15.4a', options are: 0.11 | 0.85 | 1.7 | 6.81 | 27.24

Mode is 'BPRF', fixed at 6.81

Mode is 'HPRF', options: 6.81 | 7.8 | 27.24 | 31.2

Default value: 6.81

The data rate of the payload (in bits), in Mb/s

3. Constraint Length

Available values: 3 | 7. Default value: 3.

Convolution encoder length, effective when Mode is 'HPRF', and fixed value is 3 for other modes. It is associated with Data Rate.

Data Rate = 6.81 ——> Constraint Length = 3

Data Rate = 27.24 ——> Constraint Length = 3

Data Rate = 7.8 ——> Constraint Length = 7

Data Rate = 31.2 ——> Constraint Length = 7

### 4. Ranging State

Available options: On | Off

Indicates whether the data frame is used for ranging. It is used to fill the Ranging bit of PHR.


### 5. Frame Length

Displays the total number of bytes contained in the PSDU. It will be contained in the Frame Length field of the PHR. This parameter is a read-only value and is automatically updated as the Data Length in the Payload changes.

### 6. Payload

#### 1) MAC Header

Use the pop-up window to configure the MAC Header fields.

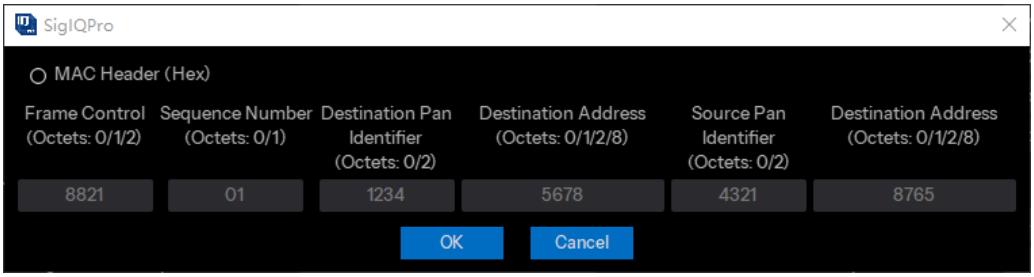


For more information about the MAC header, refer to IEEE Std 802.15.4.

#### 2) Data Type

Available options: PN9 | PN15

Default value: PN9

Use the drop-down menu to select the type of message payload.

PN9: Uses a 9th-order pseudo-random binary sequence to fill the message payload.

PN15: Uses a 15th-order pseudo-random binary sequence to fill the message payload.

### 3) Seed

Sets the seed value used to generate pseudo-random binary sequences.

When the data type is PN9:

Available range: 0x0 ~ 0x1FF

Default value: 0x1FF

When the data type is PN15:

Available range: 0x0~ 0x7FFF

Default value: 0x7FFF

### 4) Max Data Length (Octets)

Mode is '802.15.4a' | 'BPRF', fixed value is 127, unit: Octets

Mode is 'HPRF', options: 1023 | 2047 | 4095

Set the maximum length of the message payload in bytes.

### 5) Data Length (Octets)

Available range: 0 ~ (MaxDataLength - length(MAC Header) - length(FCS))

Set the length of the message payload (in bytes).

### 6) Data Mode

Available options: 'Continuous' | 'Truncated' , default value: 'Continuous' .

For multi-frame signals, select the mode to apply to the message payload. If there is only one frame in the signal, select Make No Difference.

Continuous: The data bits in the packet payload are distributed continuously in multiple frames.

Truncated: The message payload data bits are the same for all frames, and the data length is truncated within a frame.

### 7) FCS State

Available options: On | Off, Default value: On.

Use the drop-down menu to enable or disable MAC FCS (Frame Check Sequence).

For more information about MAC FCS, refer to IEEE standards 802.15.4.

### 8) FCS Type

Available options: '2-octets' | '4-octets' , default value: '2-octets'.

If FCS State is On, this option is enabled. Use the drop-down menu to select the FCS type. The FCS type indicates the length of the FCS field contained in the MPDU.

#### 4.6.2.5 STS

**1. Number of STS Segments**

When Mode is 'HPRF', options are: 1 | 2 | 3 | 4

When Mode is 'BPRF', it is fixed to 1

That is, the number of STS segments.

**2. Length of STS Segments**

When Mode is 'HPRF', options are: 16 | 32 | 64 | 128 | 256

When Mode is 'BPRF', it is fixed to 64

The length of the STS segment, in units of 512 chips.

**3. Length of STS Gap**

Options: 0 ~ 127.

Default value: 0.

Set the Gap length in units of 4 chips (~8ns).

This option is effective when Mode is 'HPRF' and STSPacket Configuration is 2, and an additional Gap is added between PSDU and STS.

**4. Index of STS Gap**

Options: 0 | 1 | 2 | 3.

Default: 0.

Set the sequence number of the extra STS gap.

This function is effective when Mode is 'HPRF' and STSPacket Configuration is 2, and is used to generate the bit data of (A0, A1) in PHR.

#### 4.6.2.6 Impairments

**1. Symbol Time Error**

Optional range: -300 ~ 300 ppm

Default value: 0

Sets the symbol timing error (sampling clock offset) of the signal in ppm.

**2. Frequency Offset**

Selectable range: -500 ~ 500 kHz

Default value: 0

Set carrier frequency deviation, unit: Hz.

#### 4.6.2.7 Filter

**1. FilterType**

Optional options: 'Root Raised Cosine' | '3-order Butterworth' | '4-order Butterworth'

Default value: 'Root Raised Cosine'.

Use the pull-down menu to select the type of pulse shaping filter to apply to the waveform.

**2. Pulse Duration**

Filter Type is 'Root Raised Cosine' and takes effect. Unit: ns.

Bound to Channel, only displayed but not editable.

**3. Beta**

FilterType is 'Root Raised Cosine' and is fixed at 0.5. It is only displayed and cannot be edited.

#### 4.6.2.8 Multipath

**Multipath**


Available Values: On | Off. Default Value: Off.

Multipath channel settings.

## 4.7 Custom OFDM

Custom OFDM software module supports highly customizable settings based on Orthogonal Frequency Division Multiplexing (OFDM), and generates baseband data for Siglent signal generators to output modulated signals.

You can click **Custom OFDM** on the homepage to enter the Custom OFDM setting interface.

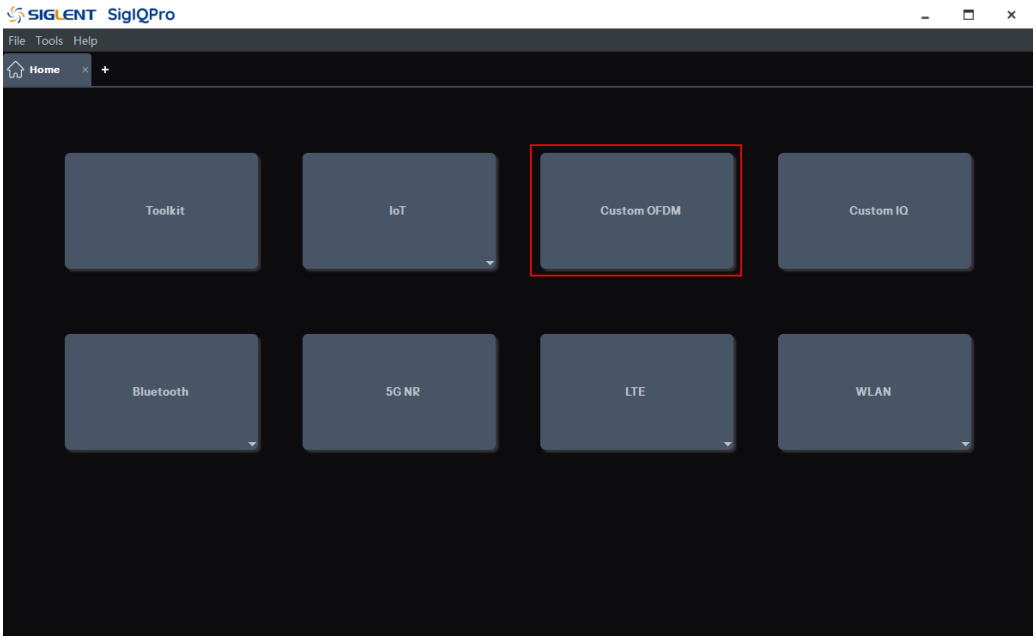


### 4.7.1 Term Definition

For the purposes of the present document, some terms are applied. IEEE Std 802.11a-1999 provides references for term definitions.

The definitions of these terms are as follow.

#### 4.7.1.1 Frame

In Custom OFDM software module, OFDM baseband signal is divided as frames in the time domain, which is made up of a certain number of OFDM symbols. There is the same number of subcarriers in the frequency domain for every OFDM symbol, each of them can carry a symbol generated by means of linear digital modulation, such as PSK and QAM.

OFDM symbols in frame are numbered, starting from 0.

Subcarriers are also numbered, and the index of center subcarrier is set to 0. Compared to the center subcarrier, the indices of subcarriers at lower frequencies are negative, the other subcarrier indices are positive integers.

#### 4.7.1.2 Resource Unit

Physical Resources in a frame is generally described as two-dimensional grids, whose dimensions are OFDM symbols and subcarriers.

Resource Unit is the smallest unit of physical resources in a frame, referring to the physical resource made up of single subcarrier on a single OFDM symbol.

#### 4.7.1.3 Resource Block

To transmit data effectively by means of OFDM, some known signals is usually transmitted in a frame, which is used to analyze the physical channel parameters in the receiving side. The other signals carry data encoding based on valid transmission information.

Resource Blocks are transmission units of independent signals for different proposes, which is called as Channel in some communication protocols.

Resource Blocks occupy certain resource units to transmission data, which is assigned by resource mapping in OFDM. Transmitted data in resource blocks is encoded into IQ value arrays by linear digital modulation, which is called as Payload.

Payload can be directly given as IQ value arrays, or modulated according to the bit patterns and the linear digital modulation type. The bit pattern can be automatically generated PN codes, or directly given.

Resource Blocks is classified into three types in accordance with the function of transmitted signals: Preamble, Pilot and Data.

Preamble is used to transmit known signals for frame synchronization. The signals might be also used to frequency/phase offset estimation or channel model estimation. It's usually assigned fixed IQ sequences for these resource blocks in the communication protocols.

Pilot is used to transmit known signals for channel model estimation, which is usually widely distributes in OFDM symbols to track time-varying channel parameters. Pilot might be also used to synchronization. It's usually assigned fixed bit sequences for these resource blocks in the communication protocols, and payloads are generated by linear digital modulation.

Data is used to transmit signals carrying the valid transmission information. The information is encoded into binary bit sequences, then modulated into IQ value sequences for resource block payloads.

Resource mapping priority of the resource blocks relates to the resource block type. Preamble has the highest priority, Pilot is the second, Data is the lowest.

Resource Blocks are numbered, the indices start from 1. For resource blocks of the same type, the resource blocks with larger indices have higher priority to resource mapping.

#### 4.7.1.4 Resource Group

To assign resource units occupied by resource blocks clearly, resource groups is introduced to divide occupied resource units into several groups.

Resource units occupied by resource groups are given as OFDM symbol index lists and subcarrier index lists, which respectively assign certain OFDM symbols and subcarriers. For every OFDM symbol assigned, resource unit made up of every subcarrier assigned on the symbol is indicated to be occupied.

Every resource group has a unique group ID, that a non-negative integer to indicate the group. Resource group ID 0 is reserved, and indicates the group is global. The resource group is assigned as 0 by default if not given, its symbol index lists and subcarriers don't assign resource units for itself, but are appended the lists to those of other resource groups to expand physical resource ranges occupied by those groups.

### 4.7.2 Techniques Explanation

For the purposes of the present document, some techniques used in the software are explained as follow.

#### 4.7.2.1 Cyclic Prefix / Cyclic Suffix

To reduce the effect of multipath transmission on the communication quality, Cyclic Prefix and Cyclic Suffix are frequently applied in the communication protocols based on OFDM.

Cyclic Prefix (CP) means adding certain number of sample points before the origin OFDM symbol sample data. Extra sample points are copied from the same number of sample points at the end of the origin symbol sample data.

Cyclic Suffix works similarly to CP, copying the sample points at the beginning of the origin and adding them into the end of the origin.

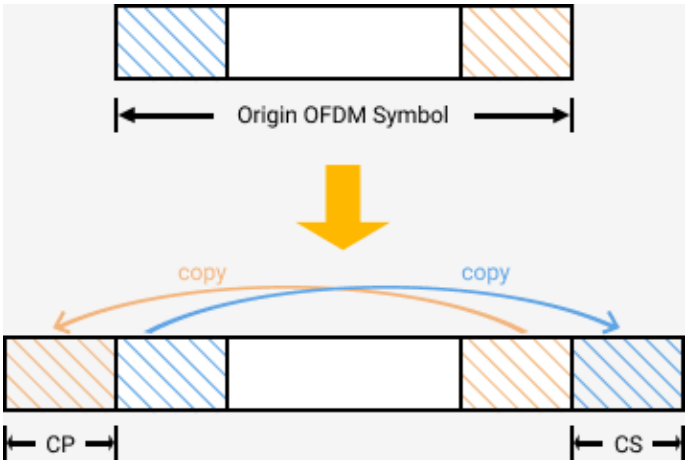



Figure 4-1 Cyclic Prefix and Cyclic Suffix

#### 4.7.2.2 DFT Spread

DFT Spread is a technique to mapping the DFT calculation output sequences of the payload IQ values to physical resources, instead of origin payload sequences. It's introduced to suppress the Inter-Symbol Interference (ISI) and reduce the Peak to Average Power Ratio (PAPR) the spectrum in some communication protocols, like Uplink of LTE and NR.

If DFT spread is enabled for a resource block, the software will execute DFT calculation for payload values of it on every OFDM symbols respectively, and replace the origin data by the calculation results.

#### 4.7.2.3 Windowing

Windowing is a technique to smoothing the transitions between OFDM symbols, in order to reduce the spectrum leakage of OFDM. There are two windowing method supported in the software: Window centered at symbol boundary, or window starting at symbol boundary.

For window centered at symbol boundary, origin OFDM symbol sample data are expanded at the beginning and the end, expanded sample points are copied from the end and the beginning of the origin respectively. For symbol with CP and /or CS, the copy source is before the source of CP and /or after the source of CS respectively. The expand data length is the quarter of the length of window rising / falling edge respectively.

Then, raise cosine window is applied to the expanded symbol data, the center of the rising / falling edge of the window function is aligned with the origin symbol boundary. The process flow is shown in Figure 4-2.

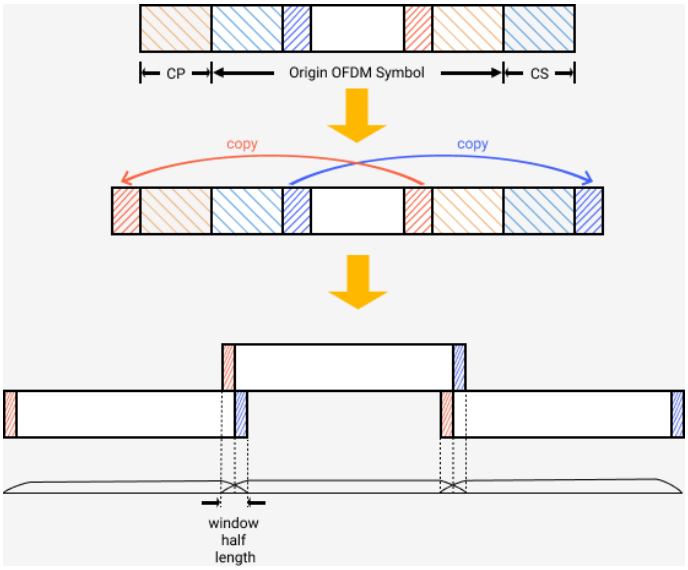



Figure 4-2 Window center aligning with symbol boundary

For window starting at symbol boundary, origin OFDM symbol sample data are expanded at the end only. The expand method is similar to the former method, but the expand length is the half of the window edge length.

Then, raise cosine window is applied, and the starting of window edge is aligned with the origin symbol boundary. The process flow is shown in Figure 4-3.

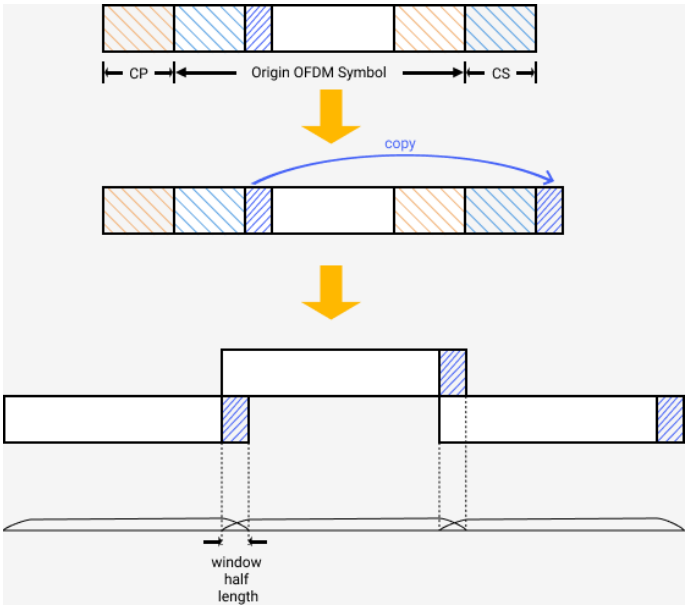



Figure 4-3 Window starting aligning with symbol boundary

#### 4.7.2.4 Crest Factor Reduction

If Peak to Average Power Ratio (PAPR) of the OFDM baseband signal is relatively high, the power

amplifier used in the transmission circuit must have wide dynamic range, which usually results in a lower power efficiency. To avoid the problem, it's necessary to reduce the PAPR of the baseband signals, which is called as Crest Factor Reduction (CFR).

There are some mature techniques to implement CFR, such as Clipping and filtering, Peak Windowing and Peak Cancellation. Peak Cancellation is adopted in the software.

If CFR is enabled, the software divides the baseband signal into blocks according to the block size assigned, and execute Peak Cancellation for every block:

For the sample point whose amplitude is highest, if the amplitude is over CFR target PAPR limit, generate the cancellation signal to cut down the over-limited amplitude according to the cancelling percent assigned.

Combine the cancellation signal of all blocks, and filter the combined signal to suppress the spectrum leak, then add the filtered signal to the baseband signal.

Check if the target PAPR value has been achieved, if not achieved and not meeting the max iteration limit, execute above steps iteratively.

### 4.7.3 Waveform Setup

The section explains the settings in the Waveform Setup Menu. Press **Waveform Setup** in the left window to enter parameter settings.

#### 4.7.3.1 Basic

**1. Waveform Name**

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Number of Frames**

Range: 1 to 300 ; Default: 1.

Set the number of frames in the baseband signal data to download to the devices or export to the files.

**3. Oversampling Ratio**

Range: 1 to 128 ; Default: 4.

Set oversampling ratio of the baseband signal.

The parameter will increase the actual FFT length during the signal generation, too large parameter value will slow down the processing procedure, even result in out-of-memory failure.

**4. Total Sample Points**

Display the total number of sample points for the baseband signal according to the current settings.

**5. Waveform Length**

Display the time length of the baseband signal according to the current settings.

**6. Mirror Spectrum**

Choice: On | Off ;

Default: Off.

Select setting the spectrum of the baseband signal into mirror symmetry or not.

The mirror spectrum is implemented by inversing the Q path of the baseband IQ signal.

#### 4.7.3.2 Crest Factor Reduction

The section introduces the settings of CFR applied to the baseband signal.

**1. Crest Factor Reduction**

Choice: On | Off ;

Default: Off.

Select applying CFR to the baseband signal or not.

If the parameter is set to Off, other settings of Crest Factor Reduction will be hidden.

**2. Target PAPR**

Range: 3 dB to 100 dB ;

Default: 8 dB.

Set the target PAPR value of CFR applied to the baseband signal.

The software tries to reduce the PAPR value to the target assigned by executing CFR iteratively, but the target is NOT guaranteed to be achieved. If Max Iteration or Cancelling Percent is too little, it will be little possible to reduce the PAPR value to the low target value.

**3. Max Iteration**

Range: 1 to 20 ;

Default: 10.

Set the maximum iterations of CFR process for the baseband signal.

The software executes CFR iteratively, and terminate the iteration if the target PAPR value has been achieved or the maximum iterations limit has been met.

#### 4. Cancelling Percent

Range: 0 % to 100 % ;

Default: 100 %.

Set the cancelling percent of the generated cancellation signal in the CFR process.

To reduce the PAPR of the blocked signals, cancellation signal amplitude equals to the cancelling percent assigned multiplies the over-limited amplitude of the origin signal. If the cancelling percent is too little, the effect of CFR will become too weak to achieve the target PAPR value.

#### 5. Block Size

Range: 20 to Total Sample Points ;

Default: 1000.

Set the block size of the signal segmentation in the CFR process.


In the CFR process, the baseband signal is divided into blocks to execute Peak cancellation. For every signal block, only one peak will be cancellation in a single iteration. If the block size is too large, it's little possible to cancel all over-limited sample points in the baseband signal, resulting in failing to achieve the target PAPR value.

#### 6. Filter Mask

Set the amplitude-frequency response data of the filter used to suppress the spectrum leak in the CFR process.

The cancellation signal generated in the CFR process will be filtered before add to the baseband signal, the software generates lowpass or bandpass FIR filter according the filter mask data assigned automatically.

If the passband of filter is too broad, the spectrum leak can't be suppressed effectively. If the passband is too narrow, the peak cancellation will be too weak to reduce PAPR value to the target.

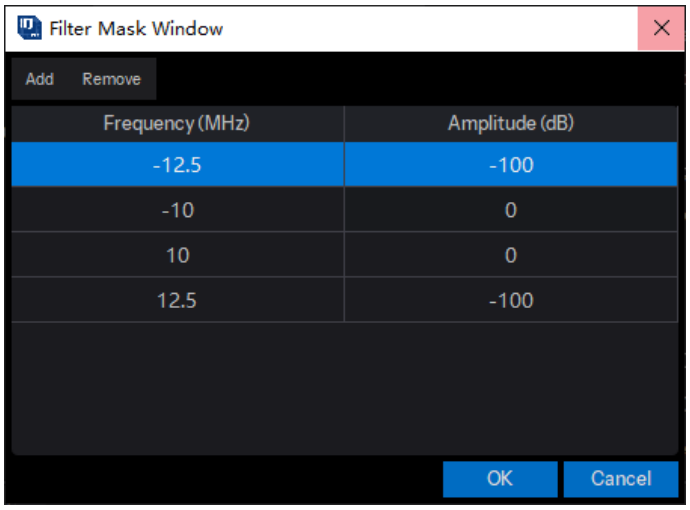


#### 4.7.3.3 Multicarrier

The section introduces the settings of multicarrier applied to the baseband signal.

Multicarrier is implemented by mixing the baseband signal to the carrier frequency assigned, and combine all signals on multi-carriers into the final baseband signal data to output to the devices or files.

**1. Multicarrier Enabled**

Choice: On | Off ; Default: Off.

Select applying multicarrier to the baseband signal or not.

If the parameter is set to Off, other settings of Multicarrier will be hidden.

**2. Number of Carriers**

Display the number of carriers in the multicarrier process.

**3. Carrier Phases**

Choice: Fixed | Random ; Default: Random.

Select the initial phases of the carriers to be aligned or random in the multicarrier process.

If the parameter is set to Fixed, the initial phases of all the carriers is set to the Initial Phase assigned in the Section 5. If the parameter is set to Random, the initial phases will be given by random numbers.


**4. Frequency Offsets & Power Offsets**

Click the "Frequency Offsets" or "Power Offsets" box to open the Multi-Carrier Offset Window, set

the frequency or Power Offsets of carriers.

The Frequency Offset values larger than the baseband signal bandwidth or the device output bandwidth will result in undefined behaviors.

The Power Offset is limited to be non-positive values, indicating the power attenuation factors of the signal on the carriers.

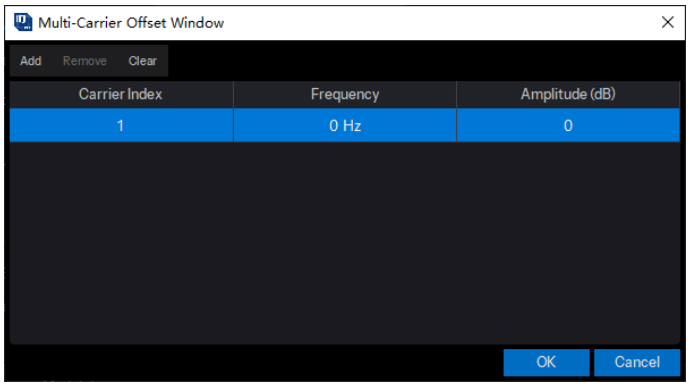


## 4.7.4 Custom OFDM

The section explains the settings in the Waveform Setup Menu. Press **Custom OFDM** in the left window to enter parameter settings.

### 4.7.4.1 General Settings

#### 1. Idle Interval

Range: 0 to 200ms;

Default: 4us (IEEE STD 802.11a-1999).

Set the idle interval length between frames in the baseband signal.

The idle interval is added to the end of the frames, and filled with zero sample data.

#### 2. System Sample Frequency

Range: 1kHz to 250MHz;

Default: 20MHz (IEEE STD 802.11a-1999).

Set the basic sample frequency of the baseband signal.

The actual sample frequency of the baseband signal equals to the System Sample Frequency multiplies the Oversampling Ratio in Section 3. The actual sample frequency over the device bandwidth limit will result in undefined behaviors.

**3. Half Subcarrier Offset**

Choice: On | Off ; Default: Off.

Select half subcarrier offset applying to the baseband signal or not.

The transmission quality of signal on the DC subcarrier might be low because of the LO leakage in the transmitting and receiving end. Some communication protocol, like LTE Uplink, apply the technique to avoid DC subcarriers working, which shifts the frequency spectrum of the modulated signals from the bandwidth center, usually integer multiplies of the half of subcarrier spacing.

If the parameter is set to Off, the parameter "Number of Shifted Half Subcarriers" will be disabled and hidden.

If the parameter is set to On, the parameter "Initial Phase" will be disabled and hidden.

**4. Number of Shifted Half Subcarriers**

Range: 1 to 16 ; Default: 1.

Set the half subcarrier number of frequency spectrum shifting of the baseband signal.

The parameter will be disabled and hidden, if the parameter "Half Subcarrier Offset" is set to Off.

**5. Initial Phase**

Range: 0 to 360 degrees ; Default: 0.

Set initial phase of the carrier for the modulated signal.

The parameter will be disabled and hidden, if the parameter "Half Subcarrier Offset" is set to Off.

If the Multicarrier Enabled is set to On, and the parameter "Carrier Phases" is set Random, the parameter will be actually invalid.

#### 4.7.4.2 OFDM Settings

**1. FFT Length**

Range: 4 to 16384, must be an even number.

Default: 64 (IEEE STD 802.11a-1999).

Set the total subcarrier number of OFDM symbols.

The parameter decides the total subcarrier number of OFDM symbols, but the actual FFT length of the modulation equals to the parameter multiplies the Oversampling Ratio assigned in the Section 3.

The parameter will increase the actual FFT length during the signal generation, too large parameter value will slow down the processing procedure, even result in out-of-memory failure.

The parameter is usually set to the power of 2, or the FFT calculation will be slower.

### 2. Number of OFDM Symbols

Range: 1 to 2000 ; Default: 64.


Set the total OFDM symbol number in a frame.

The parameter decides the total symbol number in a frame, and determines the size of the physical resources together with the parameter "FFT Length".

### 3. Cyclic Prefix Length

Click the "Cyclic Prefix Length" box to open the Cyclic Prefix Length Window, set the cyclic prefix length according to OFDM symbol grouping.

To express which symbols in a group, the symbol index lists is given according to the method presented in the Section 4.7.6.1. The Cyclic Prefix length is given as the length ratio of the sample point number of CP and origin OFDM symbol, whose range is 0 to 1.

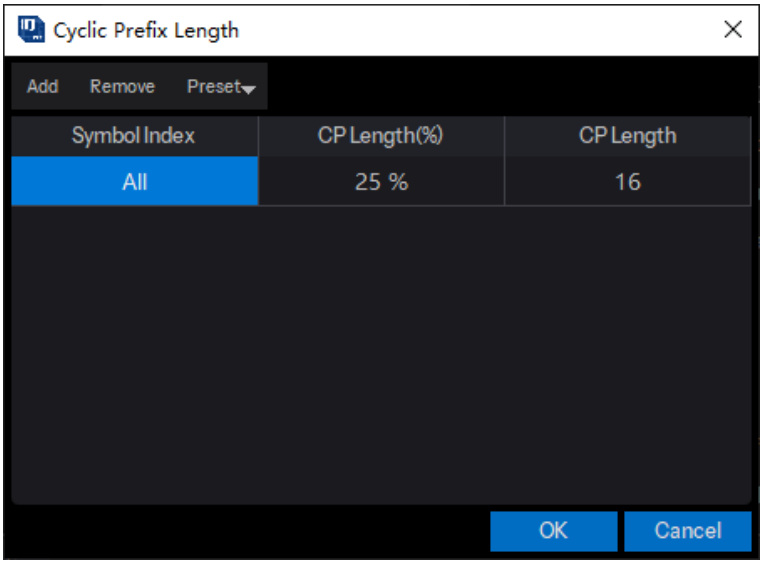


### 4. Cyclic Suffix Length

Set the cyclic prefix applied to the modulated signal, the way to configure is similar to Cyclic Prefix Length in the Section 3.

### 5. Guard Lower Subcarriers

Range: 0 to the half of the FFT Length assigned in the Section 1 (included).

Default: 6 (IEEE STD 802.11a-1999).

Set the guard subcarrier number at the lower edge of the bandwidth.

To suppress the effect of the spectrum leakage, the subcarriers close to the edge of the bandwidth might be set to reserved or unused. The parameter indicates the number of the unused subcarriers at the lower edge.

**6. Guard Upper Subcarriers**

Range: 0 to the half of the FFT Length assigned in the Section 1 (not included).

Default: 5 (IEEE STD 802.11a-1999).

To suppress the effect of the spectrum leakage, the subcarriers close to the edge of the bandwidth might be set to reserved or unused. The parameter indicates the number of the unused subcarriers at the upper edge.

To ensure at least one subcarrier to transmit data, the maximum of the guard upper subcarrier is set to the half of the total subcarrier number minus 1.

**7. Subcarrier Spacing**

Display the spacing frequency between adjacent subcarriers according to the current settings.

**8. Actual Signal Bandwidth**

Display the actual bandwidth of data transmission according to the current settings, which equals to System Sample Frequency (in the Section 2) minus the bandwidth of guard subcarriers (in the Section 5 and 6).

**9. Power Reference Type**

Choice: First Symbol | Preamble Symbol(s) | All Symbol(s) | All Burst Symbol(s);

Default: First Symbol.

Select OFDM symbols to participate the RMS power calculation, the RMS power will be downloaded to the device to adjust the actual output power.

The option "Preamble Symbol(s)" indicates that the RMS power of all symbols used by Preamble resource blocks is set to the reference power.

The option "All Symbol(s)" indicates that frame idle intervals participate the power calculation, and the option "All Burst Symbol(s)" excludes the idle intervals.

#### 4.7.4.3 Spectrum Control

**1. Baseband Filter**

To suppress the adjacent channel interference, the communication protocol usually regulates the spectrum masks to limit the spectrum leakage. It's a widely used solution to design a filter to achieve the requirement, and apply it to the modulated signals.

The software uses window function method to design lowpass FIR filters automatically, according to assigned filter length, cut-off frequency and window function type, and supports apply the FIR filter to the baseband signals generated.

**1) Filter Enabled**

Choice: On | Off ; Default: Off.

Set the baseband filter applied to the baseband signals or not.

If the parameter is set to Off, other settings of the baseband filter will be hidden.

**2) Filter Type**

Choice: Rectangle | Hanning | Flat Top | Blackman;

Default: Blackman.

Set the window function type applied to design the baseband filters.

**3) Filter Length**

Range: 1 to 2048 ; Default: 32.

Set the length of the baseband filter without account of oversampling.

The actual filter length equals to the parameter multiplies the Oversampling Ratio assigned in the Section 3, which determines the order of the filter and the process speed of the baseband filtering.

**4) Filter Cutoff Frequency**

Range: 0 to the half of the product of the System Sample Frequency times the Oversampling Ratio.

Default: 10MHz (IEEE STD 802.11a-1999).

Set the cut-off frequency of the baseband lowpass filter.

The cut-off frequency is counts from center frequency (DC) and the filter passband width is twice the cut-off frequency because of spectral symmetry.

The cut-off frequency is usually set larger than the half of the System Sample Frequency, or the valid spectrum data will be filtered and lost.

## 2. Windowing

The section explains the settings about windowing applied to OFDM baseband signals.

#### 1) Window Beta

Range: 0 to 0.5 ; Default: 0.005.

Set the window function length applied in the signal windowing process.

The length of the single edge of the window function equals to the Window Beta multiplies the actual FFT Length.

#### 2) Windowing Method


Choice: Centered at Symbol Boundary | Starting at Symbol Boundary

Default: Centered at Symbol Boundary

Set the windowing method applied in the windowing process.

### 4.7.5 Resource Mapping

The Section explains the settings in the Resource Mapping menu. Press **Resource Mapping** in the left window to enter parameter settings.

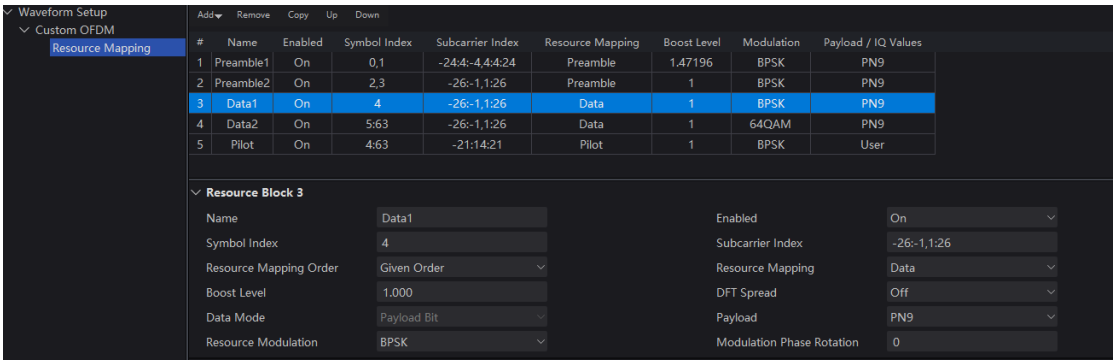


#### 4.7.5.1 Resource Block List

To configure the list of resource blocks, use the buttons above the list respectively to:

- Add a new resource block of assigned type at the end of the list.
- Remove the selected resource block.
- Copy the selected resource block and add it at the end of the list.
- Move the selected resource block up one line.
- Move the selected resource block down one line.

The list displays the settings of all resource blocks, and click one to select it and modify the its settings with the edit boxes and buttons below.

#### 4.7.5.2 Name

Set the name of the selected resource block.

#### 4.7.5.3 Enabled

Choice: On | Off ; Default: Off.

Set the resource block is used in the resource mapping and signal modulation or not.

If a resource block is set to disabled, the resource mapping and signal modulation will skip the resource block, other settings in the resource block will be invalid but reserved.

#### 4.7.5.4 Symbol Index

Set the symbols which the payload of selected resource block should be mapped to.

The Symbol Index should be given as resource groups introduced in the Section 4.7.1.4, and in the format given in the Section 4.7.6.2.

The parameter "Symbol Index" together with the parameter "Subcarrier Index" determines the resource units occupied by selected resource block.

#### 4.7.5.5 Subcarrier Index

Set the subcarriers which the payload of selected resource block should be mapped to.

The Subcarrier Index should be given as resource groups introduced in the Section 4.7.1.4, and in the format given in the Section 4.7.6.2.

The parameter "Symbol Index" together with the parameter "Subcarrier Index" determines the resource units occupied by selected resource block.

#### 4.7.5.6 Resource Mapping Order

Choice: Given Order | Resource Order ;

Default: Given Order.

Set the payload mapping order of selected resource block.

The option "Given Order" indicates that the payload IQ value sequence of the resource block is mapping to physical resources according to the order of resource units given in the parameter

"Symbol Index " and "Subcarrier Index".

The option "Resource Order" indicates that the mapping is according to the small-to-large order of the symbol and subcarrier indices of resource units.

Both mapping order is subcarrier-major mapping, meaning filling the subcarriers given in a single symbol first, then fill the subcarriers for next symbols.

#### 4.7.5.7 Resource Mapping

Choice: Preamble | Pilot | Data ;

Set the type of selected resource block.

#### 4.7.5.8 Boost Level

Range: 0.1 to 10 ; Default: 1.0 .

Set the boost level of the payload in selected resource block.

The payload IQ values will be multiplying the Boost Level before mapping to physical resources.

#### 4.7.5.9 DFT Spread

Choice: On | Off ; Default: Off.

Set DFT Spread is enabled or not in selected resource block.

#### 4.7.5.10 Data Mode

Choice: Payload Bit | IQ Values.

Set the payload data mode of selected resource block.

The option "Payload Bit" indicates that the payload IQ values are generated by modulating the payload bit patterns with certain linear digital modulation mode.

The option "IQ Values" indicates that the payload IQ values is directly given in the resource block setting.

#### 4.7.5.11 Payload


Choice: PN9 | PN15 | PN23 | User ;

Default: PN9.

Set the payload bit pattern type of selected resource block.

PN codes will be generated automatically for following modulation and payload generation, if PN code type is selected. Otherwise, a user-defined bit patterns should be inputted in the Custom Bit Pattern Editor. The Editor will pop up when the option "User" is clicked.

If the parameter "Data Mode" is set to "IQ Values", the parameter will be disabled and hidden.

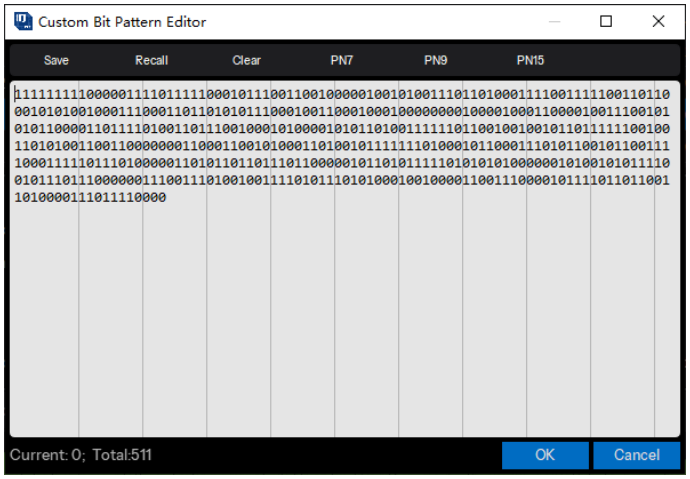


#### 4.7.5.12 Resource Modulation

Choice: BPSK | QPSK | 8PSK | 16QAM | 32QAM | 64QAM | 128QAM | 256QAM | 512QAM | 1024QAM | 2048QAM | 4096QAM ;

Default: BPSK.

Set the linear digital modulation type is applied to generate payload IQ values from given bit patterns.

If the parameter "Data Mode" is set to "IQ Values", the parameter will be disabled and hidden.

#### 4.7.5.13 Modulation Phase Rotation

Range: 0 to 360 degrees

Default: 0.

Set rotation phase of the modulated IQ values.


The software will rotate the modulated IQ values before payload mapping to physical resources, if the parameter "Data Mode" is set to "Payload Bit".

If the parameter "Data Mode" is set to "IQ Values", the parameter will be disabled and hidden.

#### 4.7.5.14 IQ Values

Click the "IQ Values" box to open the IQ Values Window, set payload IQ value sequence of selected resource block directly.

If the parameter "Data Mode" is set to "Payload Bit", the parameter will be disabled and hidden.

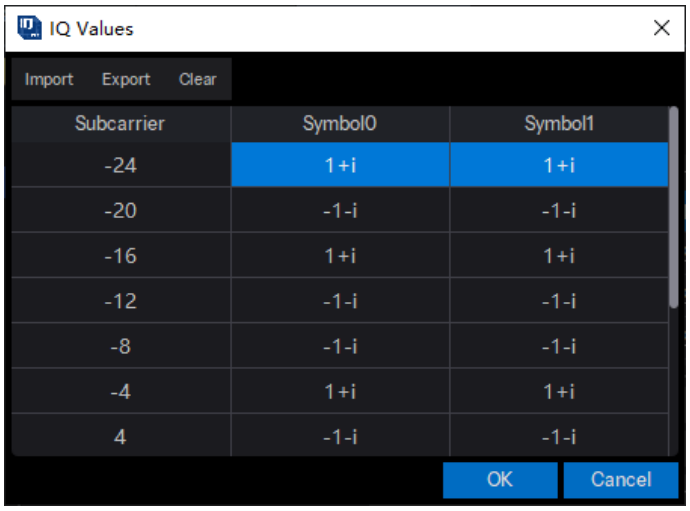


### 4.7.6 Appendix

#### 4.7.6.1 Integer Array Expressions

Integer arrays are given as formatted expressions, which is used for assigning symbol index lists and subcarrier index lists of resource groups, or symbols which cyclic prefix / suffix is applied.

The syntax format of formatted expressions supported are as follow:

1. A single integer value, e.g., 0, 1, 2.
2. Two integer values separated by a colon (:), indicating all integer values between the two numbers, including the numbers directly given in the expressions. e.g., -3:2 means -3, -2, -1, 0, 1, 2.
3. Three integer values separated by colons (:), like A:B:C (A, B, C are integer values), indicating the integer values at intervals of the value C from the value A to the value B. e.g., -4:3:8 means -4, -1, 2, 5, 8.

   The value B should have the same sign as the difference between C and A (C-A), or the expressions is considered illegal.

   The value A is guaranteed to be included in the integer array. The value C will NOT be included if the difference between C and A (C-A) is not divisible by the value B.
4. Five integer values separated by colons (:), like A:B:C:D:E (A, B, C, D are integer values, E is 0 or 1).

The expression means the combination of certain numbers of integer arrays, and the number of integer arrays is assigned to be the value D.

The initial integer array is the same as the one parsed from A:B:C, the following array are generated from every element in the former array increment by 1.

The value A must be larger than the value C. The value B and the value D must be positive. The expressions violate the rules will be considered as illegal.

The value E indicates the integer arrays to skip zero or not. It can be omitted, like A:B:C:D. The value E is considered as 0 by default in this case.

For example, to parse the formatted expression -6:3:6:2:1, generate the initial array -6,-3, 0, 3, 6;
Then the number of arrays is assigned to be 2, the following array is generated as -5,-2, 1, 4, 7;
The skip zero flag is assigned to be 1, so skip zero and get array -6, -3, 1, 4, 7and array -5, -2, 2, 5, 8;
At last, combine the arrays to get indicated integer array -6, -5, -3, -2, 1, 2, 4, 5, 7, 8.

Two or more formatted expressions separated by a comma (,) indicate a single integer array, which includes all elements of integer arrays parsed from expressions.

#### 4.7.6.2 Resource Group Expressions

To show resource units occupied by resource blocks, resource group is introduced, and is given by symbol groups and subcarrier groups respectively. To get more information about resource groups, refer to Section 4.7.1.4.

Every resource group is assigned an ID, symbol / subcarrier groups with the same ID will combine into the resource group. The expressions of symbol / subcarrier groups should be separated by commas (,).

The syntax format of symbol / subcarrier groups is as follow:

{n|xxxxx}


where non-negative integer value n is the group ID, xxxxx is the formatted expressions to indicate symbol / subcarrier index lists, whose syntax format is given in Section 4.7.6.1.

The group ID can be omitted, like {xxxxx} or xxxxx, which is considered as 0 in this case, and the resource group is considered as a global group.


It's allowed to give a single symbol / subcarrier group in two or more expressions separated by commas (,) with the same group ID.

## 4.8 Custom IQ

Custom IQ includes Digital modulation, Custom modulation, Multitone and LFM sweep. You can click **Custom IQ** on the homepage to enter the Custom IQ setting interface.

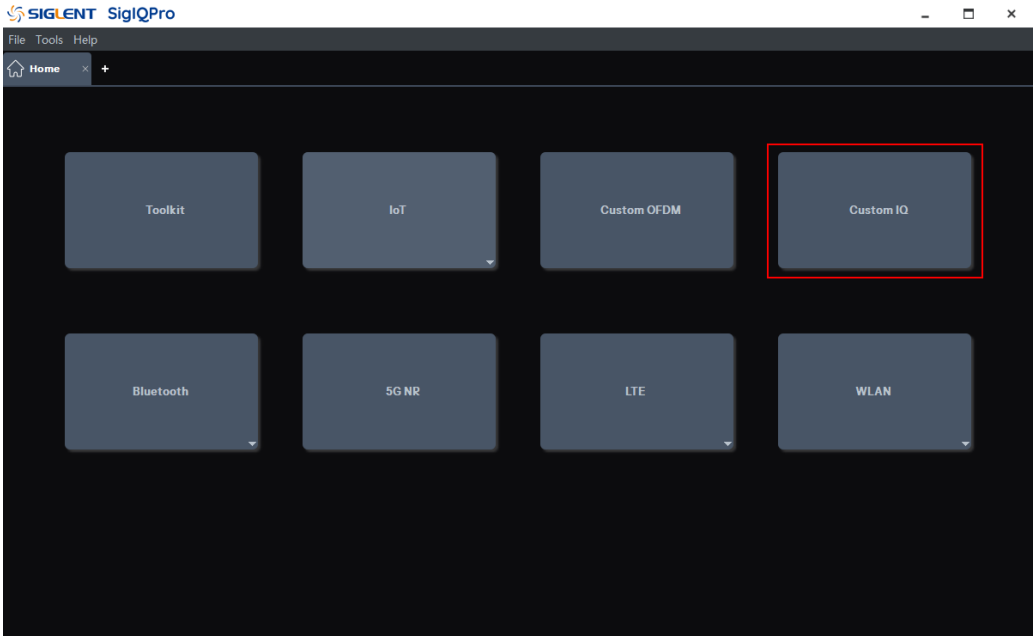


Waveform setup panel is used for setting parameters of a waveform, such as Data Source, Modulation and Filter.

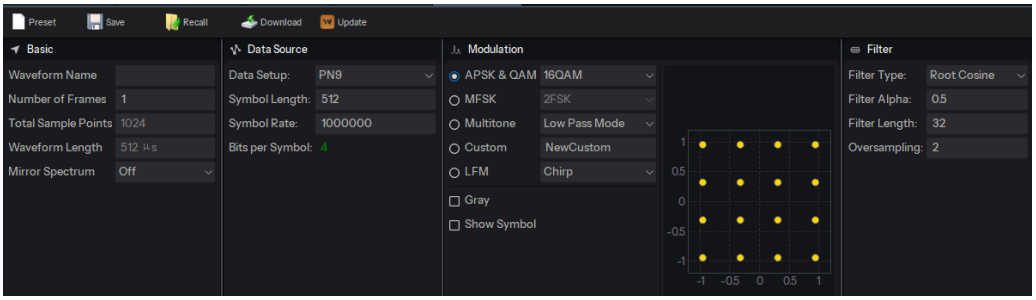


### 4.8.1 Basic

#### 4.8.1.1 Waveform Name

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

#### 4.8.1.2 Number of Frames

Range: 1 to 300 ; Default: 1.

Set the number of frames included in the generated waveform.

#### 4.8.1.3 Total Sample Points

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

#### 4.8.1.4 Waveform Length

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

#### 4.8.1.5 Mirror Spectrum

Choice: On | Off ; Default: Off.

Select setting the spectrum of the baseband signal into mirror symmetry or not.

The mirror spectrum is implemented by inversing the Q path of the baseband IQ signal.

### 4.8.2 Data Source

Data Source panel sets parameters for symbol data that to be modulated.

#### 4.8.2.1 Data Setup

Select a data source type for modulation.

Choices: PN7 | PN9 | PN15 | PN23 | PN31 | User File | Custom Bit Pattern ;

Default: PN9.

- PN7 | PN9 | PN15 | PN23 | PN31:


When selecting “PN7 | PN9 | PN15 | PN23 | PN31” as data source type, software generates data source bit automatically.

- User File:

When selecting “User File” as data source type, a file selection dialog box pops up for you to select a TXT (*.txt) file as input data bits. In the user data file, only 0 and 1 is acceptable. If there is any illegal value in it, an error message box will pop up.

- Custom Bit Pattern:

When selecting “Custom Bit Pattern” as data source type, a Pattern Editor window opens for data bits editing. You can input 0|1 in the input box manually or insert PN7|PN9|PN15 data bits by corresponding button, and you can also save the data to a new file and recall data from an existing file. Use “Clear” button to clear the data edit box.

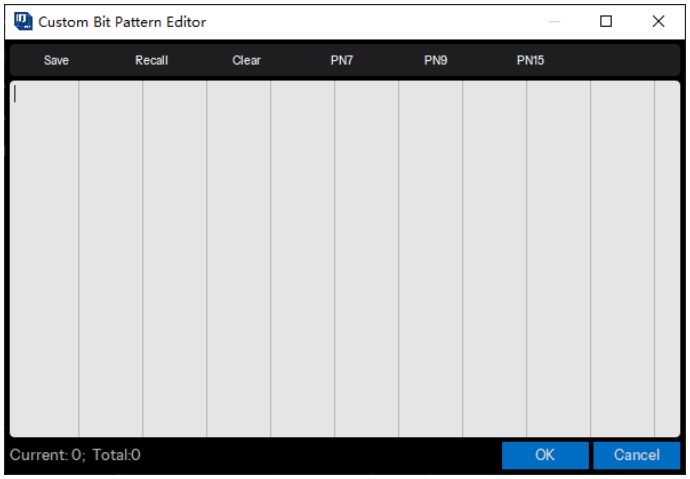


#### 4.8.2.2 Symbol Length

Set the length of modulated symbols.

Range: 100 to 100000;

Default: 512.

#### 4.8.2.3 Symbol Rate

Set the symbol rate (symbols per second) of the waveform.

Range: 250 to (8e+09/Oversampling) Symbol/s;

Default: 1000000 Symbol/s.

#### 4.8.2.4 Bits Per Symbol

Display the number of bits contained in one modulated symbol. It is read-only, not settable.

### 4.8.3 Modulation

Modulation panel sets parameters for user selected modulation type.

Choices: APSK & QAM | MFSK | Multitone | Custom | LFM;

Default: APSK & QAM.


#### 4.8.3.1 APSK & QAM

Select a type in APSK & QAM category for modulation.

Choices: 2ASK | PR-ASK | BPSK | OQPSK | QPSK | 8PSK | DBPSK | DQPSK | PI/4-DQPSK | D8PSK | PI/8-D8PSK | 16APSK | 32APSK | 8QAM | 16QAM | 32QAM | 64QAM | 128QAM | 256QAM | 512QAM | 1024QAM | 2048QAM | 4096QAM;

Default: 16QAM.

After a modulation type is selected, the constellation of current modulation is displayed on right side of the panel:

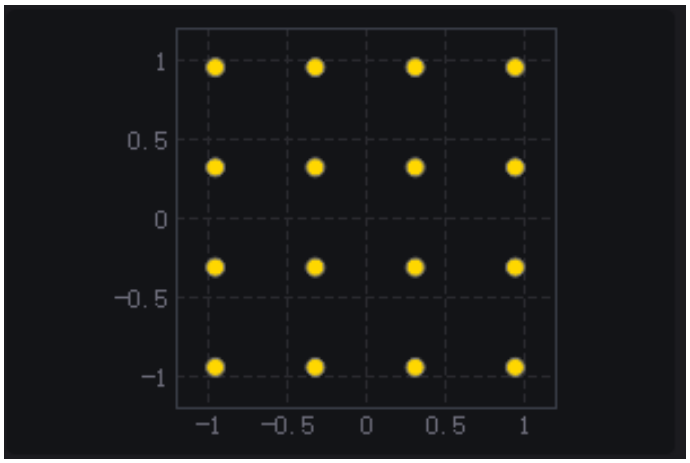


You can double click on the constellation display to show a zoomed in window of the constellation.

**Gray**

Turn ON or OFF the Gray code for the constellation data.

Default: OFF.

**Show Symbol**

Turn ON or OFF the Symbol display of the constellation diagram.

Default: OFF.

### 4.8.3.2 MFSK

Select a type in MFSK category for modulation.

Choices: 2FSK | 4FSK | 8FSK | 16FSK | MSK;

Default: 2FSK.

- **2FSK | 4FSK | 8FSK | 16FSK**

When selecting 2FSK | 4FSK | 8FSK | 16FSK as current modulation type, FSK Deviation setting is displayed on the bottom of the panel.


**FSK Dev (Hz)**

Set frequency deviation for FSK modulation in Hz.

Range: 0 to (0.8 * Symbol Rate * Oversampling) Hz;

Default: 600000 Hz.

The Symbol and FSK deviation table is displayed on the right side of the panel:

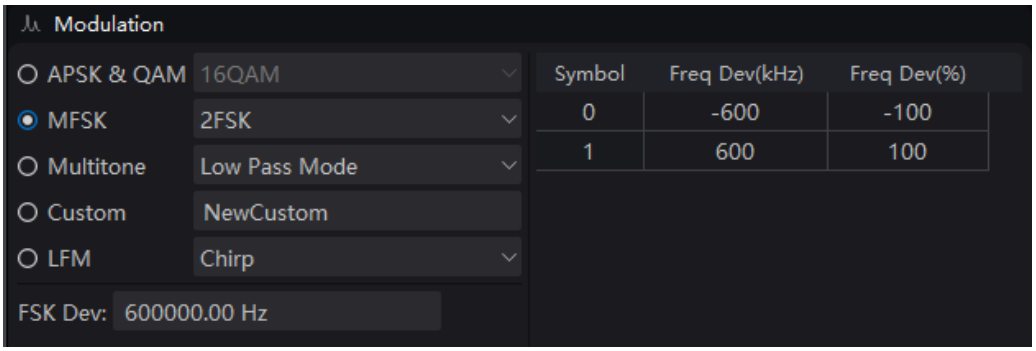



- **MSK**

When selecting MSK as current modulation type, Filter type can only be selected as Gaussian.

### 4.8.3.3 Multitone

Select Multitone as current modulation type. Filter setting panel is invisible under multitone modulation. The settings for Multitone modulation are displayed on the right side of the panel:

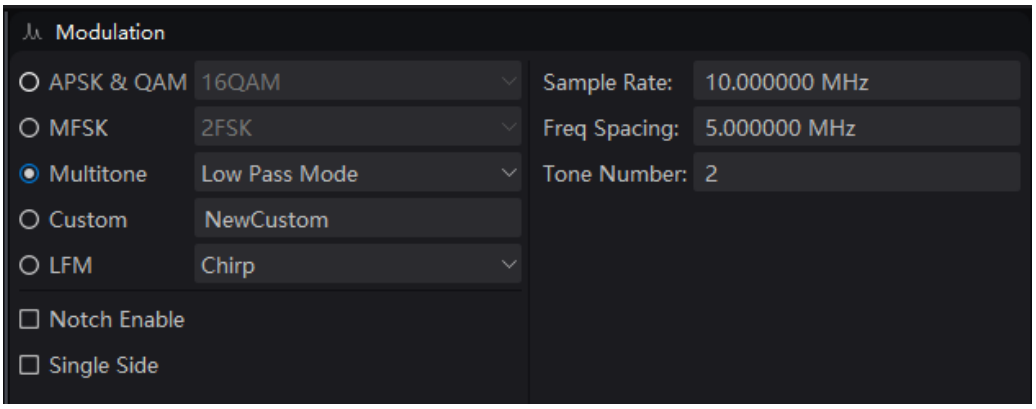


### 1) Low Pass Mode

- **Sample Rate**

Set sample rate of multitone modulation in MHz.

Range: 500 Hz to 4000 MHz;

Default: 10 MHz.

- **Freq Spacing**

Set frequency spacing of multitone modulation in MHz.

Range: 0 to (Sample Rate / 1.28) MHz;

Default: 5 MHz.

- **Tone Number**

Set tones number of multitone modulation.

Range: 1 to 10000;

Default: 2.

### 2) Band Mode

- **Sample Rate**

Set sample rate of multitone modulation in MHz.

Range: 500 Hz to 4000 MHz;

Default: 10 MHz.

- **Start Freq**

Set start frequency of multitone modulation in MHz.

Range: 0 to (Sample Rate / 2.56) MHz;

Default: 2 MHz.

- **Stop Freq**

Set frequency spacing of multitone modulation in MHz.

Range: (start freq) MHz to (Sample Rate / 2.56) MHz;

Default: 2 MHz.

- **Tone Number**

Set tones number of multitone modulation.

Range: 1 to 10000;

Default: 2.

**3) Notch Enable**

Turn ON or OFF the multitone notch.

Default: OFF.

- **Notch Start**

Set notch start of multitone modulation in MHz.

Range: 0 to (Sample Rate / 2) MHz; Default: 0 MHz.

- **Notch Stop**

Set notch stop of multitone modulation in MHz.

Range: (notch start) to (Sample Rate / 2) MHz; Default: 0 MHz.


**4) Single Side**

Turn ON or OFF single side modulation for multitone.

Default: OFF.

#### 4.8.3.4 Custom

Set a custom constellation for modulation. After selecting Custom modulation type, a custom constellation editing window is displayed:

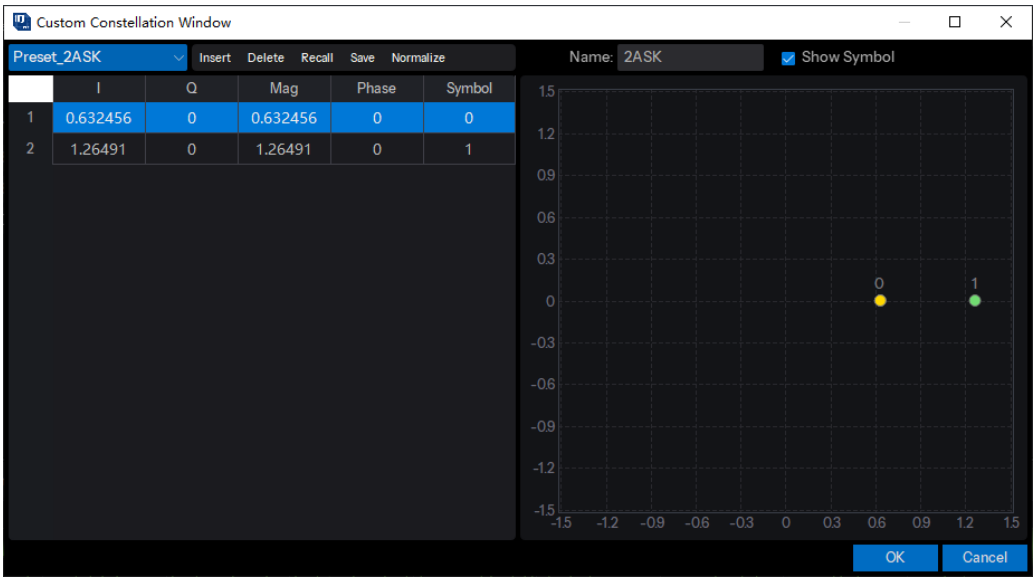



In the custom constellation editing window, you can preset the constellation data to a known modulation type first by pressing Preset_2ASK buttons, then you can insert or delete constellation points and edit the IQ data for each constellation point manually. You can also recall constellation data from an existing file and save the edited constellation data to a new file. "Normalize" button is used to normalize all constellation data for RMS value = 1.

On the right side of the window, it shows the constellation display of current editing. You can input a name for the constellation, this name will be displayed beside the "Custom" modulation item after you click "OK" button. You can also turn ON or OFF symbol display on the constellation display by clicking "Show Symbol" button.

Note: When editing the constellation points, the number of points must be a value of power of 2 and the Symbol values cannot be duplicated, otherwise there will be error message when you click "OK" button.

#### 4.8.3.5 LFM

Select LFM as current modulation type. Filter setting panel is invisible under LFM modulation. The settings for LFM modulation are displayed on the right side of the panel:

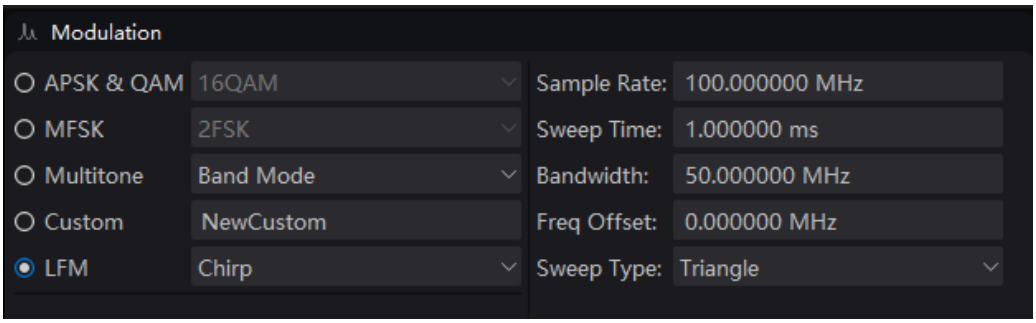





### 1) Chirp

Single segment waveform.

- **Sample Rate**

Set sample rate in MHz.

Range: 500 Hz to 12000 MHz; Default: 100 MHz.

- **Sweep Time**

Set sweep time in ms.

Range: 10 ns to 1s; Default: 1 ms.

- **Bandwidth**

Set sweep bandwidth of LFM modulation in MHz.

Range: 100 Hz to (Sample Rate) MHz; Default: 50 MHz.

- **Freq Offset**

Set freq offset of LFM modulation in MHz.

Range: (-bandwidth / 2) MHz to (bandwidth / 2) MHz;

Default: 50 MHz.

- **Sweep Type**

Choices: Triangle | Up | Down;

Default: Triangle.

**2) Customized Chirp**

Multi-segment waveform.

- **Sample Rate**

Set sample rate of LFM modulation in MHz.

Range: 500 Hz to 12000 MHz;

Default: 100 MHz.

- **Segment**

Enter the number of chirp segments.

Range: 1 to 100; Default: 3.

- **Total Sweep Time**

Display the total sweep time for all the chirp segments.

- **Frequency Start**

Enter the start frequency for current chirp segment.

Range: ( - Sample Rate / 2) MHz to (Sample Rate / 2) MHz.

- **Frequency End**

Enter the end frequency for current chirp segment.

Range: ( - Sample Rate / 2) MHz to (Sample Rate / 2) MHz.

- **Duration**

Enter the duration for current chirp segment.

Range: 10 ns to 1 s

### 4.8.4 Filter

Set the filter parameters for current modulation.

#### 4.8.4.1 Filter Type

Set filter type for current modulation.

Choices: None | Gaussian | RaisedCosine | RootCosine | HalfSine;

Default: Gaussian for MSK and RootCosine for all other modulation types.

Note: For MSK modulation, only Gaussian filter type is supported. For HalfSine filter, only OQPSK modulation type is supported.

#### 4.8.4.2 Filter Alpha/BT

Set the Alpha factor of the filter (BT of Gaussian filter).

Alpha Range: 0.01 ~ 1;

BT Range: 0.1 ~ 5;

Default: 0.5 .

#### 4.8.4.3 Filter Length

Set length of filter in symbols.

Range: 1 ~ min (Symbol Length, 512) ;

Default: 32.

#### 4.8.4.4 Oversampling


Set the oversampling ratio of the waveform. The waveform Sample Rate is determined based on Symbol Rate and Oversampling ratio.

Range: 2 - 32;

Default: 2.

Notes: For OQPSK modulation, the oversampling must be even. For HalfSine filter, the oversampling must be more than 8.

### 4.8.5 Waveform Display

After setting all parameters for modulation and click the 


button on the top of the window, the modulated waveform is displayed on the lower half of the main window. You can click

"Spectrum" tab to display the Frequency domain waveform, click "I | Q" tab to display the Time domain waveform alternatively, click "Frequency" tab to display the Frequency waveform.

When the Mouse is on waveform display, you can use the scroll button of your Mouse to zoom in or zoom out the waveform plots. You can also click "Update" button to restore the default display of the plots.

#### 4.8.5.1 IQ Waveform Display


After clicking "I | Q" tab, the time domain plot of modulated IQ data is displayed.

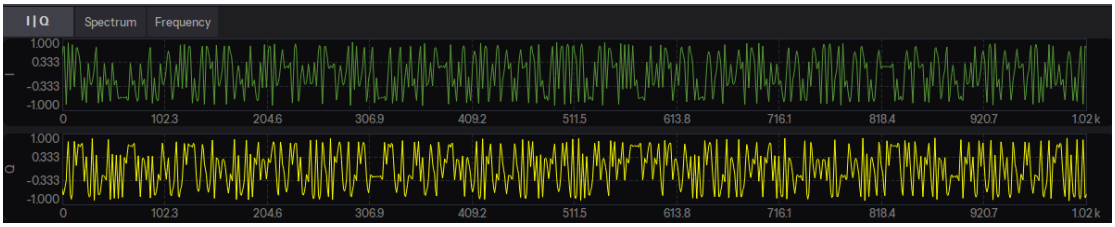


The I/Q data plots are displayed separately in two graphs. The horizontal coordinate shows the symbol values and the vertical coordinate shows the amplitude values of I/Q data.

#### 4.8.5.2 FFT Spectrum Display

After clicking "Spectrum" tab, the frequency domain plot of modulated IQ data by FFT is displayed.

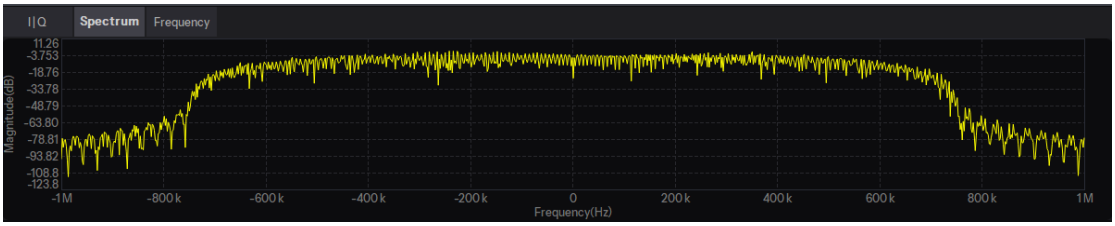



The horizontal coordinate shows the frequency values in Hz and the vertical coordinate shows the Magnitude values in dB.

#### 4.8.5.3 Frequency Diagram

After clicking "Frequency" tab, the frequency diagram is displayed.

This diagram is displayed only when the modulation mode is LFM.

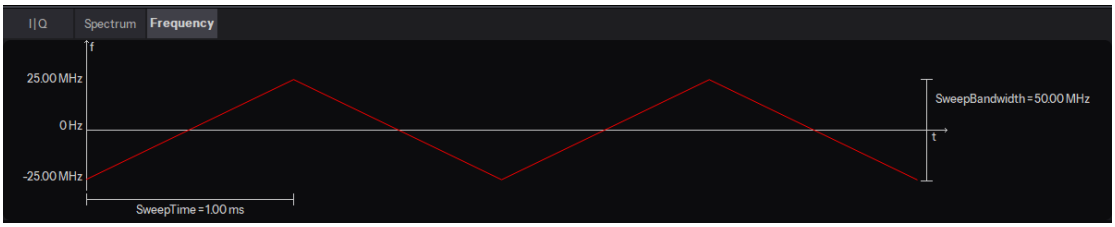


Information such as sweep time, sweep frequency and sweep bandwidth are clearly displayed in the frequency plot.


## 4.9 Bluetooth BR+EDR


Bluetooth devices operate in the unlicensed 2.4 GHz ISM (Industrial Scientific Medical) band. A frequency hop transceiver is applied to combat interference and fading.

Two modulation modes are defined. A mandatory mode, called Basic Rate, uses a shaped, binary FM modulation to minimize transceiver complexity. An optional mode, called Enhanced Data Rate, uses PSK modulation and has two variants: π/4-DQPSK and 8DPSK. The symbol rate for all modulation modes is 1 Msym/s. The gross air data rate is 1 Mb/s for Basic Rate, 2 Mb/s for Enhanced Data Rate using π/4-DQPSK and 3 Mb/s for Enhanced Data Rate using 8DPSK.

Protocol version: 5.0

You can click **Bluetooth** -> **Bluetooth BR+EDR** on the homepage to enter the BR/EDR Bluetooth setting interface.

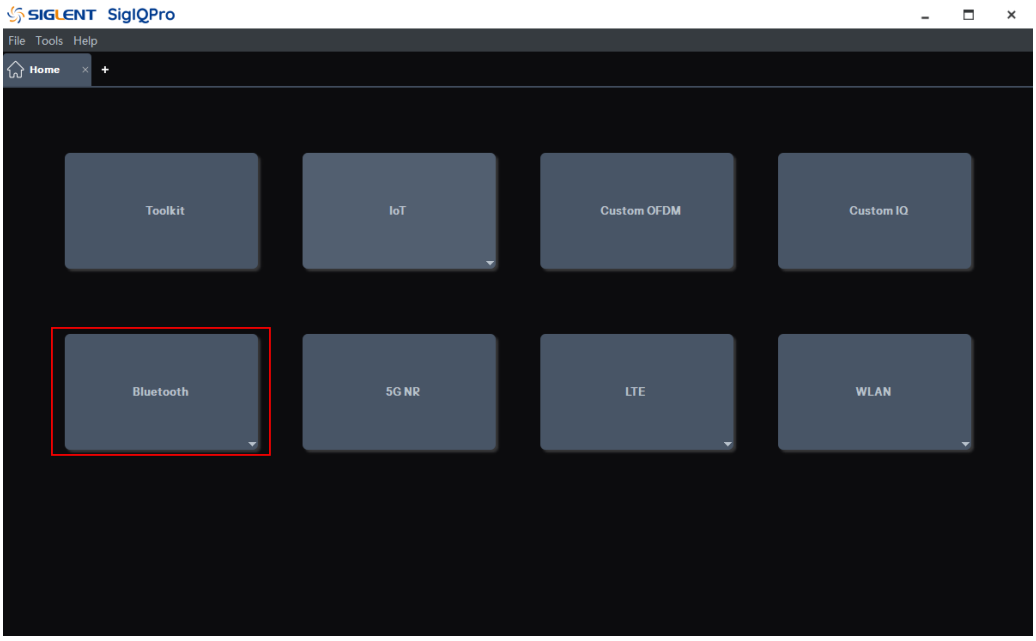

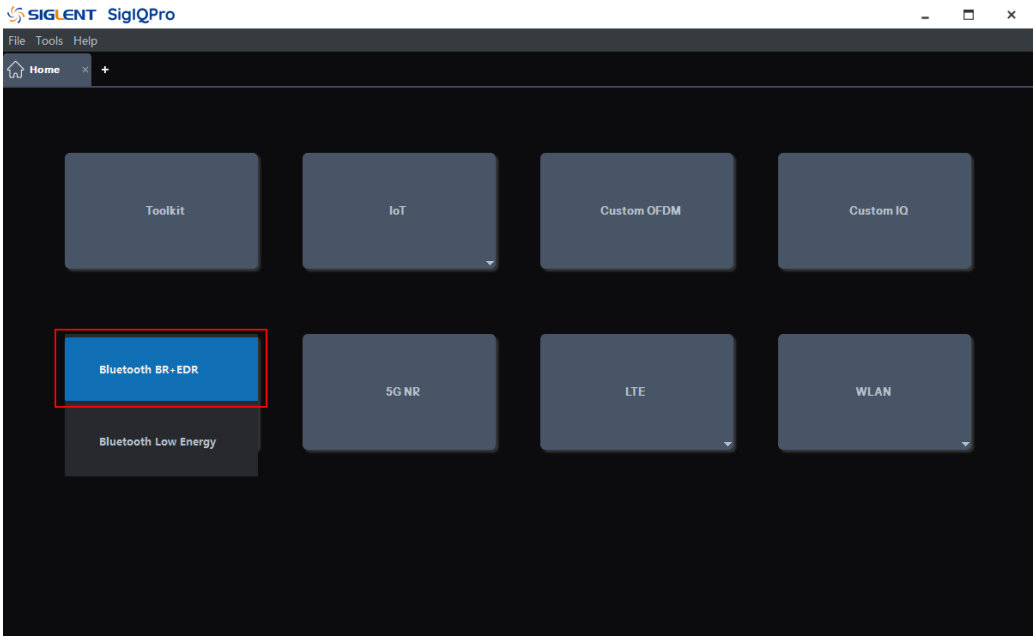


### 4.9.1 Parameters Setup

Press **Parameters Setup** in the left window to enter parameter settings.

#### 4.9.1.1 Basic

**1. Waveform Name**

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Total Sample Points**

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

**3. Waveform Length**

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

**4. I/Q Map**

Choice: Normal | Inverted ; Default: Normal.

Use the drop-down menu to select a normal or inverted I/Q signal. If invert is selected, the I signal is

unchanged and the Q is reversed.

### 5. Oversampling Ratio

Range: 2 to 100 ; Default: 10.


Set the number of samples calculated per I/Q symbol.


#### 4.9.1.2 Bursting and Power Ramp

### 1. Bursting Active

Choice: On | Off ; Default: On.

Use the drop-down menu to enable or disable the bursting in the waveform. When enabled, the packet transmission timing of the test signal adheres to the Bluetooth TDD slot structure for the selected packet type.

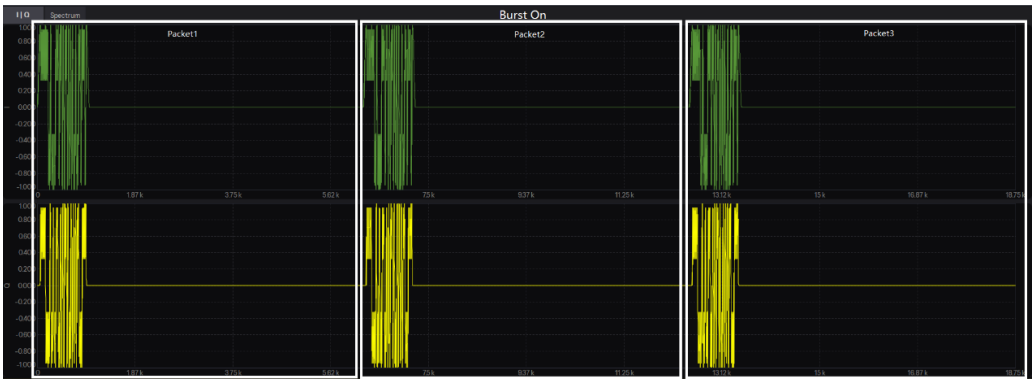

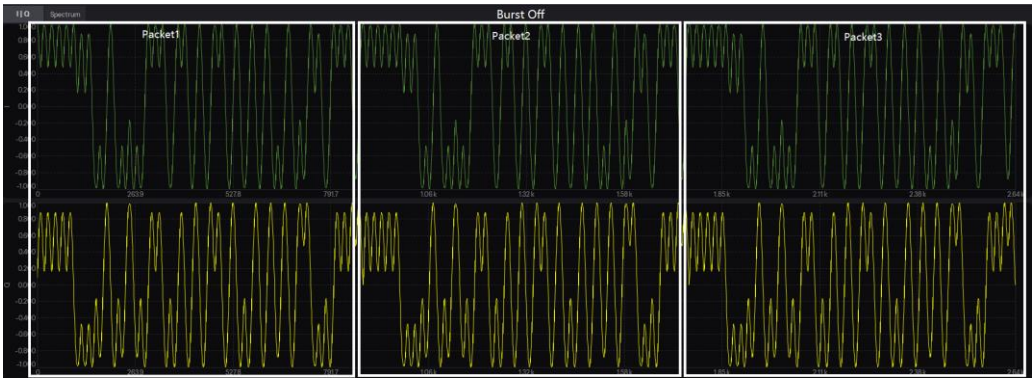
### 2. Power Ramp

Range: 1 to 10 us ; Default: 6 us.

Set the power ramp up and power ramp down length of the burst.

The power ramp up refers to the time when the carrier frequency ramped from idle power to transmitted power. The power ramp is shaped with a cosine function.


### 3. Ramp Settling

Range: 1 to 20 us ; Default: 6 us.

Set the Ramp Settling length of the burst.

The Ramp Settling refers to the time when the carrier frequency ramped from idle power to transmitted power and remains stable until it begins to transmit the first symbol.

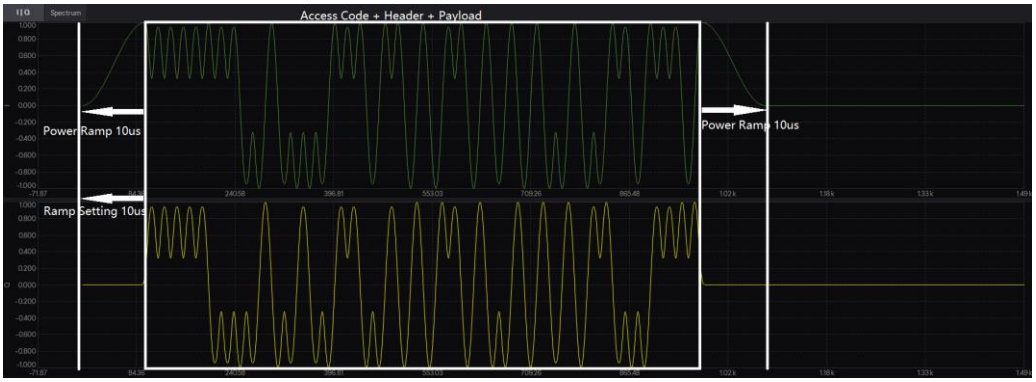


#### 4.9.1.3 Impairments

### 1. Modulation Index

Range: 0.05 to 0.95 ; Default: 0.315.

Set the modulation index of GFSK.

Specifies the modulation index used by GFSK, which is the ratio of peak-to-peak frequency deviation to the bit rate.

### 2. Frequency Drift

#### 1) State

Choice: On | Off ; Default: Off.

Use the drop-down menu to enable or disable the frequency drift impairment applied to the packet. This impairment adds a dynamic error to the transmission frequency. It is used to simulate the

frequency drift impairment repeats at the beginning of each timeslot and occurs over a time period equal to the packet duration.

#### 2) Type

Choice: Linear | Sine ; Default: Linear.

Use the drop-down menu to select the type of frequency drift applied to the Bluetooth packet.

#### 3) Deviation

Range: -100 to 100 kHz ; Default: 0 kHz.

Set the maximum deviation of frequency drift impairment.

#### 4) Rate

Choice: 300 Hz | 500 Hz | 1.6 kHz | 10 kHz;

Default: 1.6 kHz.

Use the drop-down menu to select the frequency drift rate.

### 3. Frequency Offset

Range: -200 to 200 kHz ; Default: 0 kHz.

Sets the static offset of the carrier frequency. This static offset is used to simulate a Bluetooth device transmitting at a frequency slightly offset from the specified carrier.

### 4. Symbol Timing Error

Range: -50 to 50 ppm ; Default: 0 ppm.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the Bluetooth signal.

It is used to simulate a Bluetooth device transmitting at a slight deviation in the sampling clock.

### 5. Relative Power

Range: -10 to 10 dB ; Default: 0.00 dB.

Set the average power level of the synchronization sequence and payload relative to the access code and header portion during transmission.

#### 4.9.1.4 Dirty Transmitter

**1. State**

Choice: On | Off ; Default: Off.


Use the drop-down menu to enable or disable the dirty transmitter test. When this setting is set to On, the Dirty Transmitter Impairments Setup window appears.

**2. Number of Packet per Set**

Range: 1 to 50 ; Default: 1.

Set the number of packets for each set of parameters displayed in the Dirty Transmitter Window.

**3. Dirty Transmitter Window**

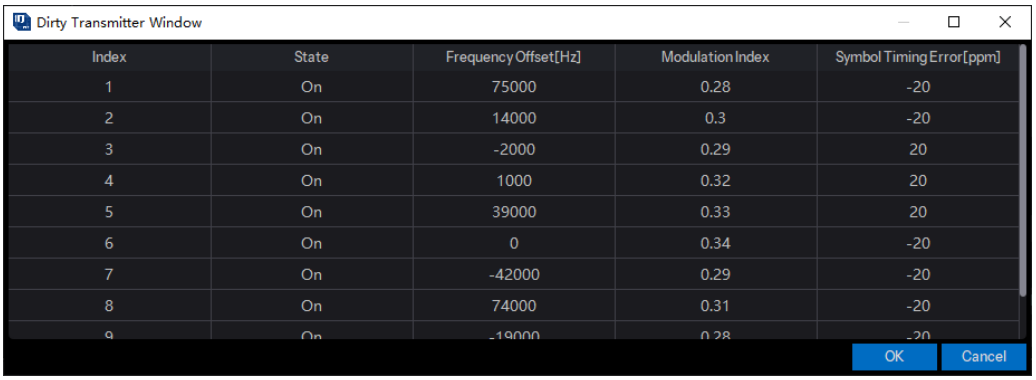


**1) Index**

This cell displays the impairment set index number.

**2) State**

Use this cell to enable or disable a specified impairment set in dirty transmitter test.

**3) Frequency Offset [Hz]**

Range: -200 to 200 kHz.

Set the static offset of the carrier frequency. This static offset is used to simulate a Bluetooth device transmitting at a frequency slightly offset from the specified carrier.

**4) Modulation Index**

Range: 0.05 to 0.95.

Specify the modulation index used by GFSK, which is the ratio of peak-to-peak frequency deviation

to the bit rate.

#### 5) Symbol Timing Error [ppm]

Range: -50 to 50.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the Bluetooth signal. It is used to simulate a Bluetooth device transmitting at a slight deviation in the sampling clock.

### 4.9.1.5 Frequency Hopping

#### 1. State

Choice: On | Off ; Default: Off.

Use the drop-down menu to enable or disable frequency hopping.

#### 2. Hop Selection

Choice: Selection Kernel | User Defined;

Default: Selection Kernel.

Use the drop-down menu to set the hop selection type.

Note: This setting can be edited only when the Hopping State is turned On. “Selection Kernel” means that the hopping sequence will be calculated using basic hop selection kernel, which uses ’CLK Start’ and ’UAP/LAP’ as input parameters.

“User Defined” means that the user input sequence will be used as hopping sequence.

#### 3. CLK Start

Range: 0x0000000 to 0xFFFFFFF; Default: 0x0000000.

Set the starting value of CLK as an input of kernel hop selection.

Note: This setting can be edited only when the Hopping State is turned On and Hop Selection is Selection Kernel.

#### 4. User Sequence

Set the user defined hopping sequence using comma as separator.

Note: This setting can be edited only when the Hopping State is turned On and Hop Selection is User Defined.

#### 5. Hop Channel

Range: 0 to 78 ; Default: 0.

Set the fixed frequency channel index used for packet transmission.

Note: This setting can be edited only when the Hopping State is turned Off.

### 4.9.2 Packet

Press **Packet** in the left window to enter parameter settings.

#### 4.9.2.1 General Setting

#### 1. Bluetooth Mode

Choice: Basic Rate | Enhanced Data Rate;

Default: Basic Rate.

Use the drop-down menu to select the Bluetooth mode of the packet.

#### 2. Transport Mode

Choice: ACL | eSCO | SCO (Basic Rate Only);

Default: ACL.

Use the drop-down menu to select the Transport Mode of the packet.

#### 3. Packet Type

Use the drop-down menu to select the packet type.

| Type code | Slot occupied | SCO (1Mbps) | eSCO (1Mbps) | eSCO (2-3Mbps) | ACL (1Mbps) | ACL (2-3Mbps) |
|---|---|---|---|---|---|---|
| **0000** | 1 | NULL | NULL | NULL | NULL | NULL |
| **0001** | 1 | POLL | POLL | POLL | POLL | POLL |
| **0010** | 1 | FHS | — | — | FHS | FHS |
| **0011** | 1 | DM1 | — | — | DM1 | DM1 |
| **0100** | 1 | — | — | — | DH1 | 2-DH1 |
| **0101** | 1 | HV1 | — | — | — | — |
| **0110** | 1 | HV2 | — | 2-EV3 | — | — |
| **0111** | 1 | HV3 | EV3 | 3-EV3 | — | — |
| **1000** | 1 | DV | — | — | — | 3-DH1 |
| **1001** | 1 | — | — | — | AUX1 | AUX1 |
| **1010** | 3 | — | — | — | DM3 | 2-DH3 |

| | | | | | | |
|---|---|---|---|---|---|---|
| **1011** | 3 | — | — | — | DH3 | 3-DH3 |
| **1100** | 3 | — | EV4 | 2-EV5 | — | — |
| **1101** | 3 | — | EV5 | 3-EV5 | — | — |
| **1110** | 5 | — | — | — | DM5 | 2-DH5 |
| **1111** | 5 | — | — | — | DH5 | 3-DH5 |
| **n/a** | 1 | ID | ID | ID | ID | ID |

#### 4. Occupied Slots

Display the number of time slots occupied by the specified packet.

#### 5. Modulation Type

Display the modulation type applied to the specified packet.

- GFSK: Basic Rate
- GFSK+ DQPSK: Enhanced Data Rate (2Mbps)
- GFSK+ D8PSK: Enhanced Data Rate (3Mbps)

### 4.9.2.2 Packet Setting

#### 1. Packet Data Type

Choice: Standard | All Data ;

Default: Standard.

Use the drop-down menu to select the packet data type.

- Standard: Uses packet type information to generate packet data.
- All Data: The package structure is filled with raw data without regard to package type information.

#### 2. Data Whitening

Choice: On | Off;

Default: Off.

Use the drop-down menu to set the data whitening state of the packet payload.

Before transmission of all packets both the header and the payload shall be scrambled with a data whitening word in order to randomize the data from highly redundant patterns and to minimize DC bias in the packet. The scrambling shall be performed prior to the FEC encoding.

### 3. BD_ADDR

Range: 0x000000000000 to 0xFFFFFFFFFFFF;

Default: 0x000000000008.

Display the Bluetooth Device Address in hexadecimal form. Each Bluetooth device shall be allocated a unique 48-bit Bluetooth device address (BD_ADDR). This address shall be obtained from the IEEE Registration Authority. The address is divided into three fields: LAP, UAP and NAP. The structure of BD_ADDR is as follows:

LSB → MSB

| LAP | | | | | | UAP | | NAP | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 0000 | 0001 | 0000 | 0000 | 0000 | 0000 | 0001 | 0100 | 0111 | 1011 | 0011 | 0101 |

### 4. LAP

Range: 1x000000 to 0xFFFFFF;

Default: 0x000008.

This 24-bit field shall contain the lower address part of the device.

### 5. UAP

Range: 0x00 to 0xFF;

Default: 0x00.

This 8-bit field should contain the upper address part of the device.

### 6. NAP

Range: 0x0000 to 0xFFFF;

Default: 0x0000.

This 16-bit filed should contain the non-significant address part of the device.

### 7. LT_ADDR

Range: 0 to 7; Default: 1.

Set the logical transport address in the packet header.

The 3-bit LT_ADDR field contains the logical transport address for the packet. This field indicates the destination slave (or slaves in the case of a broadcast) for a packet in a master-to-slave transmission slot and indicates the source slave for a slave-to-master transmission slot.

### 8. FLOW

Range: 0 to1 ;

Default: 1.

Set the flow control bit in the packet header.

The FLOW bit is used for flow control of packets over the ACL logical transport. When the RX buffer for the ACL logical transport in the recipient is full, a STOP indication (FLOW=0) shall be returned to stop the other device from transmitting data temporarily. The STOP signal only affects ACL packets. Packets including only link control information (ID, POLL, and NULL packets), SCO packets or eSCO packets can still be received. When the RX buffer can accept data, a GO indication (FLOW=1) shall be returned. When no packet is received, or the received header is in error, a GO shall be assumed implicitly. In this case, the slave can receive a new packet with CRC although its RX buffer is still not emptied. The slave shall then return a NAK in response to this packet even if the packet passed the CRC check.

The FLOW bit is not used on the eSCO logical transport and shall be set to one on transmission and ignored upon receipt. The FLOW bit is reserved for future use on the CSB logical transport.

### 9. ARQN

Range: 0 to 1 ;

Default: 0.

Set the ARQ control bit in the packet header.

The 1-bit acknowledgment indication ARQN is used to inform the source of a successful transfer of payload data with CRC, and can be positive acknowledge ACK or negative acknowledge NAK.

### 10. SEQN

Range: 0 to 1 ;

Default: 0.

Set the sequential number index in the packet header.

In Multiple Packet distribution case, the SEQN bit will be set automatically. In the first CRC data packet at the start of the connection, SEQN shall be set to 1. If a new packet is sent, the value of SEQN will be toggled. If the number of total packets is not even, a padding packet will be added to keep the SEQN toggling rule.

#### 4.9.2.3 Payload Setting

**1. Payload Length**

Set the number of bytes for the payload of the Bluetooth packet. If the packet has a payload header, it indicates the length field of the header.

**2. Payload Data**

Choice: PN9 | PN15 | USER ; Default: PN9.

Use the drop-down menu to set the type of packet payload.

When Data Continuous is set to ON and PN9 or PN15 is selected, the software automatically configures the Length and Repetitions fields. The number of packets required to accommodate the selected continuous PN pattern is also automatically determined and updated the number of bits.

If USER is selected as the data pattern, the number of bits displayed in the Data Length field is equal to the length of the user data multiplied by Data Repetition. The maximum number of bits allowed by the packet type. Any remaining bits in the user data file beyond the maximum amount will be truncated.

Note: This parameter is displayed only when the current packet contains the payload data field.

**3. LLID**

Range: 0 to 3 ; Default: 2.

Set the logical link indication in the packet payload header.

Note: This parameter is displayed only when the current packet contains the payload header field.

**4. FLOW**

Range: 0 to 1 ; Default: 1.

The flow indicator in the payload is used to control the flow at the L2CAP level.

It is used to control the flow per logical link. FLOW=1 means flow-on (GO) and FLOW=0 means flow-off (STOP). After a new connection has been established the flow indicator shall be set to GO. When a device receives a payload header with the flow bit set to STOP, it shall stop the transmission of ACL packets before an additional amount of payload data is sent.

Note: This parameter is displayed only when the current packet contains the payload header field.

**5. EIR**

Range: 0 to 1 ; Default: 0.

Set the extended inquiry response packet following indication bit in the FHS packet.

This bit shall indicate that an extended inquiry response packet may follow.

Note: This parameter is displayed only when the current packet is the FHS packet.

### 6. SR

Choice: R0, R1, R2, Reserved;

Default: R0.

Set the scan repetition mode in the FHS packet.

This 2-bit field is the scan repetition filed and indicates the interval between two consecutive page scan windows.

Note: This parameter is displayed only when the current packet is the FHS packet.

### 7. Class Of Device

Range: 0x000000 to 0xFFFFFF;

Default: 0x000000.

Set the class of Bluetooth device.

This 24-bit field shall contain the class of device of the device that sends the FHS packet. This field is defined in Bluetooth Assigned Number.

Note: This parameter is displayed only when the current packet is the FHS packet.

### 8. CLK

Range: 0x0000000 to 0x3FFFFFF;

Default: 0x0000000.

Set the native clock of the Bluetooth device.

This 26-bit field shall contain the value of the native clock of the device that sends the FHS packet, sampled at the beginning of the transmission of the access code of this FHS packet. This clock value has a resolution of 1.25ms (two-slot interval). For each new transmission, this field is updated so that it accurately reflects the real-time clock value.

Note: This parameter is displayed only when the current packet is the FHS packet.

### 9. Page Scan Mode

Choice: Mandatory, Reserved;

Default: Mandatory.

Set the page scan mode in the FHS packet.

This 3-bit field shall indicate which scan mode is used by default by the sender of the FHS packet.

Note: This parameter is displayed only when the current packet is the FHS packet.

### 10. Payload Data (Voice)

Choice: PN9 | PN15 | USER;

Default: PN9.

Set the voice field data type of the DV packet. The DV packet payload is divided into a voice field of 80 bits and a data field containing up to 150 bits.

Note: This parameter is displayed only when the current packet is the DV packet.

### 11. Payload Distribution

Choice: Single Packet | Multiple Packet;

Default: Single Packet.

Use the drop-down menu to set the distribution type of packet payload.

When Single Packet is selected, the software creates a waveform that consists of one Bluetooth packet. When downloaded to the signal source, the waveform is repeatedly played back resulting in a packet sequence comprised of identical packets. When Multiple Packet is selected, the software creates a waveform that consists of a multiple packet sequence. A data pattern is distributed into the payload portion of each packet in the sequence. Once downloaded to the instrument, the signal generator plays back the entire package sequence repeatedly.

### 12. Data Continuous

Choice: On | Off ;

Default: On.

Use the drop-down menu to set the continuous state of the packet payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet.

### 13. Data Repetition

Set the repetition number of the packet payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet and Data Continuous is set to Off.

### 14. Data Length

Set the number of total bits contained in the payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet and Data Continuous is set to Off.

### 15. Number Of Full Packets

Display the number of full packets occupied by the packet payload.

### 16. Number Of Partial Packets

Display the number of partial packets occupied by the packet payload.

Because the payload portion of each packet is filled to capacity, if possible, the number of partial packets appended to the end of a packet sequence will always be 0 or 1.

### 17. Number Of Padding Packets

Choice: 0 | 1 ;

Default: 0.

Sets the number of padding packets occupied by the packet payload.

When the software creates a multiple packet sequence, the sequence bit in the header field is toggled after each packet transmission in the sequence. This indicates to the Bluetooth device that the incoming packet is not a re-transmitted packet. To maintain an alternating sequence bit when the waveform is repeatedly played back, an even number of packets must be generated. If the data pattern length is set such that an odd number of packets are required to send the data, then a pad packet is appended to the end of the packet sequence. The pad packet has no payload and is only generated in this circumstance to accommodate the alternating sequence bit.

## 4.10 Bluetooth Low Energy

Bluetooth Low Energy (LE) devices operate in the unlicensed 2.4 GHz ISM (Industrial Scientific Medical) band. A frequency hopping transceiver is used to combat interference and fading.

Two modulation schemes are defined. The mandatory modulation scheme ("1 Msym/s modulation") uses a shaped, binary FM to minimize transceiver complexity. The symbol rate is 1 Msym/s. An optional modulation scheme ("2Msym/s modulation") is similar but uses a symbol rate of 2 Msym/s.

Protocol version: 5.2.

**The 1 Msym/s modulation supports two PHYs:**


- LE 1M, with uncoded data at 1 Mb/s;
- LE Coded, with the Access Address, Coding Indicator, and TERM1 coded at 125 kb/s and the payload coded at either 125 kb/s or 500 kb/s.


A device shall support the LE 1M PHY. Support for the LE Coded PHY is optional.

**The 2 Msym/s modulation supports a single PHY:**

- LE 2M, with uncoded data at 2 Mb/s

You can click **Bluetooth** -> **Bluetooth Low Energy** on the homepage to enter the Bluetooth LE setting interface.

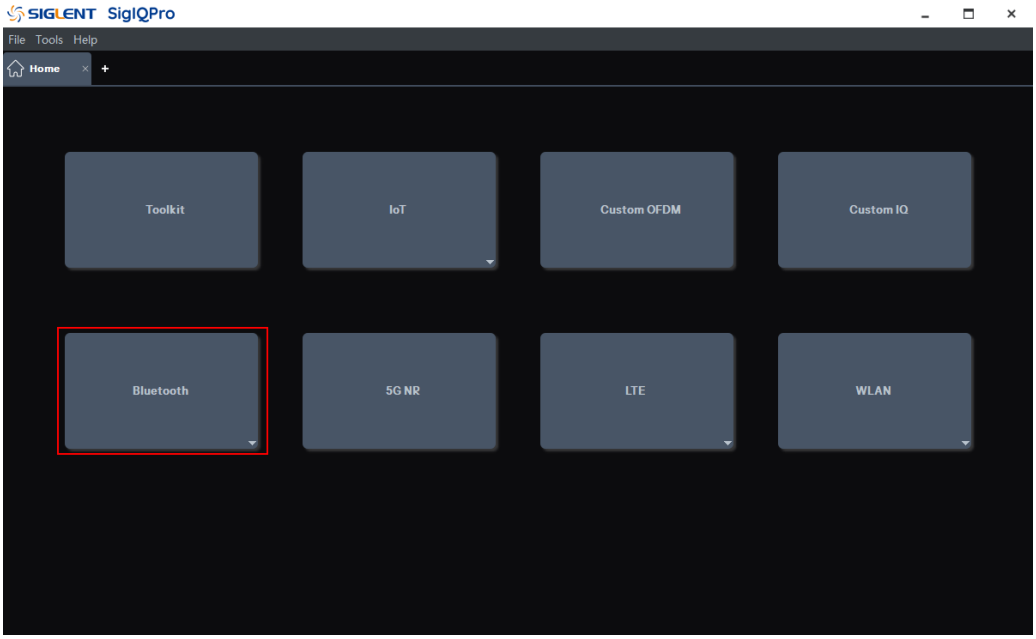

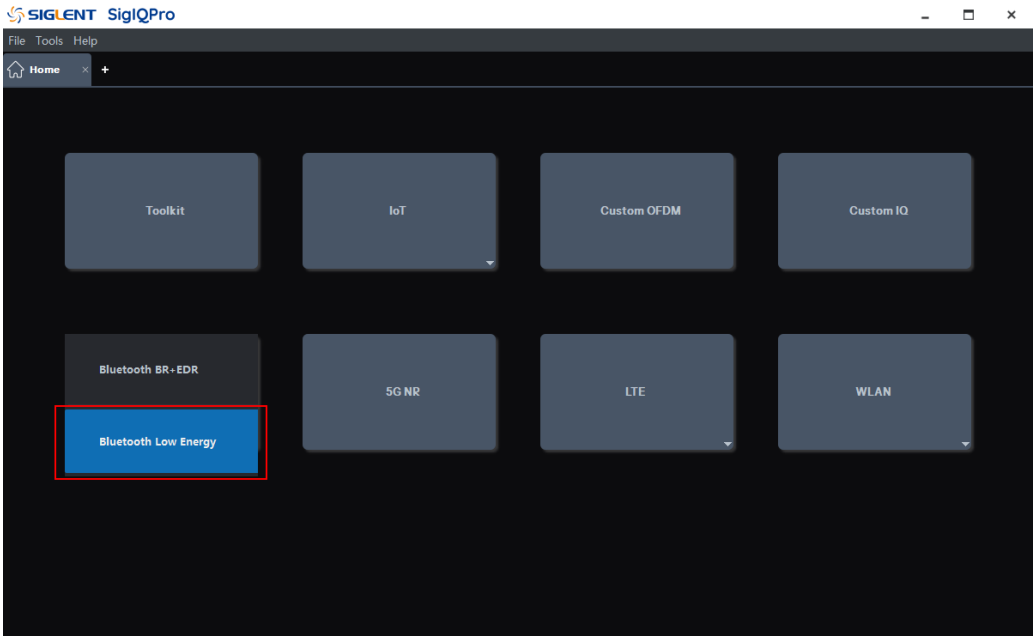


### 4.10.1 Parameters Setup

Press **Parameters Setup** in the left window to enter parameter settings.

#### 4.10.1.1 Basic

**1. Waveform Name**

When you download the waveform, the name you defined here will be displayed on the signal generator, if you do not define it, the signal generator will automatically generate a name for the waveform.

**2. Total Sample Points**

Display the generated waveform length (number of points).

Note: This parameter is displayed only and cannot be edited.

**3. Waveform Length**

Display the generated waveform length (in second).

Note: This parameter is displayed only and cannot be edited.

**4. I/Q Map**

Choice: Normal | Inverted ; Default: Normal.

Use the drop-down menu to select a normal or inverted I/Q signal. If invert is selected, the I signal is

unchanged and the Q is reversed.

### 5. Oversampling Ratio

Range: 2 to 100 ; Default: 10.


Set the number of samples calculated per I/Q symbol.


## 4.10.1.2 Bursting and Power Ramp

### 1. Bursting Active

Choice: On | Off ; Default: On.

Use the drop-down menu to enable or disable the bursting in the waveform. When enabled, the packet transmission timing of the test signal adheres to the Bluetooth TDD slot structure for the selected packet type.

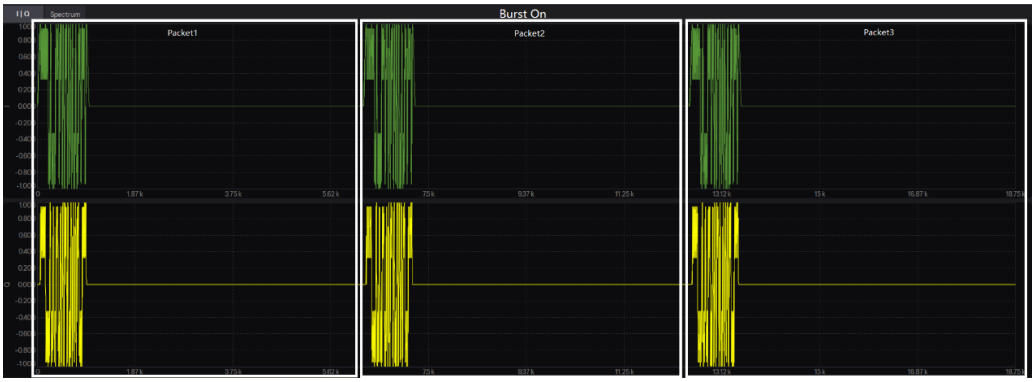

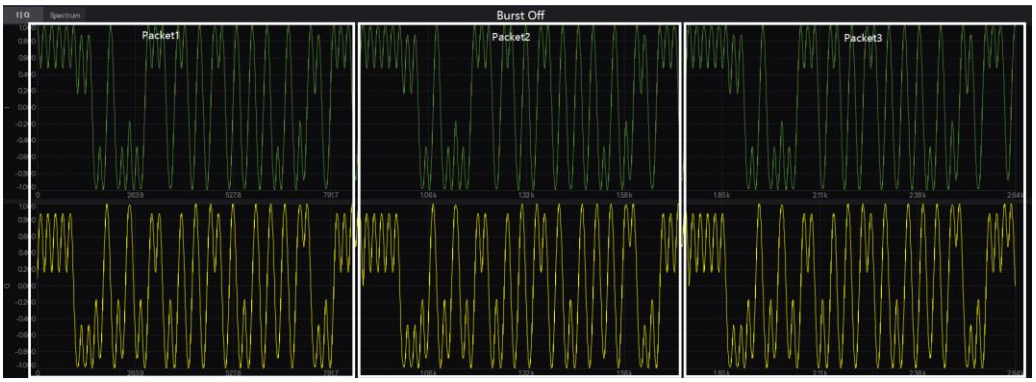
### 2. Power Ramp

Range: 1 to 10 us ; Default: 6 us.

Set the power ramp up and power ramp down length of the burst.

The power ramp up refers to the time when the carrier frequency ramped from idle power to transmitted power. The power ramp is shaped with a cosine function.

### 3. Ramp Settling

Range: 1 to 20 us ; Default: 6 us.

Set the Ramp Settling length of the burst.

The Ramp Settling refers to the time when the carrier frequency ramped from idle power to transmitted power and remains stable until it begins to transmit the first symbol.







#### 4.10.1.3 Impairment

### 1. Modulation Index

Range: 0.45 to 0.55 ; Default: 0.5.

Set the modulation index of GFSK.

Specifies the modulation index used by GFSK, which is the ratio of peak-to-peak frequency deviation to the bit rate.

### 2. Frequency Drift

#### 1) State

Choice: On | Off ; Default: Off.

Use the drop-down menu to enable or disable the frequency drift impairment applied to the packet. This impairment adds a dynamic error to the transmission frequency. It is used to simulate the

frequency drift impairment repeats at the beginning of each timeslot and occurs over a time period equal to the packet duration.

#### 2) Type

Choice: Linear | Sine ; Default: Linear.

Use the drop-down menu to select the type of frequency drift applied to the Bluetooth packet.

#### 3) Deviation

Range: -100 to 100kHz ; Default: 0 kHz.

Set the maximum deviation of frequency drift impairment.

#### 4) Rate

Choice: 625Hz | 750Hz | 1250Hz ; Default: 1250Hz.

Use the drop-down menu to select the frequency drift rate.

### 3. Frequency Offset

Range: -200 to 200kHz ; Default: 0kHz.

Sets the static offset of the carrier frequency. This static offset is used to simulate a Bluetooth device transmitting at a frequency slightly offset from the specified carrier.

### 4. Symbol Timing Error

Range: -50 to 50ppm ; Default: 0ppm.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the Bluetooth signal.

It is used to simulate a Bluetooth device transmitting at a slight deviation in the sampling clock.

#### 4.10.1.4 Dirty Transmitter

### 1. State

Choice: On | Off ; Default: Off.


Use the drop-down menu to enable or disable the dirty transmitter test. When this setting is set to On, the Dirty Transmitter Impairments Setup window appears.

### 2. Number of Packet per Set

Choice: 1 | 2 | 50 ; Default: 1.

Use the drop-down menu to select the number of packets for each set of parameters displayed in the Dirty Transmitter Window.

### 3. Dirty Transmitter Window

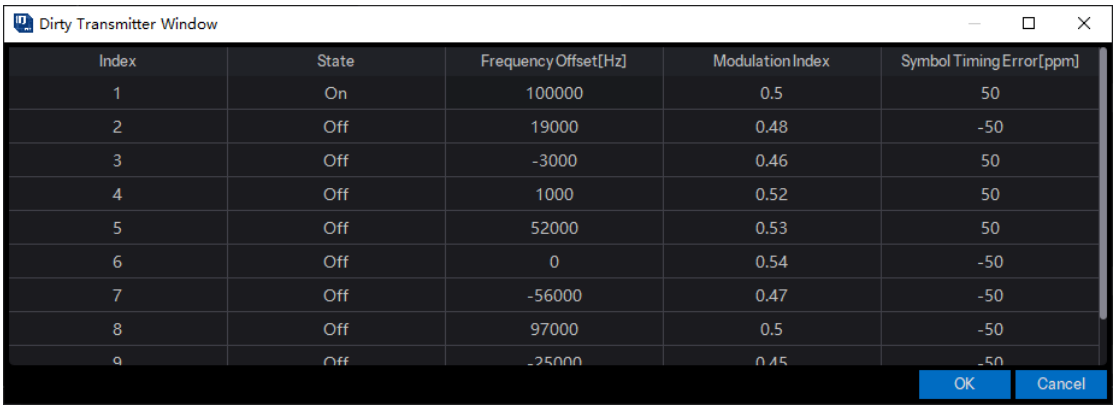


#### 1) Index

This cell displays the impairment set index number.

#### 2) State

Use this cell to enable or disable a specified impairment set in dirty transmitter test.

#### 3) Frequency Offset [Hz]

Range: -200 to 200kHz.

Sets the static offset of the carrier frequency. This static offset is used to simulate a Bluetooth device transmitting at a frequency slightly offset from the specified carrier.

#### 4) Modulation Index

Range: 0.45 to 0.55.

Set the modulation index of GFSK.

Specifies the modulation index used by GFSK, which is the ratio of peak-to-peak frequency deviation to the bit rate.

#### 5) Symbol Timing Error [ppm]

Range: -50 to 50.

Set the shift of standard symbol rate for transmission. This shift varies the symbol rate of the

Bluetooth signal. It is used to simulate a Bluetooth device transmitting at a slight deviation in the sampling clock.

### 4.10.2 Packet

Press **Packet** in the left window to enter parameter settings.

#### 4.10.2.1 General Setting

**1. Channel Type**

Choice: Advertising | Data | Test ;

Default: Test.

Display the channel type of Bluetooth low energy wireless technology packet. Use the drop-down menu to select the channel type of Bluetooth low energy packet.

**2. Packet Type**

Choice: Test_Packet | ADV_IND | ADV_DIRECT_IND | ADV_NONCONN_IND | ADV_SCAN_IND | ADV_EXT_IND | AUX_ADV_IND | AUX_SYNC_IND | AUX_CHAIN_IND | SCAN_REQ | SCAN_RSP | AUX_SCAN_REQ | AUX_SCAN_RSP | CONNECT_IND | AUX_CONNECT_REQ | AUX_CONNECT_RSP | LL_Data | LL_CONNECTION_UPDATE_IND | LL_CHANNEL_MAP_IND | LL_TERMINATE_IND LL_ENC_REQ | LL_ENC_RSP | LL_START_ENC_REQ | LL_START_ENC_RSP | LL_UNKNOWN_RSP | LL_FEATURE_REQ | LL_FEATURE_RSP | LL_PAUSE_ENC_REQ | LL_PAUSE_ENC_RSP | LL_VERSION_IND | LL_REJECT_IND | LL_SLAVE_FEATURE_REQ | LL_CONNECTION_PARAM_REQ | LL_CONNECTION_PARAM_RSP | LL_REJECT_EXT_IND | LL_PING_REQ | LL_PING_RSP | LL_LENGTH_REQ | LL_LENGTH_RSP | LL_PHY_REQ | LL_PHY_RSP | LL_PHY_UPDATE_IND | LL_MIN_USED_CHANNELS_IND | LL_CTE_REQ | LL_CTE_RSP | LL_PERIODIC_SYNC_IND | LL_CLOCK_ACCURACY_REQ | LL_CLOCK_ACCURACY_RSP;

Default: Test_Packet.

Set the packet type of Bluetooth low energy wireless technology.

- Advertising Channel Type: ADV_IND | ADV_DIRECT_IND | ADV_NONCONN_IND | ADV_SCAN_IND | ADV_EXT_IND | AUX_ADV_IND | AUX_SYNC_IND | AUX_CHAIN_IND | SCAN_REQ | SCAN_RSP | AUX_SCAN_REQ | AUX_SCAN_RSP | CONNECT_IND | AUX_CONNECT_REQ | AUX_CONNECT_RSP;

- Data Channel Type: LL_Data | LL_CONNECTION_UPDATE_IND | LL_CHANNEL_MAP_IND | LL_TERMINATE_IND LL_ENC_REQ | LL_ENC_RSP | LL_START_ENC_REQ | LL_START_ENC_RSP | LL_UNKNOWN_RSP | LL_FEATURE_REQ | LL_FEATURE_RSP | LL_PAUSE_ENC_REQ | LL_PAUSE_ENC_RSP | LL_VERSION_IND | LL_REJECT_IND | LL_SLAVE_FEATURE_REQ | LL_CONNECTION_PARAM_REQ | LL_CONNECTION_PARAM_RSP | LL_REJECT_EXT_IND | LL_PING_REQ | LL_PING_RSP | LL_LENGTH_REQ | LL_LENGTH_RSP | LL_PHY_REQ | LL_PHY_RSP | LL_PHY_UPDATE_IND | LL_MIN_USED_CHANNELS_IND | LL_CTE_REQ | LL_CTE_RSP | LL_PERIODIC_SYNC_IND | LL_CLOCK_ACCURACY_REQ | LL_CLOCK_ACCURACY_RSP;

Use the drop-down menu to select the packet type of Bluetooth low energy.

### 3. Packet Format

Set the PHY type. LE supports LE 1M PHY, LE 2M PHY, and LE Coded PHY.

### 4. Coding Indicator

Coding Indicator (CI) is a field of encoded Packet that determines the encoding mode of FEC Block 2. If 0 is set, S=8 is selected; if 1 is set, S=2 is selected. The default value is 0.

### 5. Channel Index

Range: 0 to 39 ; Default: 0.

Set the current RF channel index of Bluetooth low energy packet.

The LE system operates in the 2.4 GHz ISM band at 2400–2483.5 MHz. The LE system uses 40 RF channels. These RF channels are divided into 3 RF channels known as the "primary advertising channels", used for initial advertising and all legacy advertising activities, and 37 RF channels known as the "general-purpose channels", used for the majority of communications. Please refer to Table 1.3 of Vol 6 Part B of Core v5.2 for more information.

### 6. Access Address

Range: 0x00000000 to 0xffffffff ;

Default: 0x8e89bed6.

Set the logical link specify address of Bluetooth low energy packet. Please refer to section 2.1.2 of Vol 6 Part B of Core v5.2 for more information.

Note: The Access Address for all other advertising physical channel packets shall be 0b10001110-10001001-10111110-11010110 (0x8E89BED6).

### 7. CRC Preload

Range: 0x000000 to 0xffffff ;

Default: 0x555555.

Set the CRC preload state of Bluetooth low energy packet.

The PDU is followed by a 24-bit CRC. It shall be calculated over the PDU. Please refer to section 3.1.1 of Vol 6 Part B of Core v5.2 for more information.

Note: The CRC Preload for all other advertising physical channel packets shall be 0x555555.

### 8. Data Whitening

Choice: On | Off ;

Default: Off.

Use the drop-down menu to enable or disable data whitening for the PDU and CRC data of Bluetooth low energy packet.

Data whitening is used to avoid long sequences of zeros or ones, e.g.,0b0000000 or 0b1111111, in the data bit stream. Whitening shall be applied on the PDU and CRC of all Link Layer packets and is performed after the CRC generation in the transmitter. The whitener and de-whitener are defined the same way, using a 7-bit linear feedback shift register with the polynomial x7 + x4 + 1. Please refer to section 3.2 of Vol 6 Part B of Core v5.2 for more information.

### 9. Idle Interval

Range: 150 – 150000 us ;

Default: 249 us.

Set the idle interval time in-between frames in microseconds.

Note: This parameter is visible and configurable only when the Bursting Active is on.

### 10. Packet Length

Display the packet length in microseconds.

Note: This value is read-only and automatically updated with Channel Type, Packet Type, Packet Format and Length.

#### 4.10.2.2 Test PDU Header Setting

Set **General Setting** -> **Channel Type** as Test.

**1. Payload Type**

Display the payload type field of Test PDU header. Please refer to Table 4.1 of Vol 6 Part B of Core v5.2 for more information.

Note: This value is read-only and automatically updated when Payload Data is changed.

**2. CP**

Range: 0 – 1 ; Default: 0.

Set the CTEInfo Present (CP) field of the Test PDU header. This value indicates whether the CTEInfo field is present and therefore whether the test packet has a Constant Tone Extension.

If the CP field is 0, then no CTEInfo field is present and there is no Constant Tone Extension in the test packet. If the CP field is 1, then the CTEInfo field is present and the test packet includes a Constant Tone Extension.

Please refer to section 4.1.4 of Vol 6 Part B of Core v5.2 for more information.

**3. Length**

Range: 0 – 255 ; Default: 37.

Set the Test PDU payload length in bytes. It will be included in PDU Length field of the Test PDU header.

**4. CTE Time**

Range: 2 – 20 ; Default: 20.

Set the CTE Time field of CTE Info Header to indicate the length of the Constant Tone Extension in 8 μs units. Please refer to section 2.5.2 of Vol 6 Part B of Core v5.2 for more information.

Note: This parameter is visible and configurable only when the CP is 1.

**5. CTE Type**

Choice: AOA | AOD(1us) | AOD(2us) ;

Default: AOA.

Set the CTE Type field of CTE Info Header to indicate the type of the Constant Tone Extension and the duration of the switching slots. Please refer to section 2.5.2 of Vol 6 Part B of Core v5.2 for more

information.

Note: This parameter is visible and configurable only when the CP is 1.

#### 4.10.2.3 Test PDU Payload Setting

Set **General Setting** -> **Channel Type** as Test.

**1. Payload Distribution**

Choice: Single Packet | Multiple Packet ;

Default: Single Packet.

Use the drop-down menu to set the distribution type of packet payload.

When Single Packet is selected, the software creates a waveform that consists of one Bluetooth low energy packet. When downloaded to the signal source, the waveform is repeatedly played back resulting in a packet sequence comprised of identical packets. When Multiple Packet is selected, the software creates a waveform that consists of a multiple packet sequence. A data pattern is distributed into the payload portion of each packet in the sequence. Once downloaded to the instrument, the signal generator plays back the entire package sequence repeatedly.

**2. Payload Data**

Choice: PRBS9 | 11110000 | 10101010 | PRBS 15 | 11111111 | 00000000 | 00001111| 01010101 | ;

Default: PRBS9.

Use the drop-down menu to select the type of Test PDU payload. Please refer to section 4.1.4 and 4.1.5 of Vol 6 Part B of Core v5.2 for more information.

When Data Continuous is set to ON and PN9 or PN15 is selected, the software automatically configures the Length and Repetitions fields. The number of packets required to accommodate the selected continuous PN pattern is also automatically determined and updated the number of bits.

**3. Data Continuous**

Choice: On | Off ; Default: On.

Use the drop-down menu to set the continuous state of the packet payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet.

**4. Data Repetition**

Set the repetition number of the packet payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet and Data Continuous is set to Off.

**5. Data Length**

Set the number of total bits contained in the payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet and Data Continuous is set to Off.

**6. Number Of Full Packets**

Display the number of full packets occupied by the packet payload.

**7. Number Of Partial Packets**

Display the number of partial packets occupied by the packet payload.

Because the payload portion of each packet is filled to capacity, if possible, the number of partial packets appended to the end of a packet sequence will always be 0 or 1.

#### 4.10.2.4 Advertising PDU Header Setting

Set **General Setting** -> **Channel Type** as Advertising.

**1. PDU Type**

Display the value of PDU Type field in in the advertising PDU header. Please refer to section 2.3 of Vol 6 Part B of Core v5.2 for more information.

Note: This value is read-only and automatically updated when Packet Type is changed.

**2. ChSel**

Choice: 0 | 1 ; Default: 0.

Set the ChSel (Channel Selection) field of the advertising PDU header.

1: The device supports the LE Channel Selection Algorithm #2 feature.

0: The device does not support the LE Channel Selection Algorithm #2 feature.

Note: If the ChSel, TxAdd or RxAdd fields are not defined as used in a given PDU then they shall be considered reserved for future use.

**3. TxAdd**

Choice: 0 | 1 ; Default: 0.

Set the TxAdd field of the advertising PDU header. The TxAdd in the advertising physical channel PDU header indicates whether the transmit address is public (TxAdd = 0) or random (TxAdd =1).

Note: If the ChSel, TxAdd or RxAdd fields are not defined as used in a given PDU then they shall be considered reserved for future use.

#### 4. RxAdd

Choice: 0 | 1 ; Default: 0.

Set the RxAdd field of the advertising PDU header. The RxAdd in the advertising physical channel PDU header indicates whether the receiver address is public (RxAdd = 0) or random (RxAdd = 1).

Note: If the ChSel, TxAdd or RxAdd fields are not defined as used in a given PDU then they shall be considered reserved for future use.

#### 5. Length

Display the value of Length field in in the Advertising PDU header. The Length field indicates the length of the Advertising PDU payload in octets.

Note: This value is read-only and automatically updated when with advertising PDU payload setting.

### 4.10.2.5 Advertising PDU Payload Setting (ADV_IND, ADV_NONCONN_IND, SCAN_RSP, ADV_SCAN_IND)

Set **General Setting** -> **Channel Type** as Advertising, and set Packet Type as ADV_IND, ADV_NONCONN_IND, SCAN_RSP or ADV_SCAN_IND.

#### 1. AdvA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

Set the advertiser address of Bluetooth low energy device. It will be included in AdvA field of the advertising PDU Payload.

#### 2. Payload Data

Choice: PN9 | PN15 | USER ; Default: PN9.

Use the drop-down menu to set the type of packet payload.

When Data Continuous is set to ON and PN9 or PN15 is selected, the software automatically

configures the Length and Repetitions fields. The number of packets required to accommodate the selected continuous PN pattern is also automatically determined and updated the number of bits.
If USER is selected as the data pattern, the number of bits displayed in the Data Length field is equal to the length of the user data multiplied by Data Repetition. The maximum number of bits allowed by the packet type. Any remaining bits in the user data file beyond the maximum amount will be truncated.

**3. Payload Length**

Range: 0 to 31 ; Default: 31.

Set the number of bytes for the payload of the Bluetooth low energy packet.

#### 4.10.2.6 Advertising PDU Payload Setting (ADV_DIRECT_IND)

Set **General Setting** -> **Channel Type** as Advertising, and set Packet Type as ADV_DIRECT_IND.

**1. AdvA**

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008

Set the advertiser's public or random device address as indicated by TxAdd. It will be included in AdvA field of the advertising PDU Payload.

**2. TargetA**

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008

Set the target's public or random device address as indicated by RxAdd. It will be included in TargetA field of the advertising PDU Payload. The TargetA field is the address of the device to which this PDU is addressed.

#### 4.10.2.7 Advertising PDU Payload Setting (SCAN_REQ, AUX_SCAN_REQ)

Set **General Setting** -> **Channel Type** as Advertising, and set Packet Type as SCAN_REQ or AUX_SCAN_REQ.

1. ScanA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008

Set the scanner's public or random device address as indicated by TxAdd. It will be included in ScanA field of the advertising PDU Payload.

2. AdvA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

Set the target's public or random device address as indicated by RxAdd. It will be included in AdvA field of the advertising PDU Payload. The AdvA field is the address of the device to which this PDU is addressed.

#### 4.10.2.8 Advertising PDU Payload Setting (CONNECT_IND, AUX_CONNECT_REQ)

Set **General Setting** -> **Channel Type** as Advertising, and set Packet Type as ADV_EXT_IND, AUX_ADV_IND.

1. InitA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

Set the initiator's public or random device address as indicated by TxAdd. It will be included in InitA field of the advertising PDU Payload.

2. AdvA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

Set the advertiser's public or random device address as indicated by RxAdd. It will be included in AdvA field of the advertising PDU Payload. The AdvA field is the address of the device to which this PDU is addressed.

3. Access Address

Range: Range: 0x00000000 to 0xffffffff ;

Default: 0x00000000.

Set the ACL connection's Access Address determined by the Link Layer. It will be included in AA field of the advertising PDU Payload. Please refer to section 2.1.2 of Vol 6 Part B of Core v5.2 for more information.

**4. CRCInit**

Range: 0x000000 to 0xffffff ;

Default: 555555.

Set the initialization value for the CRC calculation for the ACL connection. It will be included in CRCInit field of the advertising PDU Payload.

**5. WinSize**

Range: 1 to Lesser of 8 and (Interval – 1) ;

Default: 1.

Set the WinSize field of the advertising PDU Payload. The WinSize field is set to indicate the *transmitWindowSize* value, in the following manner: *transmitWindowSize* = WinSize * 1.25ms.

**6. WinOffset**

Range: 0 to Interval ; Default: 0.

Set the WinOffset field of the advertising PDU Payload. The WinOffset field is set to indicate the *transmitWindowOffset* value, in the following manner: *transmitWindowOffset* = WinOffset * 1.25ms.

**7. Interval**

Range: 6 to 3200 ; Default: 6.

Set the Interval field of the advertising PDU Payload. The Interval field is set to indicate the *connInterval*, in the following manner: *connInterval* = Interval * 1.25 ms.

**8. Latency**

Range: 0 to 500 ; Default: 6.

Set the Latency field of the advertising PDU Payload. The Latency field is set to indicate the *connSlaveLatency* value, in the following manner: *connSlaveLatency* = Latency.

**9. Timeout**

Range: 10 to 3200 ;

Default: 10.

Set the Timeout field of the advertising PDU Payload. The Timeout field is set to indicate the *connSupervisionTimeout* value, in the following manner: *connSupervisionTimeout* = Timeout *10 ms.

**10. ChM**

Range: 0x0000000000 to 0x1fffffffff ;

Default: 0x0000000001.

Set the ChM (channel map) field of the advertising PDU Payload.

The ChM field contains channel map indicating used and unused data channels. Every channel is represented with bit positioned as per the data channel index. The LSB represents data channel index 0 and the bit in position 36 represents data channel index 36. A bit value of 0 indicates that the channel is Unused. A bit value of 1 indicates that the channel is Used. The bits in positions 37, 38 and 39 are reserved for future use.

**11. Hop**

Range: 5 to 16 ;

Default: 5.

Set the Hop field of the advertising PDU Payload. The Hop field is set to indicate the *hopIncrement* used in the data channel selection algorithm.

**12. SCA**

Choice: 251-500 ppm | 151-250 ppm | 101-150 ppm | 76-100 ppm | 51-75 ppm | 31-50 ppm | 21-30 ppm | 0-20 ppm ;

Default: 251-500 ppm.

Use the drop-down menu to select the SCA (Sleep Clock Accuracy) type. It will be included in SCA field of the PDU Payload. The SCA field is set to indicate the *masterSCA* used to determine the worst-case Master's sleep clock accuracy.

#### 4.10.2.9 Advertising PDU Payload Setting (ADV_EXT_IND, AUX_ADV_IND, AUX_ADV_IND, AUX_CHAIN_IND, AUX_SCAN_RSP, AUX_CONNECT_RSP)

Set **General Setting** -> **Channel Type** as Advertising, and set Packet Type as ADV_EXT_IND, AUX_ADV_IND, AUX_ADV_IND, AUX_CHAIN_IND, AUX_SCAN_RSP or AUX_CONNECT_RSP.

### 1. Extended Header Length

Display the Extended Header Length field of the Common Extended Advertising Payload.

The Extended Header Length is a value between 0 and 63 and indicates the size of the variable length Extended Header field.

### 2. AdvMode

Choice: Non-conn&Non-scan | Conn&Non-scan | Non-conn&Scan ;

Default: Non-conn&Non-scan.

Use the drop-down menu to select the mode of the advertisement. It will be included in AdvMode field of the Common Extended Advertising Payload.

### 3. Payload Data

Use the drop-down menu to select the data type of the AdvData field.

### 4. Data Length

Range: 0 – 254.

Set the AdvData field length in bytes.

### 5. Extended Header

#### 1) AdvA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

Set the advertiser's public or random device address as indicated by TxAdd.

#### 2) TargetA

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

Set public or random device address for the scanner or initiator, as indicated by RxAdd. The TargetA field is the address of the device to which this PDU is addressed.

#### 3) CTEInfo

- **CTE Time**

Range:2 – 20 ;

Default:20.

Set the CTE Time field of CTE Info Header to indicate the length of the Constant Tone Extension in 8μs units. Please refer to section 2.5.2 of Vol 6 Part B of Core v5.2 for more information.

- **CTE Type**

Choice: AOA | AOD(1us) | AOD(2us) ;

Default: AOA.

Set the CTE Type field of CTE Info Header to indicate the type of the Constant Tone Extension and the duration of the switching slots. Please refer to section 2.5.2 of Vol 6 Part B of Core v5.2 for more information.

**4) AdvDataInfo**

- **Advertising Data ID**

Range: 0x0 – 0xfff ;

Default: 0x0.

Set the Advertising Data ID field of AdvDataInfo to distinguish between different advertising sets transmitted by this device.

- **Advertising Set ID**

Range: 0x0 – 0xf ;

Default: 0x0.

Set the Advertising Set ID field of AdvDataInfo to indicate to the scanner whether it can assume that the data contents in the AdvData are a duplicate of the previous AdvData sent in an earlier packet.

**5) AuxPtr**

The presence of the AuxPtr field indicates that some or all of the advertisement data is in a subsequent auxiliary packet. The contents of the AuxPtr field describe this packet.

- **Channel Index**

Range: 0 – 39 ; Default: 0.

Set the Channel Index field of AuxPtr. The Channel Index field contains the general-purpose channel index used to transmit the auxiliary packet.

- **CA**

Choice: 51 – 500 ppm | 0 – 50 ppm;

Default: 51 – 500 ppm.

Use the drop-down menu to select clock accuracy of the advertiser that will be used between the packet containing this data and the auxiliary packet.

- **Offset Units**

Choice: 30 us | 300 us;

Default: 30 us.

Use the drop-down menu to select the units used by the AUX Offset Field.

- **AUX Offset**

Range: 0 – 8191 ;

Default: 8191.

Set the value of Aux Offset field. The Aux Offset field contains the time from the start of the packet containing the AuxPtr field to the approximate start of the auxiliary packet. The value of the AUX Offset field is in the unit of time indicated by the Offset Units field; the offset is determined by multiplying the value by the unit.

- **AUX PHY**

Choice: LE 1M | LE 2M | LE Code ;

Default: LE 1M.

Use the drop-down menu to select the PHY used to transmit the auxiliary packet.

**6) SyncInfo**

- **Sync Packet Offset**

Range: 0 – 8191 ;

Default: 8191.

Set the value of Sync Packet Offset field. The Sync Packet Offset field contains the time from a reference point to the start of the AUX_SYNC_IND packet that this SyncInfo field describes. The value of the Sync Packet Offset field is in the unit of time indicated by the Offset Units field; the offset is determined by multiplying the value by the unit.

- **Offset Units**

Choice: 30 us | 300 us;

Default: 30 us.

Use the drop-down menu to select the units used by the Sync Packet Offset Field.

- **Offset Adjust**

Choice: 0 | 1 ; Default: 0.

Set the value of Offset Adjust field. If the Offset Adjust field is set to 1, the actual sync packet offset adding 2.4576 seconds.

- **Interval**

Range: 6 – 65535 ; Default: 6.

Set the value of Interval field. The Interval field contains the time in 1.25 ms units from the start of one packet of the periodic advertising train to the start of the next packet.

- **ChM**

Range: 0x0000000000 to 0x1fffffffff ;

Default: 0x0000000001.

Set the value of ChM (channel map) field.

The ChM field contains channel map indicating used and unused data channels. Every channel is represented with bit positioned as per the data channel index. The LSB represents data channel index 0 and the bit in position 36 represents data channel index 36. A bit value of 0 indicates that the channel is Unused. A bit value of 1 indicates that the channel is Used. The bits in positions 37, 38 and 39 are reserved for future use.

- **SCA**

Choice: 251-500 ppm | 151-250 ppm | 101-150 ppm | 76-100 ppm | 51-75 ppm | 31-50 ppm | 21-30 ppm | 0-20 ppm ;

Default: 251-500 ppm.

Use the drop-down menu to select the SCA (Sleep Clock Accuracy) type. The SCA field is set to indicate the masterSCAused to determine the worst-case Master's sleep clock accuracy.

- **Access Address**

Range: Range: 0x00000000 to 0xffffffff ;

Default: 0x00000000.

Set the ACL connection's Access Address determined by the Link Layer. Please refer to section 2.1.2 of Vol 6 Part B of Core v5.2 for more information.

- **CRCInit**

Range: 0x000000 to 0xffffff ;

Default: 0x555555.

Set the initialization value for the CRC calculation for the ACL connection.

- **Event Counter**

Range: 0– 65535 ;

Default: 0.

Set the value of Event Counter field.

The Event Counter field contains the value of paEventCounter that applies to the AUX_SYNC_IND packet that this SyncInfo field describes. Please refer to section 2.3.4.6 of Vol 6 Part B of Core v5.2 for more information.

**7) TxPower**

Range: -127 – 126 ;

Default: 0.

Set the value of TxPower field. The TxPower field indicates the transmitted power level of the packet containing the data type. It may be used to calculate path loss on a received packet.

**8) ACAD**

Use the drop-down menu to select the data type of the ACDC (Additional Controller Advertising Data) field. Please refer to section 2.3.4.8 of Vol 6 Part B of Core v5.2 for more information.

**9) Length**

Range: 0 – 62 ; Default: 0.

Set the ACAD field length in bytes.

The ACAD field length is the Extended Header length minus the sum of the size of the extended header flags (1 octet) and those fields indicated by the flags as present.

#### 4.10.2.10 Data PDU Header Setting

Set **General Setting** -> **Channel Type** as Data.

**1. LLID**

Display the LLID field of the Data PDU Header. The LLID field determines the format of the payload.

- 1 = LL Data PDU: Continuation fragment of an L2CAP message, or an empty PDU
- 2 = LL Data PDU: Start of an L2CAP message, or a complete L2CAP message with no fragmentation
- 3 = LL Control PDU

Note: This parameter can be edited only when Packet Type is LL_Data.

**2. NESN**

Range: 0 to 1 ; Default: 0.

Set the NESN (next expected sequence number) field of the Data PDU Header.

**3. SN**

Range: 0 to 1 ; Default: 0.

Set the SN (sequence number) field of the Data PDU Header.

**4. MD**

Range: 0 to 1 ; Default: 0.

Set the MD (more data) field of the Data PDU Header.

**5. CP**

Range: 0 – 1 ; Default: 0.

Set the CTEInfo Present (CP) field of the Data PDU header. This value indicates whether the CTEInfo field is present and therefore whether the packet has a Constant Tone Extension.

If the CP field is 0, then no CTEInfo field is present and there is no Constant Tone Extension in the test packet. If the CP field is 1, then the CTEInfo field is present and the test packet includes a Constant Tone Extension.

Please refer to section 4.1.4 of Part B of volume 6 in Bluetooth Core Specification Version 5.2 for more information

**6. Length**

Range: 0 – 255 ; Default: 31.

Set the Data PDU payload length in bytes. It will be included in Length field of the Data PDU header.

#### 4.10.2.11 Data PDU Payload Setting (LL_Data)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_Data.

**1. Payload Distribution**

Choice: Single Packet | Multiple Packet;

Default: Single Packet.

Use the drop-down menu to set the distribution type of packet payload.

When Single Packet is selected, the software creates a waveform that consists of one Bluetooth low energy packet. When downloaded to the signal source, the waveform is repeatedly played back resulting in a packet sequence comprised of identical packets. When Multiple Packet is selected, the software creates a waveform that consists of a multiple packet sequence. A data pattern is distributed into the payload portion of each packet in the sequence. Once downloaded to the instrument, the signal generator plays back the entire package sequence repeatedly.

**2. Payload Data**

Choice: PN9 | PN15 | USER ;

Default: PN9.

Use the drop-down menu to select the type of PDU payload.

When Data Continuous is set to ON and PN9 or PN15 is selected, the software automatically configures the Length and Repetitions fields. The number of packets required to accommodate the selected continuous PN pattern is also automatically determined and updated the number of bits.

**3. Data Continuous**

Choice: On | Off ; Default: On.

Use the drop-down menu to set the continuous state of the packet payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet.

**4. Data Repetition**

Set the repetition number of the packet payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet and Data Continuous is set to Off.

**5. Data Length**

Set the number of total bits contained in the payload data.

Note: This parameter is only available when Payload Distribution is set to Multiple Packet and Data Continuous is set to Off.

**6. Number Of Full Packets**

Display the number of full packets occupied by the packet payload.

**7. Number Of Partial Packets**

Display the number of partial packets occupied by the packet payload.

Because the payload portion of each packet is filled to capacity, if possible, the number of partial packets appended to the end of a packet sequence will always be 0 or 1.

**8. Number Of Padding Packets**

Choice: 0 | 1 ; Default: 0.

Sets the number of padding packets occupied by the packet payload.

Note: This parameter is can be edited only when Payload Distribution is Multiple Packet.

When the software creates a multiple packet sequence, the sequence bit in the header field is toggled after each packet transmission in the sequence. This indicates to the Bluetooth device that the incoming packet is not a re-transmitted packet. To maintain an alternating sequence bit when the waveform is repeatedly played back, an even number of packets must be generated. If the data pattern length is set such that an odd number of packets are required to send the data, then a pad packet is appended to the end of the packet sequence. The pad packet has no payload and is only generated in this circumstance to accommodate the alternating sequence bit.

#### 4.10.2.12 Data PDU Payload Setting (LL_CONNECTION_UPDATE_REQ)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_CONNECTION_UPDATE_REQ.

**1. Opcode**

Display the Opcode field of the PDU Payload. The Opcode field identifies different types of LL Control PDU, as defined in following table.

| Opcode | LL Control PDU Name |
|---|---|
| 0x00 | LL_CONNECTION_UPDATE_IND |
| 0x01 | LL_CHANNEL_MAP_IND |
| 0x02 | LL_TERMINATE_IND |
| 0x03 | LL_ENC_REQ |
| 0x04 | LL_ENC_RSP |
| 0x05 | LL_START_ENC_REQ |
| 0x06 | LL_START_ENC_RSP |
| 0x07 | LL_UNKNOWN_RSP |
| 0x08 | LL_FEATURE_REQ |
| 0x09 | LL_FEATURE_RSP |
| 0x0A | LL_PAUSE_ENC_REQ |
| 0x0B | LL_PAUSE_ENC_RSP |
| 0x0C | LL_VERSION_IND |
| 0x0D | LL_REJECT_IND |
| 0x0E | LL_SLAVE_FEATURE_REQ |
| 0x0F | LL_CONNECTION_PARAM_REQ |
| 0x10 | LL_CONNECTION_PARAM_RSP |
| 0x11 | LL_REJECT_EXT_IND |
| 0x12 | LL_PING_REQ |
| 0x13 | LL_PING_RSP |
| 0x14 | LL_LENGTH_REQ |
| 0x15 | LL_LENGTH_RSP |
| 0x16 | LL_PHY_REQ |
| 0x17 | LL_PHY_RSP |
| 0x18 | LL_PHY_UPDATE_IND |
| 0x19 | LL_MIN_USED_CHANNELS_IND |
| 0x1A | LL_CTE_REQ |
| 0x1B | LL_CTE_RSP |
| 0x1C | LL_PERIODIC_SYNC_IND |
| 0x1D | LL_CLOCK_ACCURACY_REQ |
| 0x1E | LL_CLOCK_ACCURACY_RSP |
| 0x1F | LL_CIS_REQ |
| 0x20 | LL_CIS_RSP |

| | |
|---|---|
| **0x21** | LL_CIS_IND |
| **0x22** | LL_CIS_TERMINATE_IND |
| **0x23** | LL_POWER_CONTROL_REQ |
| **0x24** | LL_POWER_CONTROL_RSP |
| **0x25** | LL_POWER_CHANGE_IND |
| **All other values** | Reserved for future use |

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. WinSize**

Range: 1 to Lesser of 8 and (Interval – 1) ; Default: 1.

Set the WinSize field of the data PDU Payload. The WinSize field is set to indicate the *transmitWindowSize* value, in the following manner: *transmitWindowSize* = WinSize * 1.25ms.

**3. WinOffset**

Range: 0 to Interval ; Default: 0.

Set the WinOffset field of the advertising PDU Payload. The WinOffset field is set to indicate the *transmitWindowOffset* value, in the following manner: *transmitWindowOffset* = WinOffset * 1.25ms.

**4. Interval**

Range: 6 to 3200 ; Default: 6.

Set the Interval field of the advertising PDU Payload. The Interval field is set to indicate the *connInterval*, in the following manner: *connInterval* = Interval * 1.25 ms.

**5. Latency**

Range: 0 to 500 ; Default: 6.

Set the Latency field of the advertising PDU Payload. The Latency field is set to indicate the *connSlaveLatency* value, in the following manner: *connSlaveLatency* = Latency.

**6. Timeout**

Range: 10 to 3200 ; Default: 10.

Set the Timeout field of the advertising PDU Payload. The Timeout field is set to indicate the *connSupervisionTimeout* value, in the following manner: *connSupervisionTimeout* = Timeout *10 ms.

**7. Instant**

Range: 1 to 32767 ; Default: 1.

Set the count of LL connection event before the new LL connection event of the Bluetooth low energy packet.

#### 4.10.2.13 Data PDU Payload Setting (LL_CHANNEL_MAP_REQ)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_CHANNEL_MAP_REQ.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. ChM**

Range: 0x0000000000 to 0x1fffffffff ;

Default: 0x0000000001.

Set the ChM (channel map) field of the PDU Payload.

The ChM field contains channel map indicating used and unused data channels. Every channel is represented with bit positioned as per the data channel index. The LSB represents data channel index 0 and the bit in position 36 represents data channel index 36. A bit value of 0 indicates that the channel is Unused. A bit value of 1 indicates that the channel is Used. The bits in positions 37, 38 and 39 are reserved for future use.

**3. Instant**

Range: 1 to 32767 ; Default: 1.

Set the count of LL connection event before the new LL connection event of the Bluetooth low energy packet.

#### 4.10.2.14 Data PDU Payload Setting (LL_TERMINATE_IND, LL_REJECT_IND)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_TERMINATE_IND or LL_REJECT_IND.

1. **Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

2. **Error Code**

Range: 0x00 to 0xff ;

Default: 0x00.

Set the ErrorCode field of the PDU Payload. The ErrorCode field shall be set to inform the remote device why the connection is about to be terminated.

#### 4.10.2.15 Data PDU Payload Setting (LL_ENC_REQ)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_ENC_REQ.

1. **Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

2. **Rand**

Range: 0x0000000000000000 to 0xffffffffffffffff;

Default: 0x0000000000000000.

Set the random number that is provided by the Host and used with EDIV.

3. **EDIV**

Range: 0x0000 to 0xffff ;

Default: 0000.

Set the encrypted diversifier.

4. **SKDm**

Range: 0x0000000000000000 to 0xffffffffffffffff ;

Default: 0x0000000000000000.

Set the master's portion of the session key identifier.

5. **IVm**

Range: 0x00000000 to 0xffffffff ;

Default: 00000000.

Set the master's portion of the initialization vector.

#### 4.10.2.16 Data PDU Payload Setting (LL_ENC_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_ENC_RSP.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. SKDm**

Range: 0x0000000000000000 to 0xffffffffffffffff ;

Default: 0x0000000000000000.

Set the master's portion of the session key identifier.

**3. IVm**

Range: 0x00000000 to 0xffffffff ;

Default: 00000000.

Set the master's portion of the initialization vector.

#### 4.10.2.17 Data PDU Payload Setting (LL_START_ENC_REQ, LL_START_ENC_RSP, LL_PAUSE_ENC_REQ, LL_PAUSE_ENC_RSP, LL_PING_REQ, LL_PING_RSP, LL_CTE_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_START_ENC_REQ, LL_START_ENC_RSP, LL_PAUSE_ENC_REQ, LL_PAUSE_ENC_RSP, LL_PING_REQ, LL_PING_RSP or LL_CTE_RSP.

**Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

#### 4.10.2.18 Data PDU Payload Setting (LL_UNKNOWN_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_UNKNOWN_RSP.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. Unknown Type**

Range: 0x00 to 0xff ; Default: 0x00.

Set the Opcode field value of received LL Control PDU of the Bluetooth low energy packet.

#### 4.10.2.19 Data PDU Payload Setting (LL_FEATURE_REQ, LL_FEATURE_RSP, LL_SLAVE_FEATURE_REQ)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_FEATURE_REQ, LL_FEATURE_RSP or LL_SLAVE_FEATURE_REQ.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. Feature Set**

Range: 0x0000000000000000 to 0xffffffffffffffff;

Default: 0x0000000000000000.

Set the set of features supported by the master's Link Layer of the Bluetooth low energy packet.

#### 4.10.2.20 Data PDU Payload Setting (LL_VERSION_IND)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_VERSION_IND.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. VersNr (Version Number)**

Range: 0x00 to 0xff ;

Default: 00.

Set the version of the Bluetooth Controller specification.

**3. CompId (Company Identifier)**

Range: 0x0000 to 0xffff ;

Default: 0000.

Set the company identifier of the manufacturer of the Bluetooth Controller.

**4. SubVersNr (Sub-version Number)**

Range: 0x0000 to 0xffff ;

Default: 0000.

Set the unique value for each implementation or revision of an implementation of the Bluetooth Controller.

#### 4.10.2.21 Data PDU Payload Setting (LL_CONNECTION_PARAM_REQ, LL_CONNECTION_PARAM_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_CONNECTION_PARAM_REQ or LL_CONNECTION_PARAM_RSP.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. Interval_Min**

Range: 6 to 3200 ;

Default: 6.

Set the Interval_Min field of the PDU Payload. The Interval_Min field is set to indicate the minimum value of *connInterval*, in the following manner: *connInterval* = Interval_Min * 1.25 ms.

**3. Interval_Max**

Range: 6 to 3200 ;

Default: 3200.

Set the Interval_Max field of the PDU Payload. The Interval_Max field is set to indicate the maximum value of *connInterval*, in the following manner: *connInterval* = Interval_ Max * 1.25 ms.

**4. Latency**

Range: 0 to 500 ;

Default: 0.

Set the Latency field of the PDU Payload. The Latency field is set to indicate the *connSlaveLatency* value, in the following manner: *connSlaveLatency* = Latency. Latency is in units of number of connection events.

**5. Timeout**

Range: 10 to 3200 ;

Default: 10.

Set the Timeout field of the PDU Payload. The Timeout field is set to indicate the *connSupervisionTimeout* value, in the following manner: *connSupervisionTimeout* = Timeout *10 ms.

**6. Preferred Periodicity**

Range: 0 to 255 ;

Default: 0.

Set the PreferredPeriodicity field of the PDU Payload. The PreferredPeriodicityfield is set to indicate a value the connInterval is preferred to be a multiple of. PreferredPeriodicity is in units of 1.25 ms. A value of zero means no preference.

**7. Reference Connection Event Counter**

Range: 0 to 65535 ;

Default: 1.

Set the ReferenceConnEventCount field of the PDU Payload. The ReferenceConnEventCount is set to indicate the value of the connEventCounter relative to which all the valid Offset0 to Offset5 fields have been calculated.

**8. Offset 0-5**

Range: 0 to 3200, 65535;

Set the Offset 0-5 field of the PDU Payload.

The Offset 0-5 field is set to indicate the possible values of the position of the anchor points of the LE connection with the updated connection parameters relative to the ReferenceConnEventCount. Offset0 to Offset5 fields are in units of 1.25 ms and are in decreasing order of preference, that is, Offset0 is the most preferred value followed by Offset1 and so on. Offset0 to Offset5 shall be less than Interval_Max. A value of 0xFFFF (65535) means not valid. Valid Offset0 to Offset5 fields shall contain unique values. Valid fields shall always be before invalid fields.

#### 4.10.2.22 Data PDU Payload Setting (LL_REJECT_EXT_IND)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_REJECT_EXT_IND.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. Reject Opcode**

Range: 0x00 to 0xfff ; Default: 00.

Set the Opcode field value of the LL Control PDU being rejected.

**3. Error Code**

Range: 0x00 to 0xfff ; Default: 00.

Set the reason the LL Control PDU was being rejected.

#### 4.10.2.23 Data PDU Payload Setting (LL_LENGTH_REQ, LL_LENGTH_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_LENGTH_REQ or LL_LENGTH_RSP.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

2. **MaxRxOctets**

Range: 27 to 251 ; Default: 27.

Set the sender's connMaxRxOctets value. Please refer to section 4.5.10 of Vol 6 Part B of Core v5.2 for more information.

3. **MaxRxTime**

Range: 328 to 17040 ; Default: 328.

Set the sender's connMaxRxTime value. Please refer to section 4.5.10 of Vol 6 Part B of Core v5.2 for more information.

4. **MaxTxOctets**

Range: 27 to 251 ; Default: 27.

Set the sender's connMaxTxOctets value. Please refer to section 4.5.10 of Vol 6 Part B of Core v5.2 for more information.

5. **MaxTxTime**

Range: 328 to 17040 ; Default: 328.

Set the sender's connMaxTxTime value. Please refer to section 4.5.10 of Vol 6 Part B of Core v5.2 for more information.

#### 4.10.2.24 Data PDU Payload Setting (LL_PHY_REQ, LL_PHY_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_PHY_REQ or LL_PHY_RSP.

1. **Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

2. **RX PHYS**

Range: 0 to 7 ; Default: 1.

Set to indicate the receiver PHYs that the sender prefers to use.

3. **TX PHYS**

Range: 0 to 7 , Default: 1.

Set to indicate the transmitter PHYs that the sender prefers to use.

#### 4.10.2.25 Data PDU Payload Setting (LL_PHY_UPDATE_REQ)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_PHY_UPDATE_REQ.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. M_TO_S_PHY**

Range: 0 to 7 ; Default: 1.

Set to indicate the PHY that shall be used for packets sent from the master to the slave.

**3. S_TO_M_PHY**

Range: 0 to 7 ; Default: 1.

Set to indicate the PHY that shall be used for packets sent from the slave to the master.

**4. Instant**

Range: 1 to 32767 ; Default: 1.

Set the count of LL connection event before the new LL connection event of the Bluetooth low energy packet.

#### 4.10.2.26 Data PDU Payload Setting (LL_MIN_USED_CHANNELS_IND)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_MIN_USED_CHANNELS_IND.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. PHYS**

Range: 0 to 7 ; Default: 1.

Set to indicate the PHY(s) for which the slave has a minimum number of used channels requirement.

**3. MinUsedChannels**

Range: 2 to 37 ; Default: 2.

Set the minimum number of channels to be used on the specified PHY.

#### 4.10.2.27 Data PDU Payload Setting (LL_CTE_REQ)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_CTE_REQ.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. MinCTELenReq**

Range: 2–20 ; Default: 20.

Set the minimum length of the Constant Tone Extension requested from the remote device, in 8 µs units. Please refer to section 2.5.1 of Vol 6 Part B of Core v5.2 for more information.

**3. CTETypeReq**

Choice: AOA | AOD(1us) | AOD(2us) ; Default: AOA.

Set the type of the Constant Tone Extension requested from the remote device.

#### 4.10.2.28 Data PDU Payload Setting (LL_PERIODIC_SYNC_IND)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_PERIODIC_SYNC_IND.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

### 2. ID

Range: 0 to 65535 ;

Default: 65535.

Set the identifier provided by the Host.

### 3. SyncInfo

#### 1) Sync Packet Offset

Range: 0 – 8191 ;

Default: 8191.

Set the value of Sync Packet Offset field. The Sync Packet Offset field contains the time from a reference point to the start of the AUX_SYNC_IND packet that this SyncInfo field describes. The value of the Sync Packet Offset field is in the unit of time indicated by the Offset Units field; the offset is determined by multiplying the value by the unit.

#### 2) Offset Units

Choice: 30 us | 300 us ;

Default: 30 us.

Use the drop-down menu to select the units used by the Sync Packet Offset Field.

#### 3) Offset Adjust

Choice: 0 | 1 ;

Default: 0.

Set the value of Offset Adjust field. If the Offset Adjust field is set to 1, the actual sync packet offset adding 2.4576 seconds.

#### 4) Interval

Range: 6 – 65535 ;

Default: 6.

Set the value of Interval field. The Interval field contains the time in 1.25 ms units from the start of one packet of the periodic advertising train to the start of the next packet.

#### 5) ChM

Range: 0x0000000000 to 0x1fffffffff ;

Default: 0x0000000001.

Set the value of ChM (channel map) field.

The ChM field contains channel map indicating used and unused data channels. Every channel is represented with bit positioned as per the data channel index. The LSB represents data channel index 0 and the bit in position 36 represents data channel index 36. A bit value of 0 indicates that the channel is Unused. A bit value of 1 indicates that the channel is Used. The bits in positions 37, 38 and 39 are reserved for future use.

#### 6) SCA

Choice: 251-500 ppm | 151-250 ppm | 101-150 ppm | 76-100 ppm | 51-75 ppm | 31-50 ppm | 21-30 ppm | 0-20 ppm ;

Default: 251-500 ppm.

Use the drop-down menu to select the SCA (Sleep Clock Accuracy) type. The SCA field is set to indicate the *masterSCA*used to determine the worst-case Master's sleep clock accuracy

#### 7) Access Address

Range: Range: 0x00000000 to 0xffffffff ;

Default: 0x00000000.

Set the ACL connection's Access Address determined by the Link Layer. Please refer to section 2.1.2 of Vol 6 Part B of Core v5.2 for more information.

#### 8) CRCInit

Range: 0x000000 to 0xffffff ;

Default: 0x555555.

Set the initialization value for the CRC calculation for the ACL connection.

#### 9) Event Counter

Range: 0 – 65535 ; Default: 0.

Set the value of Event Counter field.

The Event Counter field contains the value of paEventCounter that applies to the AUX_SYNC_IND packet that this SyncInfo field describes. Please refer to section 2.3.4.6 of Vol 6 Part B of Core v5.2 for more information.

**4. connEventCount**

Range: 0 – 65535 ; Default: 0.

Set the connection event counter value that meets the requirement currEvent – $2^{14}$ < connEventCount < currEvent + $2^{14}$(modulo 65536), where currEvent is the counter value for the connection event when the LL_PERIODIC_SYNC_IND PDU is being transmitted (or retransmitted).

**5. lastPaEventCounter**

Range: 0 – 65535 ; Default: 0.

Set the paEventCounter applying to the AUX_SYNC_IND PDU used to determine the contents of the SyncInfo.

**6. SID**

Range: 0 – 15 ; Default: 0.

Set the Advertising SID subfield of the advertising set pointing to the periodic advertising.

**7. AType**

Range: 0 – 1 ; Default: 0.

Set the AType field to indicate whether the AdvA field is public (AType = 0) or random (AType = 1).

**8. SCA**

Choice: 251-500 ppm | 151-250 ppm | 101-150 ppm | 76-100 ppm | 51-75 ppm | 31-50 ppm | 21-30 ppm | 0-20 ppm ;

Default: 251 - 500 ppm.

Use the drop-down menu to select the SCA (Sleep Clock Accuracy) type. It will be included in SCA field of the PDU Payload. The SCA field is set to indicate the sleep clock accuracy of the device sending this PDU.

**9. PHY**

Range: 0 to 7 ; Default: 1.

Set to indicate the PHY used by the periodic advertising.

**10. AdvA**

Range: 0x000000000000 to 0xffffffffffff ;

Default: 0x000000000008.

set the advertiser's address in the advertising set pointing to the periodic advertising.

**11. syncConnEventCount**

Range: 0 – 65535 ; Default: 0.

Set the connection event counter for the connection event that the sending device used in determining the contents of this PDU.

#### 4.10.2.29 Data PDU Payload Setting (LL_CLOCK_ACCURACY_REQ, LL_CLOCK_ACCURACY_RSP)

Set **General Setting** -> **Channel Type** as Data, and set Packet Type as LL_CLOCK_ACCURACY_REQ or LL_CLOCK_ACCURACY_RSP.

**1. Opcode**

Display the Opcode field of the PDU Payload.

Note: This parameter is read-only and automatically updated when Packet Type is changed.

**2. SCA**

Choice: 251-500 ppm | 151-250 ppm | 101-150 ppm | 76-100 ppm | 51-75 ppm | 31-50 ppm | 21-30 ppm | 0-20 ppm ;


Default: 251 – 500 ppm.

Use the drop-down menu to select the SCA (Sleep Clock Accuracy) type. It will be included in SCA field of the PDU Payload. The SCA field is set to indicate the current masterSCA (if the PDU is sent by the master) or slaveSCA (if the PDU is sent by the slave) used to determine the worst-case sleep clock accuracy of the sending device.

## 4.11 5G NR

The protocol version realized by this software: 3GPP TS38 V17.3.0 (2022-09).

You can click 5G NR on the home page to enter the corresponding setting interface.

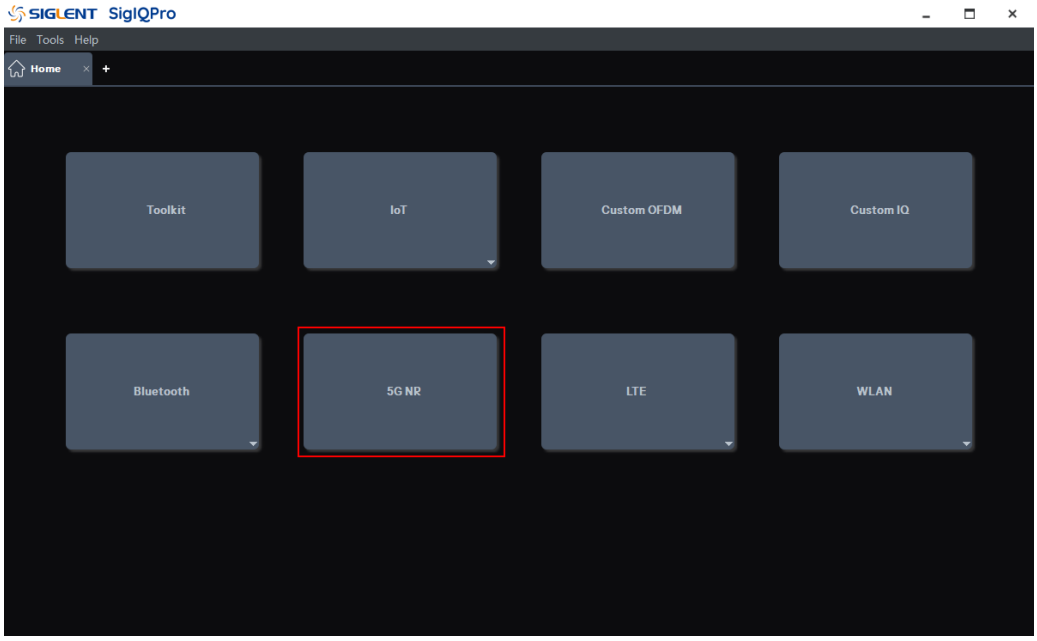


### 4.11.1 Waveform Setup

Click the Waveform Setup node in the tree view on the left side of the window to enter the waveform setup.

#### 4.11.1.1 Carrier List

**1. Add Carrier**

The number of carriers can be added: 1 ~ 16, default value: NR Download.

Add a new carrier at the end of the list, options: NR Download | NR Uplink | PRACH.

**2. Remove Carrier**

Remove the currently selected carrier;

**3. Copy Carrier**

Adds a copy of the selected channel to the end of the list.

The list shows all the channels, click one of them to select the channel and remove or copy it, and

view and modify the parameters of different channels in the tree view on the left side of the window.

#### 4.11.1.2 Basic

**1. Waveform Name**

This parameter defines the waveform name, when you download the waveform, the name you defined here will be displayed on the generator. Default is empty.

**2. Sample Rate**

Show the maximum sample rate of all carriers.

**3. Frames Number**

Settable range: 1 ~ 4 , default: 1.

Set the number of frames contained in the signal exported to file or sent down to the generator.

**4. Sample Points**

Display the total sample points of the waveform under current configuration.

**5. Waveform Length**

Displays the length of the waveform in the current configuration.

**6. Subframes Number**

Display the number of subframes in a frame.

**7. Mirror Spectrum**

Options: On | Off, Default: Off.

Toggles the state of mirror spectrum, on means inverting the Q channel in the signal IQ data.

**8. Phase Compensation**

Optional: On | Off, default value: On.

Set the phase compensation switch and the frequency of phase compensation.

Turn on Phase Compensation

To turn on the phase compensation, you need to set the transmitter frequency, which must match the transmitter frequency. When demodulating, it depends on what the frequency of the receiver is,

and you need to set the frequency of the receiver as the phase compensation frequency when demodulating.

Turn off phase compensation

At this time, you can transmit at any frequency, but the receiver frequency must be consistent with the transmitter frequency.

#### 9. Radio Frequency

Setting range: 0~200GHz,

default value: 1GHz.

When phase compensation is On, set the current phase compensation frequency.

#### 10. Antennas Number

Set the number of antennas to generate corresponding waveform data, currently only support single antenna.

### 4.11.1.3 Crest Factor Reduction

#### 1. Crest Factor Reduction

Options: On | Off,

default value: Off.

Toggles the enable state of Crest Factor Reduction.

If this parameter is configured as Off, the other parameters in this section will be hidden.

#### 2. Target PAPR

Configurable range: 3dB ~ 100dB ,

default value: 8dB.

Configure the target PAPR value for baseband signal clipping.

The clipping operation will try to iterate until the target PAPR value is reached or the maximum number of iterations is reached; therefore, when Max Iteration or Cancelling Percent is too small, the signal after clipping may not reach the target PAPR value.

#### 3. Max Iteration

Range: 1 ~ 20,

default value: 10.

Configure the maximum number of iterations for peak clipping.

The peak clipping process will try to perform the peak clipping operation iteratively until the target PAPR value is reached or the maximum number of iterations is reached.

### 4. Cancelling Percent

Range: 0% ~ 100%,

Default: 100%.

Configure the percentage of single peak canceling for the peak canceling process.

When performing a single clipping operation, the peak clipping amount is equal to the product of the excess of the peak sample point amplitude compared to the target PAPR limit and the single clipping ratio. If this parameter is too small, the clipping effect will be weakened and it may not be possible to reduce the baseband signal PAPR to the target value.

### 5. Block Size

Range: 20 ~ Total Sample Points,

Default: 1000.

Configure the block length of baseband signal during clipping.

When performing peak clipping, the baseband signal is divided into several signal segments, and the peak cancellation process is performed separately. For each segment, only a single peak will be canceled in a single iteration. If the segment length is too large, it will be difficult to perform offset operations on all peaks that exceed the target PAPR limit, resulting in the baseband signal PAPR value not reaching the target value.

### 6. Filter Mask

Configures the filter amplitude-frequency response data used to suppress spectral leakage during clipping processing.

The peak offset sequence generated in the clipping process is filtered before being superimposed on the baseband signal. The software automatically generates a FIR low-pass or band-pass filter based on the given filter amplitude-frequency response.

If the passband of the given filter is too wide, the spectral leakage will be difficult to be effectively suppressed; and if the passband is too narrow, the peak offset sequence will be difficult to effectively offset the peak overrun.

### 4.11.2 Carrier

Click on the **Carrier** node in the tree view on the left side of the window to enter the parameter settings.

#### 4.11.2.1 General Settings

**1. State**

Options: On | Off , Default: On.

Carrier Enable Switch.

**2. Frequency Offset**

Settable range: -400 MHz~ 400 MHz , default value: 0 MHz.

Sets the frequency offset of the current carrier.

**3. Timing Offset**

Setting range: 0~ 10 ms, default value: 0 s.

Set the time offset of current carrier.

**4. Power Boosting**

Settable range: -40 ~ 40dB, default value: 0 dB.

Set the relative power of current carrier.

**5. Initial Phase**

Settable range: 0 ~ 360°, default value: 0°.

Sets the initial phase of the current carrier.

#### 4.11.2.2 Spectrum Control

**1. Window Beta**

Setting range: 0~0.5, default value: 0.

Set Window Half Length, the value is the ratio of FFT length.

**2. Windowing Method**

Optional: Center at Symbol Boundaryl Start at Symbol Boundary.

Default Center at Symbol Boundary.

Windowing is a technique to reduce the spectral leakage of OFDM modulated signals by smoothing the switching between OFDM symbols. This software module implements two different windowing methods: Window centered at symbol boundary and Window starting at symbol boundary.

For the Window centered at symbol boundary method, the original OFDM symbol samples are cyclically extended at the beginning and end, and the cyclically extended data are copied from the original OFDM symbol samples at the end and the header of the samples. For OFDM symbols with cyclic prefix and/or cyclic suffix enabled, the cyclic delay data is copied before the cyclic prefix source data and/or after the cyclic suffix source data. The length of the cyclic delay at both ends is equal to one-fourth of the length of a single edge (rising or falling) of the window function.

After the cyclic delay, the center of the rising cosine window edge is aligned with the original boundary of the OFDM symbol, and the window function is multiplied point-by-point with the data at the beginning and end of the OFDM symbol. This is shown in the following figure

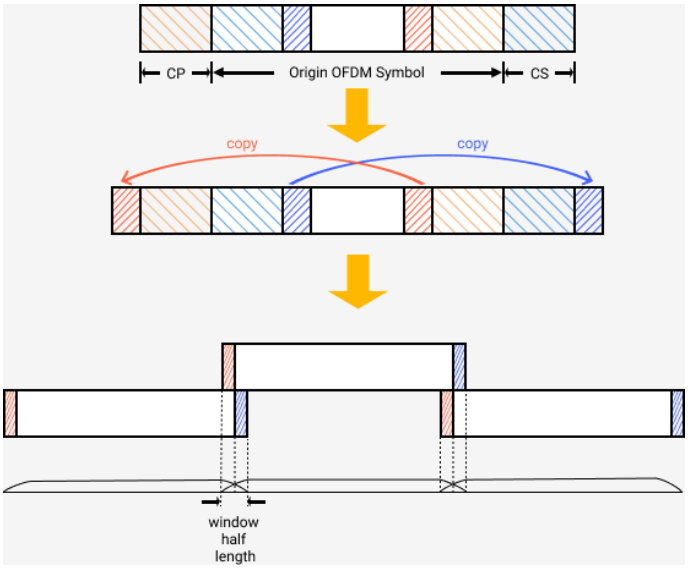



Figure 4-1 Window centered at symbol boundary approach

For the window starting at symbol boundary method, the original OFDM symbol sampled data is only cyclically extended at the tail, the cyclic extension method is similar to the previous method, but the extension length is one half of the single edge of the window function.

Then, the starting position of the ascending cosine window edge is aligned with the original boundary of the OFDM symbol, and the window function is multiplied point by point with the delayed data at the end of the OFDM symbol. This is shown in the following figure

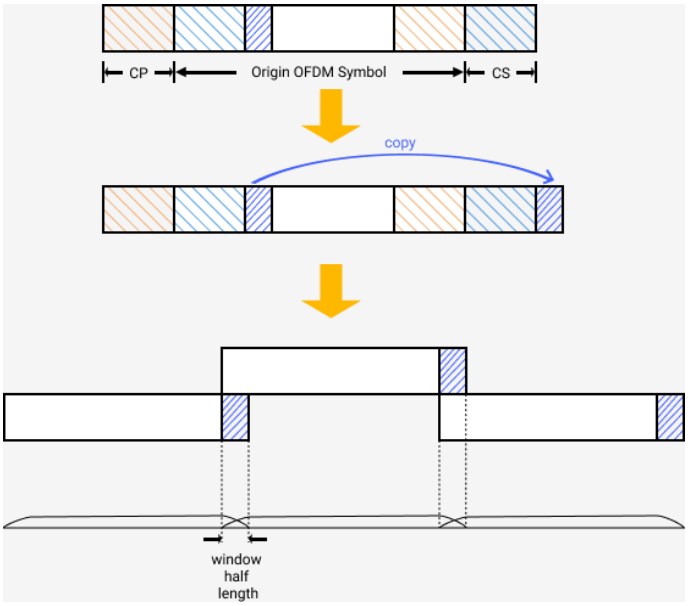



Figure 4-2 Window starting at symbol boundary approach

**3. Baseband Filter**

Options: On | Off , Default: On.

Baseband Filter switch, turn it on to filter each numerologies of the carrier.

#### 4.11.2.3 Cell-Specific Settings

**1. Carrier Type**

Options: NR Download | NR Uplink | PRACH.

This option is used to switch between different carriers.

**2. Cell ID**

Settable range: 0~1007, default 0.

Sets the cell ID number.

**3. Channel Bandwidth**

Optional range: 0~1007, default 0:

FR1 5MHz | FR1 10MHz | FR1 15MHz | FR1 20MHz | FR1 25MHz | FR1 30MHz

FR1 35MHz | FR1 40MHz | FR1 45MHz | FR1 50MHz | FR1 60MHz | FR1 70MHz

FR1 80MHz | FR1 90MHz | FR1 100MHz

FR2-1 50MHz | FR2-1 100MHz | FR2-1 200MHz | FR2-1 400MHz

FR2-2 100MHz | FR2-2 400MHz | FR2-2 800MHz | FR2-2 1600MHz | FR2-2 2000MHz .

Default value: FR1 100MHz .

To set the channel bandwidth, different bandwidths correspond to the three frequency ranges of FR1, FR2-1 and FR2-2 in the 3GPP protocol, and the constraints of subcarrier spacing SCS and number of RBs are shown in Table 4-1 ,Table 4-2 and Table 4-3 .

Table 4-1 （Table 5.3.2-1） *Transmission bandwidth configuration* $N_{RB}$ for FR1

| SCS (kHz) | 5 MHz | 10 MHz | 15 MHz | 20 MHz | 25 MHz | 30 MHz | 35 MHz | 40 MHz | 45 MHz | 50 MHz | 60 MHz | 70 MHz | 80 MHz | 90 MHz | 100 MHz |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ |
| 15 | 25 | 52 | 79 | 106 | 133 | 160 | 188 | 216 | 242 | 270 | N/A | N/A | N/A | N/A | N/A |
| 30 | 11 | 24 | 38 | 51 | 65 | 78 | 92 | 106 | 119 | 133 | 162 | 189 | 217 | 245 | 273 |
| 60 | N/A | 11 | 18 | 24 | 31 | 38 | 44 | 51 | 58 | 65 | 79 | 93 | 107 | 121 | 135 |

Table 4-2 (Table 5.3.2-2) *Transmission bandwidth configuration* $N_{RB}$for FR2-1

| SCS (kHz) | 50 MHz | 100 MHz | 200 MHz | 400 MHz |
|---|---|---|---|---|
| | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ |
| 60 | 66 | 132 | 264 | N/A |
| 120 | 32 | 66 | 132 | 264 |

Table 4-3 (Table 5.3.2-3) Transmission bandwidth configuration $N_{RB}$for FR2-2

| SCS (kHz) | 100 MHz | 400 MHz | 800 MHz | 1600 MHz | 2000 MHz |
|---|---|---|---|---|---|
| | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ | $N_{RB}$ |
| 120 | 66 | 264 | N/A | N/A | N/A |
| 480 | N/A | 66 | 124 | 248 | N/A |
| 960 | N/A | 33 | 62 | 124 | 148 |

### 4. Frequency Range

Displays the frequency band of the current carrier, there are three frequency bands FR1, FR2-1 and FR2-2 in the 3GPP protocol, when FR2 is mentioned, the frequency ranges of both FR2-1 and FR2-2 shall apply unless otherwise stated. This parameter is determined based on the Channel Bandwidth, see Table 4-4.

Table 4-4 Operating frequency range

| Frequency range designation | | Corresponding frequency range |
|---|---|---|
| FR1 | | 410 MHz - 7125 MHz |
| FR2 | FR2-1 | 24250 MHz - 52600 MHz |
| | FR2-2 | 52600 MHz - 71000 MHz |

### 5. Numerology

Options:

FR1: μ= 1:30KHz| μ = 2:60KHz ;

FR2-1: μ= 2:60KHz| μ = 3:120KHz| μ = 4:240KHz ;

FR2-2: μ= 3:120KHz| μ = 5:480KHz| μ = 6:960KHz .

This parameter is the subcarrier parameter set μ, which is used to characterize the waveform, and supports seven different subcarrier intervals, as shown in Table 4-1 to Table 4-3 and Table 4-5 . The Numerologies related parameters are: SubcarrierSpacing and μ, CyclicPrefix type (CyclicPrefix: normal and Extended), RB Start and RB Size.

Table 4-5 Parameter Set Settings for Supported Transmissions

| $\mu$ | $\Delta f = 2^{\mu} \cdot 15[\mathrm{kHz}]$ | Cyclic prefix |
|---|---|---|
| 0 | 15 | Normal |
| 1 | 30 | Normal |
| 2 | 60 | Normal, Extended |
| 3 | 120 | Normal |
| 4 | 240 | Normal |
| 5 | 480 | Normal |
| 6 | 960 | Normal |

### 6. Sample Rate

Displays the sample rate calculated from the maximum configured bandwidth of the current carrier activation.

### 7. Intra-Cell Guard Band (u =1) (uplink)

This parameter sets up to four protection bands within the cell in the NR spectrum sharing scenario. Three parameters can be set for each guard band as follows:

#### 1) Guard Band Start

Settable range: 1~ 158 ;

Sets the guard band start position.

#### 2) Guard Band Size

Setting range: 1~ 158 ;

Sets the number of CRBs.

#### 3) Guard Band End

Settable range: 1~ 158 ;

Sets the end position of the guard band.

Note: This parameter is used for uplink only and will be hidden when **Carrier Type** is switched to Downlink or PRACH.

### 8. Point A

Displays a reference point for frequency domain resource allocation within a certain bandwidth, i.e. Common Resource Block 0 (CRB0).

### 9. Configured Bandwidth

Displays the maximum value corresponding to the numerologies of the current carrier's configured bandwidth.

### 10. RB Start

Configurable range: 0~ Maximum number of RBs under current Numerologies - 6 .

Sets the starting RB position under current Numerologies, the parameter is the offset relative to pointA.

### 11. RB Size

Settable range: 6~ Maximum number of RBs under current Numerologies - **RB start** .

Set the number of RBs under current Numerologies.

### 12. k0

Can be set for Single Numerology.

Settable range: -6, 0 , 6 ,

default value: 0.

Set the offset of the center of the resource cell of the current Numerologies relative to the center of the Carrier.

#### 4.11.2.4 BWP

BWP (Bandwidth part) is a set of sub-resources from the common resource. A Carrier can define multiple BWPs, and all channels except SSB must be transmitted on the specified BWP.

**1. Add BWP**

Multiple BWPs can be added.1.

Adds a new BWP to the end of the list.

**2. Remove BWP**

Removes the currently selected BWP.

**3. Copy BWP**

Adds a copy of the selected BWP to the end of the list.

**4. ID**

Show the ID of the currently selected BWP, when you add a new BWP, the ID will be increased from 1 by default.

**5. Name**

Displays the name of the currently selected BWP, and when you add a new BWP, it will be named in order from BWP1 to BWPn.

**6. Numerology**

Sets the subcarrier interval for the current BWP, constrained by the parameters **Numerology** (see5 ) and **Channel Bandwidth**.

**7. Cyclic Perfix**

Displays the CP type of the current BWP.

**8. RB start**

Settable range: **RB start** of corresponding Numerologies ~ Maximum number of RBs under current Numerologies - 6.

Set the RB start position of current BWP, this parameter is the offset relative to pointA, this parameter must be greater than or equal to the **RB start of** corresponding Numerologies (see10 ).

**9. RB Number**

Settable range: 6~ Maximum number of RBs under current Numerologies - **RB start** .

Sets the number of RBs in the current BWP.

**10. Number of Coreset**

Range: 1~ 3.

Sets the number of coresets in the current BWP.

**11. First Coreset index**

Displays the index of the first CORESET.

#### 4.11.2.5 Uplink

##### 4.11.2.5.1 UL FRC Config

Click **UL FRC Config** when the waveform type is Uplink to enter the setting of uplink Fixed Reference Channels test mode.

**1. Fixed Reference Channels**

Optional:

FR1-FRC-A-1| FR1-FRC-A-2| FR1-FRC-A-3| FR1-FRC-A-3A| FR1-FRC-A-3B

FR1-FRC-A-4| FR1-FRC-A-5| FR1-FRC-A-8-A-7| FR1-FRC-A-9-A-8| FR1-FRC-A-1

FR1-FRC-A-2| FR1-FRC-A-3| FR1-FRC-A-3A| FR1-FRC-A-3B| FR1-FRC-A-4

FR1-FRC-A-5| FR1-FRC-A-8-A-7| FR1-FRC-A-9-A-8

Default value: FR1-FRC-A-1 .

Select different fixed reference channel test modes, corresponding to 3GPP protocol 38.141 Appendix A.

**2. Reference Channel**

Optional:

G-FR1-A1-1 | G-FR1-A1-2 | G-FR1-A1-3 | G-FR1-A1-4 | G-FR1-A1-5 | G-ER1-A1-6
G-FR1-A1-7 | FR1-A1-8 | G-FR1-A1-9 | G-FR1-A1-10 | G-FR1-A1-11 | G-FR1-A1-12
G-FR1-A1-13 | G-FR1-A1-14 | G-FR1-A1-15 | G-FR1-A1-16 | G-FR1-A1-17
G-FR1-A1-18 | G-FR1-A1-19

G-FR1-A2-1 | G-FR1-A2-2 | G-FR1-A2-3 | G-FR1-A2-4 | G-FR1-A2-5 | G-FR1-A2-6
G-FR1-A2-7 | G-FR1-A2-8 | G-FR1-A2-9 | G-FR1-A2-10 | G-FR1-A2-11 | G-FR1-A2-12
G-FR1-A2-13 | G-FR1-A2-14

G-FR1-A3-8 | G-FR1-A3-9 | G-FR1-A3-10 | G-FR1-A3-11 | G-FR1-A3-12 | G-FR1-A3-13
G-FR1-A3-14 | G-FR1-A3-22 | G-FR1-A3-23 | G-FR1-A3-24 | G-FR1-A3-25
G-FR1-A3-26 | G-FR1-A3-27 | G-FR1-A3-28 | G-FR1-A3-31 | G-FR1-A3-32
G-FR1-A3-33 | G-FR1-A3-33A | G-FR1-A3-34 | G-FR1-A3-34A | G-FR1-A3-35
G-FR1-A3-36 | G-FR1-A3-37 | G-FR1-A3-38

G-FR1-A3A-1 | G-FR1-A3A-2 | G-FR1-A3A-3 | G-FR1-A3A-4

G-FR1-A3B-1 | G-FR1-A3B-2 | G-FR1-A3B-3 | G-FR1-A3B-4 | G-FR1-A3B-5
G-FR1-A3B-6 | G-FR1-A3B-7 | G-FR1-A3B-8

G-FR1-A4-8 | G-FR1-A4-9 | G-FR1-A4-10 | G-FR1-A4-11 | G-FR1-A4-12 | G-FR1-A4-13
G-FR1-A4-14 | G-FR1-A4-22 | G-FR1-A4-23 | G-FR1-A4-24 | G-FR1-A4-25
G-FR1-A4-26 | G-FR1-A4-27 | G-FR1-A4-28 | G-FR1-A4-29 | G-FR1-A4-29A
G-FR1-A4-30 | G-FR1-A4-30A-FR1-A4-31A | G-FR1-A4-31 | G-FR1-A4-32A
G-FR1-A4-32

G-FR1-A5-8 | G-FR1-A5-9 | G-FR1-A5-10 | G-FR1-A5-11 | G-FR1-A5-12 | G-FR1-A5-13
G-FR1-A5-14-FR1-A5-15 | G-FR1-A5-16

G-FR1-A8-1 | G-FR1-A8-2 | G-FR1-A8-3 | G-FR1-A8-4

G-FR1-A9-1 | G-FR1-A9-2 | G-FR1-A9-3 | G-FR1-A9-4 | G-FR1-A9-5

Default value: G-FR1-A1-1 .

Select the test mode of different subcarriers according to different Fixed Reference Channels, corresponding to 3GPP protocol 38.141 Appendix A.

### 3. Bandwidth

Optional: there are different selection intervals according to the selection of the parameter **Reference Channel** .

Default value: FR1 50 MHz.

Please refer to Appendix A of 3GPP protocol 38.141 for the test mode of selecting different fixed reference channels.

### 4. Duplex Type

Optional: TDD | FDD, default: TDD.

Select different duplex types.

### 5. Periodicity

Optional: 0.50 ms| 1.00 ms| 2.00 ms| 2.50 ms| 5.00 ms| 10.00 ms .

Default: 2.00 ms .

Sets the period of generating resources for determining different time slot allocations, constrained by the parameter **Reference Channel** .

### 6. Number of Uplink Slots

Configurable range: 0~ 10 , default value: 1.

Set the number of uplink slots, constrained by the parameter **Periodicity** .

Note: Only available when TDD is selected for Duplex Type, and will be hidden when FDD is selected for Duplex Type.

### 7. TDD Slot Allocation

Displays the uplink and downlink slot allocation of the current carrier, constrained by the parameter **Number of Uplink Slots** .

### 8. RB Offset

Settable range: 0~ Maximum number of RBs under current Numerologies - **RB start** , Default

value: 0.

Set the number of RBs for offset.

**9. Mapping Type**

Optional: Type Al Type B , Default: Type A .

Used to set the PUSCH mapping type.

**10. DMRS Type A Position**

Optional: 2| 3 , Default: 2.

Sets the high-level parameter dmrs-TypeA-Position.

**11. Phase Compensation**

Optional: On | Off , default: On.

Sets the phase compensation switch and the frequency of phase compensation.

**12. Radio Frequency**

Settable range: 0~200GHz, default value: 1GHz.

Set the current frequency of phase compensation when phase compensation is On.

#### 4.11.2.5.2 PUCCH Test Config

Click **PUCCH Test Config** to enter the PUCCH test mode setting when the waveform type is Uplink.

**1. Test Model Type**

Optional:

38.141-8.3.1 ACK missed detection for PUCCH format 0

38.141-8.3.2.1 NACK to ACK detection for PUCCH format 1

38.141-8.3.2.2 ACK missed detection for PUCCH format 1

38.141-8.3.3.1 ACK missed detection for PUCCH format 2

38.141-8.3.3.2 UCI BLER performance for PUCCH format 2

38.141-8.3.4 UCI BLER performance for PUCCH format 3

38.141-8.3.5 UCI BLER performance for PUCCH format 4

38.141-8.3.6.1.1 NACKto ACK detection for multi-slot PUCCH format 1

38.141-8.3.6.1.2 ACK missed detection for multi-slot PUCCH format 1

38.141-8.3.7 ACK missed detection for interlaced PUCCH format 0

38.141-8.3.8.1 NACK to ACK detection for interlaced PUCCH format 1

38.141-83.8.2 ACK missed detection for interlaced PUCCH format 1

38.141-8.39 UCI BLER performance for interlaced PUCCH format 2

38.141-8.3.10 ACK missed detection for interlaced PUCCH format 3

Default entry: 38.141-8.3.1 ACK missed detection for PUCCH format 0 .

Select the type of PUCCH test you want.

### 2. SubCarrier Spacing

Optional: 15KHz| 30KHz| 60KHz| 120KHz .

Default value: 30KHz .

Select the subcarrier spacing for the current test pattern.

### 3. Bandwidth

Optional: FR1 10MHz| FR1 20MHz| FR1 40MHz| FR1 100MHz| FR2 50MHz| FR2 100MHz .

Default: FR1 100MHz .

Select the bandwidth of the current test mode, constrained by SubCarrier Spacing .

### 4. Duplex Type

Optional: TDD | FDD , default: TDD.

Select different duplex types.

### 5. Number of Symbols

Selectable range: 1~ 2 , default value: 1.

Set the number of symbols for the current test mode.

Note: Displayed in some test modes only, fixed to 1 for the rest of the test modes.

### 6. Additional DMRS State

Optional: Off| On .

Default value: Off .

Sets whether PUCCH Format 3 and PUCCH Format 4 use additional DMRS.

### 7. Tranemission Periodicity

Options: 500 µs | 625 µs | 1000 µs | 1250 µs | 2000 µs | 2500 µs | 5000 µs | 10000 µs .

Default value: 5000 µs .

Set the transmission period of current test mode.

**8. Number of Downlink Slots**

Sets the number of consecutive Full DL slots, starting from the start position.

The range is determined by numerology and slot configuration.

**9. Number of Uplink Slots**

Sets the consecutive Full UL slots. starting from the end position.

The range is determined by numerology and slot configuration.

**10. TDD Slot Allocation**

Set the current test mode uplink and downlink slot allocation, enter "U" to indicate that the current time slot is uplink, "S" to indicate that the current time slot is special symbol, and "D" to indicate that the current time slot is downlink. Enter "U" to indicate that the current time slot is uplink, enter "S" to indicate that the current time slot is special symbol, enter "D" to indicate that the current time slot is downlink.

**11. Format3 Test Type**

Option: Test 1| Test 2, Default: Test 1.

The test type can be selected when PUCCH is Format 3.

#### 4.11.2.5.3 PUCCH

Click the PUCCH node in the tree view on the left side of the window to enter the parameter settings.

You can define more than one PUCCH per BWP.

**1. Add PUCCH**

Multiple PUCCH channels can be added, default value: 1.

Add a new PUCCH channel at the end of the list.

**2. Remove PUCCH**

Removes the currently selected PUCCH channel.

### 3. General Settings

#### 1) Name

Displays the name of the currently selected PUCCH channel. When you add a new PUCCH channel, it will be named in order from UCI0 to UCIn.

#### 2) State

Optional: On | Off, default: On.

PUCCH channel enable switch.

#### 3) Power Boosting

Settable range: -40 dB~ 40 dB. Default value: 0 dB.

Sets the power of PUCCH data relative to other channels.

#### 4) PUCCH Format

Settable range: Format 0 | Format 1 | Format 2 | Format 3 | Format 4.

Default: Format 0.

Select the PUCCH format.

### 4. Transmission Settings

#### 1) Allocated Slots

Settable range: 0~ 10*2^μ, default value: 0.

Sets the Slot number for transmitting PUCCH in one frame. It can be set in the following three ways:

a) If you need to configure by individual slots, you can use "," as the separator, e.g.: 0,1,2,3.

b) If you need to configure by range of slots, you can use 2:7 for start index and last index, for example 2:7 for 2,3,4,5,6,7.

c) If you need to configure by different steps, you can use two ":" to indicate the start slot, step and last slot respectively, for example, 0:2:8 means 0,2,4,6,8.

The above three configuration methods can be used in combination.

#### 2) First Symbol

Settable range: 0~ 13, the default value is determined according to different PUCCH formats.

Set the first symbol of current PUCCH.

### 3) Symbol Number

Set the number of available symbols for current PUCCH, the setting range depends on different PUCCH format, please refer to Table 4-6 PUCCH format and symbol constraints. .

Table 4-6 PUCCH format and symbol constraints.

| PUCCH format | Number of symbols |
|---|---|
| 0 | 1 – 2 |
| 1 | 4 – 14 |
| 2 | 1 – 2 |
| 3 | 4 – 14 |
| 4 | 4 – 14 |

### 4) BandWidth Part

Selects the BWP of the current PUCCH transmission.

### 5) Interlaced Transmission

Optional: On | Off, Default: On.

Interleave Transmission Enable Switch, Interleave Transmission only supports subcarrier intervals of 15kHz and 30kHz, and conflicts with frequency hopping.

Note: When Interleave transmission is On, the parameters **RB Offset** and **RB Number** will be hidden and the parameters **RB-Set Index** , **Interlace0** and **Interlace1** will be displayed.

### 6) RB set Index

The settable range is determined according to the carrier setting, default value: 0.

Sets the RB set index used for the current PUCCH transmission.

### 7) Interlace0

Settable range: -1~ 9 (u = 0) | 0~ 4 (u = 1); default value: 0.

Sets the parameter Interlace0 for the current PUCCH, see 3GPP Physical Layer Protocol (TS38.211) for details.

Note: Displayed only if the parameter **Interlaced Transmission** is On.

### 8) Interlace1

Settable range: -1~ 9 (u = 0) | -1~ 4 (u = 1);

Default: -1 (i.e. no configuration).

Sets the parameter Interlace1 for the current PUCCH, see 3GPP Physical Layer Protocol (TS38.211) for details.

Note, only displayed if the parameter **Interlaced Transmission** is On and **the PUCCH Format** is format 2| 3.

#### 9) PUCCH Interlace0

Optional: 10 | 11 | not configured, default: 10.

Set the number of RBs after current PUCCH interleaving, not configured means the number of RBs is unlimited and distributed in the whole bandwidth.

Note: Displayed only when the parameter **Interlaced Transmission** is On.

#### 10) PUCCH Interlace1

Options: 10 | 11 | not configured, Default: 10

Sets the current number of RBs after PUCCH interleaving, not configured means the number of RBs is unlimited and distributed in the whole bandwidth.

Displayed only when **Interlaced Transmission** is On and **PUCCH Format** is format 2| 3.

#### 11) RB Offset

Settable range: 0~ Current BWP RB number - 1 , Default value: 0.

Set the offset RB number of current PUCCH relative to the start of BWP.

#### 12) RB Number

Settable range: See Table 4-7 PUCCH format and RB number constraints .

Sets the number of RBs for the current PUCCH.

Table 4-7 PUCCH format and RB number constraints

| PUCCH format | RB Number |
|---|---|
| 0 | 1 |
| 1 | 1 |
| 2 | 1 - 16 |
| 3 | 1 - 16 (except 7, 11, 13, 14) |
| 4 | 1 |

### 5. PUCCH Parameters

#### 1) Hopping ID

Settable range: -1~ 1023 ,

Default value: -1 (Setting to -1 means CellID is used).

Set the hopping ID when the current PUCCH is in the format 0| 1| 3| 4.

Note: Displayed only when **PUCCH Format** is format 0| 1| 3| 4.

#### 2) PUCCH-Group Hopping

Optional: Neither | Enable | Disable ,

Default: Neither .

Sets the high-level parameter pucch-GroupHopping when PUCCH is format 0| 1| 3| 4, as described in the 3GPP protocol.

Note: Displayed only when **PUCCH Format** is format 0| 1| 3| 4.

#### 3) Scrambling ID

Settable range: -1~ 1023 ,

Default: -1 (setting to -1 means CellID is used).

Set the scrambling ID for scrambling sequence generation.

Note: Displayed only when **PUCCH Format** is format 2| 3| 4.

#### 4) n RNTI

Settable range: 0~ 65535 , Default value: 0.

Sets the n_RNTI parameter generated by the scrambling code sequence.

Note: Displayed only when **PUCCH Format** is format 2| 3| 4.

#### 5) N_ID_0

Settable range: -1~ 65535 ,

Default value: -1 (set to -1 to use CellID) .

N_ID_0 of DMRS sequence is set when the current PUCCH is format 2| 3| 4 .

Note: Displayed only when **PUCCH Format** is format 2| 3| 4.

#### 6) Initial Cyclic Shift

Settable range: 0~ 11 ,

Default value: 0.

Set the initial cyclic shift ($m_{(0)}$) of its sequence when the current PUCCH is format 0| 1.

Note: Displayed only when **PUCCH Format** is format 0| 1.

#### 7) intra-slot Frequency Hopping

Options: On | Off , Default: Off.

Enable/disable intra-slot frequency hopping. Only supported by PUCCH format 1.

Note: Displayed only when **PUCCH Format** is format 1.

#### 8) Number of Slots for PUCCH Repetition

Configurable range: 1~ Min (number of slots configured, 8),

Default: 1 .

Sets the number of slots for PUCCH repetition during PUCCH transmission.

Note: Displayed only when **PUCCH Format** is format 1| 3| 4.

#### 9) Pi/2 BPSK Enabled

Options: On | Off , Default: Off.

Enables or disables Pi/2 BPSK modulation.

Note: Displayed only when **PUCCH Format** is format 3| 4.

#### 10) Additional DMRS

Optional: On | Off , Default: Off.

Enables or disables additional DMRS.

Note: Displayed only when **PUCCH Format** is format 3| 4.

#### 11) DMRS Power Boosting

Settable range: -40 dB~ 40 dB ,

Default value: 0 dB.

Sets the power of DMRS relative to PUSCH.

#### 12) dmrs-Uplink Transform Precoding PUCCH

Optional: On | Off , default: Off .

Enable or disable the high-level parameter *dmrs-UplinkTransformPrecodingPUCCH* specified by

3GPP protocol.

**13) Second Hop RB offset**

Settable range: 0~ Current BWP RB number - 1 ,

Default value: 0 .

Set the first PRB position of the second hopping frequency when the hopping frequency is turned on.

**14) inter-slot Frequency Hopping**

When the number of slots is greater than 1, i.e., the number of slots configured by the parameter **Allocated Slots** is greater than 1, turn on and off the inter-slot hopping frequency. Only PUCCH format 1 is supported.

Note: Displayed only when **PUCCH Format** is format 1.

**15) OCC Index**

Sets the index value of the spread spectrum sequence, which corresponds to the parameter TimeDomainOCC of PUCCH Format 1 and the parameter occ-Index of PUCCH Format 2| 3| 4 in 3GPP protocol.

Note: Displayed only when **PUCCH Format** is format 1| 2| 3| 4.

**6. PUCCH Contents**

**1) UCI Format**

Optional: SR and HARQ-ACK | HARQ-ACK| SR

Selects UCI contents when PUCCH is format 0| 1.

Note: Displayed only when **PUCCH Format** is format 0| 1, and when **PUCCH Format** is format 1, the current parameter only supports HARQ-ACK| SR.

**2) SR Configuration**

Optional: Negative | Positive, default: Negative.

Select SR configuration.

Note:

① When the parameter **UCI Format** is SR, the current parameter is Positive by default and is not assignable;

② When the parameter **UCI Format** is HARQ-ACK, the current parameter is hidden.

#### 3) Scrambling State

Optional: On | Off , default: On.

Enables or disables PUCCH channel data scrambling.

Note: Displayed only when **PUCCH Format** is format 2| 3| 4.

#### 4) Channel Coding

Options: On | Off , Default: On.

Enables or disables channel coding.

Note: Displayed only when **PUCCH Format** is format 2| 3| 4.

#### 5) UCI Content

Optional: On | Off , Default: Off.

Enables or disables the control information content (UCI) when PUCCH is Format 2| 3| 4 .

Note: Displayed only when **PUCCH Format** is format 2| 3| 4.

#### 6) Payload data

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files , Default: PN9 ITU .

Set the Payload data type, you can choose PN code or custom data.

#### 7) Payload size

The settable range calculates the constraints according to the specific RE number and coding related content, see 3GPP protocol for details.

Set the Payload data size.

### 4.11.2.5.4 PUSCH

Click the PUSCH node in the tree view on the left side of the window to enter the parameter setting.

#### 1. Add PUSCH

Multiple PUSCH channels can be added, the default number is 1.

Add a new PUSCH channel at the end of the list.

### 2. Remove PUSCH

Removes the currently selected PUSCH channel.

### 3. General Settings

#### 1) State

Options: On | Off ,

Default: On.

PUSCH Channel Enable Switch.

#### 2) Power

Settable range: -40 dB~ 40 dB ,

Default value: 0 dB.

Sets the power of PUCCH data relative to other channels.

#### 3) RNTI

Settable range: 0~ 65535 ,

default value: 0.

Set the n_RNTI of the PUSCH data scrambling sequence to distinguish different UEs.

#### 4) nID

Configurable range: -1~ 1023 ,

Default: -1 (setting to -1 means CellID is used).

Sets the nID of the PUSCH data scrambling sequence.

#### 5) Transform Precoding

Optional: On | Off , Default: Off.

Enables or disables Transform Precoding.

#### 6) Rapid

Settable range: -1~ 63 ,

Default: -1 (i.e. no configuration).

Sets $n_{\mathrm{RAPID}}$ for the PUSCH data scrambling sequence.

### 4. Transmission Settings

#### 1) DMRS Port(s)

Settable range: 0~ 4 ,

Default value: 0.

Set the DMRS port number, can set one or more values, when set more than one value, it means PUSCH has multiple layers, the maximum support is 4 layers. For specific constraints, see Table 4-8 .

Table 4-8 Antenna Port and DM-RS Duration Constraint Relationships

| DM-RS Duration | $l'$ | Supported Antenna Ports $\tilde{p}$ | |
|---|---|---|---|
| | | Configuration type 1 | Configuration type 2 |
| single-symbol DM-RS | 0 | 0 – 3 | 0 – 5 |
| double-symbol DM-RS | 0, 1 | 0 – 7 | 0 – 11 |

#### 2) Layers Number

The setting range is constrained by **DMRS Port(s)** , see 3GPP protocol for details.

Set the number of PUSCH layers, the maximum support is 4 layers.

#### 3) Antenna Port Number

Optional: 1| 2| 4 , Default: 1.

Set the total antenna number, maximum support 4 antennas.

#### 4) Number of DMRS CDM groups without data

Configurable range: 1~ 2 (configuration Type1)| 1~ 3 (configuration Type2) ,

Default: 1.

Sets the number of CDM groups of DMRS that are not allowed to map PUSCH data.

#### 5) Antenna Port(s)

Options: Port_0 | Port_1 | Port_2 | Port_3 ,

Default: Port_0 .

Selects the data for each antenna, specifying which layer's data stream or which antenna port (with precoding) the corresponding antenna outputs.

#### 6) TPMI

Settable range:

- Single layer single antenna: 0;

- Single layer 2 antenna: 0~ 5;
- Single layer 4 antenna: 0~ 27;
- 2-layer 2 antenna: 0~ 2;
- 2 layer 4 antenna: 0~ 21;
- Layer 3 4 antenna: 0~ 6;
- layer 4 antenna: 0~ 4.

Default value: 0 .

When the parameter **Codebook** is On, you can set the corresponding code matrix index according to the number of layers and antenna ports.

#### 7) Codebook

Optional: On | Off , Default: Off .

Enables or disables codebook transmission.

### 5. Resource Allocation

#### 1) Allocated Slots

Settable range: 0~ 10*2^μ , Default value: 0.

Sets the Slot number of the transmitted PUSCH in one frame. It can be set in the following three ways:

- If you need to configure by single slot, you can use "," as the separator, e.g.: 0,1,2,3 .
- If you need to configure by a range of slots, you can use 2:7 to indicate the start index and the last index, e.g. 2:7 means 2,3,4,5,6,7.
- If you need to configure by different steps, you can use two ":" to indicate the starting slot, step and last slot respectively, for example, 0:2:8 means 0,2,4,6,8.

  The above three configuration methods can be used in combination.

#### 2) Symbol Start

Range: 0~ 13 , Default: 0.

Set the first symbol position of current PUSCH.

#### 3) Symbol Number

Setting range: 0~ 14 (Normal)| 0~ 11 (Extended),

default value: 14| 11.

Set the number of available symbols for current PUSCH, the maximum value is related to CP type.

#### 4) BWP

Select the BWP for current PUSCH transmission.

#### 5) Resource Allocation Type

Optional: Type0| Type1 | Type2 ,

Default: Type1 .

Select the frequency domain resource allocation type, see 3GPP Protocol Physical Layer for details.

#### 6) RB Offset

Settable range: 0~ Current BWP RB number - 1 ,

Default value: 0 .

Sets the offset RB number relative to the start of BWP when the current PUSCH is Type1.

Note: Displayed only when **Resource Allocation Type** is Type1.

#### 7) RB Number

Range: 0~ Current BWP RB Number - **RB Offset** ,

Default: Maximum RB Number.

Sets the number of RBs when the current PUSCH is Type1.

Note: Displayed only when **Resource Allocation Type** is Type1.

#### 8) RBGsize

Settable range: select the RBG range according to the resource size of BWP, the specific constraints are shown in the Table 4-9 , default value: 16.

Set the size of RBG.

Table 4-9 BWP and RBG constraints

| Bandwidth Part Size | RBG Configuration 1 | RBG Configuration 2 |
|---|---|---|
| 1 - 36 | 2 | 4 |
| 37 - 72 | 4 | 8 |
| 73 - 144 | 8 | 16 |
| 145 - 275 | 16 | 16 |

#### 9) RBGBitmap

Setting content: one bit represents one RBG, setting 1 means active, the number of bits is calculated according to the RBG size meter and BWP.

Sets the number and location of RBGs.

Note: Displayed only when the parameter **Resource Allocation Type** is Type0.

#### 10) Hopping Mode

Optional: Disable| Intra-slot Frequency hopping| Inter-slot Frequency hopping,

default: Disable .

Select to turn off or on the different hopping modes.

Note: Displayed only when the parameter **Resource Allocation Type** is Type0.

#### 11) Hopping RB Offset

Settable range: 0~ Current BWP RB Number - **RB Number** - **RB Offset** ,

default value: 0.

When the parameter **Hopping Mode** is turned on, set the RB offset parameter for calculating the RB start of every second hop.

Note: Displayed only when the **Hopping Mode** parameter is not Disable.

### 6. Modulation and Coding

#### 1) Coding

Options: On | Off , Default: On.

Enables or disables LDPC coding of PUSCH data.

#### 2) MCS Table

When transmission precoding is not enabled:

Options: QAM64| QAM256| QAM64Low SE| QAM1024 .

When transmission precoding is enabled:

Optional: QAM64| QAM256| QAM64Low SE| QAM1024 ,

Default: QAM64 .

Select the table for calculating the TB size accordingly, see 3GPP Protocol Physical Layer Agreement for the table.

#### 3) MCS Index

Default value: 0.

Sets the corresponding MCS index, with the specific range related to the table corresponding to the 3GPP protocol.

#### 4) xOverhead

Optional: 0 | 6 | 12 | 18, Default: 0.

Sets the high-level parameter *xOverhead* of the 3GPP protocol, *which* is used to set the parameter $N_{oh}^{PRB}$ for calculating the TBS.

#### 5) Coding Rate

Displays the coding rate, obtained from the parameter **MCS Table** .

#### 6) Modulation

Displays the modulation mode, obtained from the **MCS Table** .

#### 7) Payload Data

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files.

Default: PN9.

Set the Payload Data type, you can choose PN code or customized data.

#### 8) RV index

Settable range: 0~ 3 ,

Default value: 0.

Set the RV index of redundant version for rate matching.

### 7. DMRS Settings

#### 1) DMRS-Downlink-r16

Options: On | Off ,

Default: Off.

Sets whether to provide the high-level parameter *dmrsUplink-r16*.

#### 2) n_SCID

Settable range: 0~ 1 ,

Default value: 0 .

Sets the parameter$n_{SCID}$ for sequence generation.

### 3) Scrambling ID0

Settable range: -1~ 65535 ,

Default value: -1 (set to -1 to use CellID).

Sets $N_{ID}^{0}$ for DMRS sequence generation.

### 4) Scrambling ID1

Settable range: -1~ 65535 ,

Default value: -1 (set to -1 to use CellID).

Sets $N_{ID}^{1}$ for DMRS sequence generation.

### 5) DMRS Power

Settable range: -40 dB~ 40 dB .

Default value: 0 dB.

Sets the power of PUSCH DMRS relative to the PUSCH channel.

### 6) DMRS Configuration Type

Optional: Type1| Type2 ,

Default: Type1.

Sets the DMRS configuration type.

### 7) DMRS Length

Optional: Single Symbol|Double Symbol ,

default: Single Symbol.

Sets the DMRS symbol length.

### 8) DMRS Additional Position

Optional:

- Single symbol DMRS:

  DMRS: pos0 | pos1 | pos2 | pos3;

- DMRS Length is Double Symbol or Single symbol when FH is turned on in the time slot:

pos0 | pos1.

Set the 3GPP protocol high-level parameter *dmrs-AdditionalPosition*.

#### 9) DMRS TypeA Position

Optional: 2| 3 , Default: 2.

Sets the 3GPP protocol high-level parameter *dmrs-TypeA-Position*.

#### 10) DMRS Mapping type

Optional: TypeA| TypeB , default: TypeA.

Sets the PUSCH mapping type.

#### 11) DMRS Hopping

Optional: Disable| group hopping| Sequence Hopping,

Default: Disable.

Disable or select different types of DMRS hopping.

#### 12) n_RS

Settable range: -1~ 65535 ,

Default value: -1 (set to -1 to use CellID).

Set $n_{ID}^{RS}$ for DMRS generation.

### 8. PTRS Settings

#### 1) PTRS Enabled

Options: On | Off , Default: On.

PTRS Enabled switch.

#### 2) PTRS Power

Settable range: -40 dB~ 40 dB ,

Default value: 0 dB.

Sets the power of PTRS data relative to PUSCH data.

#### 3) Frequency Density (K_PTRS)

Selectable range: 2| 4 ,

Default value: 2.

Sets the frequency density.

#### 4) Time Density (L_PTRS)

Option: 2| 4 , Default: 2.

Sets the number of points for each PT-RS group.

#### 5) PTRS RE Offset

Option: 00| 01 | 10 | 11 , Default: 00.

Sets the RE offset of PTRS.

#### 6) Enable LBRM

#### 7) PTRS Port

Settable range: 0~ 5 , default value: same as **DMRS Port** .

Sets the port number of the PTRS, either one or more values can be set. The value set must be contained within the DMRS Port, if the

If the **DMRS Port** does not have a port number that supports a PTRS port, PTRS will not open.

#### 8) n PTRS Group Sample

Sets the number of points for each PT-RS group.

#### 9) n PTRS Group

Optional: 2| 4| 8 , Default: 2.

Sets the number of PT-RS groups.

#### 10) n PTRS ID

Settable range: 0~ 65535 ,

Default value: 0.

Set the initialization parameter for PTRS sequence generation when transmission precoding is enabled $N_{ID}$ .

#### 4.11.2.5.5 SRS

Click on the SRS node in the tree view on the left side of the window to enter the parameter settings.

**1. Add SRS**

Multiple channels can be added, the default number is 1 .

Add a new SRS channel at the end of the list.

**2. Remove SRS**

Removes the currently selected SRS channel.

**3. General Settings**

**1) Name**

Displays the name of the currently selected SRS channel, in order from SRS0 to SRSn when you add a new SRS channel.

**2) State**

Options: On | Off, Default: Off.

Sets the current SRS channel enable switch.

**3) Power Boosting**

Settable range: -40 dB~ 40 dB.

Default value: 0 dB.

Sets the power of the current SRS data relative to the carrier.

**4) Number of Antenna Ports**

Optional: 1| 2| 4 , Default: 1 .

Set the number of antenna ports, corresponding to the parameter $N_{ap}^{SRS}$ in 3GPP protocol.

**5) Antenna Port(s) Generated**

Range: 0~ Port Number-1 , Default value: Port_0.

Specify the data of each antenna, the data is derived from SRS of each port number, when there are multiple antennas, a port number of SRS must be specified for each antenna, multiple antennas can be of the same port number, and no SRS data can be selected.

#### 6) SRS-for-positioning

Optional: On | Off ; Default: Off.

Sets whether the current SRS is configured via IE SRS-PosResource.

### 4. Time Domain Resource

#### 1) Periodicity(T_SRS)

Set the Periodicity parameter $T_{\mathrm{SRS}}$ when the current SRS is set to Periodic or Semi-Persisten.

#### 2) Slot Offset(T_offset)

Setting range: 0 ~ $T_{\mathrm{SRS}}$ -1 ; Default value: 0.

When SRS is set to Periodic or Semi-Persisten, set the Period parameter $T_{\mathrm{offset}}$ .

#### 3) Allocation slots

Range: 0~ 20 ; Default: 0 .

This parameter can be configured when the current SRS is set to non-periodic, and is used to set the Slot number of the transmitted SRS within a frame.

It can be set in the following three ways:

- If you need to configure by single slot, you can use "," as the separator, e.g.: 0,1,2,3 .
- If you need to configure by range of slots, you can use 2:7 for start index and last index, e.g. 2:7 for 2,3,4,5,6,7 .
- If you need to configure by different steps, you can use two ":" to indicate the starting slot, step and last slot respectively, for example, 0:2:8 means 0,2,4,6,8.

All the above three configuration methods can be used in combination.

Note: Only the slot number is displayed when the current SRS setting is Periodic.

#### 4) Start Position(l_offset)

Setting range: $N_{\mathrm{symb}}^{\mathrm{SRS}} - 1$~ 13 ; default value: 0.

Set the $l_{\mathrm{offset}}$ parameter in 3GPP protocol.

#### 5) Number of symbols(N_symb_SRS)

Optional range: 1| 2| 4| 8| 10| 12| 14 ; Default value: 1.

Selects the number of symbols of the current SRS, corresponding to the parameter $N_{\mathrm{symb}}^{\mathrm{SRS}}$ in the 3GPP protocol.

#### 6) Repetition Factor(R)

Optional: 1| 2| 4, default value: 1.

Set the $P_F$ parameter of current SRS.

### 5. Frequency Domain Resource

#### 1) Bandwidth Part

Selects the BWP of the current SRS transmission.

#### 2) Transmission Comb Number(K_TC)

Optional: 2| 4| 8 , Default: 2.

Set the parameter $K_{TC}$ in 3GPP protocol, which will limit the maximum value of $\bar{k}_{TC}$ (**Transmission Comb Offset**).

#### 3) Transmission Comb Offset(k_TC)

Settable range: 0~ **K_TC** - 1 ; Default value: 0 .

Sets the parameter Transmission Comb offset for the current SRS, corresponding to the 3GPP protocol$\bar{k}_{TC}$ parameter.

#### 4) SRS Bandwidth index(B_SRS)

Settable range: 0~ 3 , default value: 0.

Sets the parameter $B_{SRS}$ in 3GPP protocol.

#### 5) SRS Bandwidth index(C_SRS)

Settable range: 0~ 63 , default value: 0.

Set the parameter $C_{SRS}$ in 3GPP protocol.

#### 6) Frequency Hopping(b_hop)

Settable range: 0~ 3 , default value: 0.

Set the frequency hopping parameter in 3GPP protocol $b_{hop}$ .

#### 7) Frequency Domain Shift(n_shift)

Settable range 0 ~ 268 , default value: 0.

Set the current SRS frequency domain shift parameter $n_{shift}$ .

#### 8) Frequency Domain Position(nRRC)

Sets the frequency domain position of the current SRS.

#### 9) kf

Settable range: 0~ pf - 1 , default value: 0.

Set the parameter $k_F$ in the 3GPP protocol.

#### 10) pf

Optional range: 1| 2| 4 , default value: 1 .

Set the parameter $P_F$ in the 3GPP protocol.

### 6. Sequence Generation

#### 1) GroupSequenceHopping

Optional: 0 (Neither)| 1 (Group Hopping)| 2 (Sequence Hopping).

Default value: 0 (Neither).

Set the current SRS sequence hopping mode.

#### 2) Cyclic Shift Config(n_SRS_cs)

Configurable range: 0 ~ $n_{SRS}^{cs,max} - 1$ ,

Default value: 0 . (Parameter $n_{SRS}^{cs,max}$ is affected by the K_TC parameter, see Table 4-10 for the constraints)

Set the parameter $n_{SRS}^{cs}$ in the 3GPP protocol.

Table 4-10 Constraints of K_TC with $n_{SRS}^{cs,max}$

| $K_{TC}$ | $n_{SRS}^{cs,max}$ |
|---|---|
| 2 | 8 |
| 4 | 12 |
| 8 | 6 |

#### 3) Sequence identity(n_ID_SRS)

Settable range: 0~ 65535 ;

default value: 0.

Set the current SRS $n_{ID}^{SRS}$

#### 4.11.2.6 Downlink

##### 4.11.2.6.1 DL Test Model

Click **DL Test Model** when the waveform type is Downlink to enter the setting of Downlink Test Model.

**1. Test Model**

Optional:

NR-FR1-TM1.1 | NR-FR1-TM1.2 | NR-FR1-TM2 | NR-FR1-TM2a | NR-FR1-TM2b

NR-FR1-TM3.1 | NR-FR1-TM3.1a | NR-FR1-TM3.1b | NR-FR1-TM3.2 | NR-FR1-TM3.3

NR-FR1-TM11 | NR-FR1-TM1.2 | NR-FR1-TM2 | NR-FR1-TM2a | NR-FR1-TM2b

NR-FR1-TM3.1 NR-FR1-TM3.1a | NR-FR1-TM3.1b | NR-FR1-TM3.2 | NR-FR1-TM3.3

NR-FR2-TM1.1 | NR-FR2-TM2 | NR-FR2-TM2a | NR-FR2-TM3.1 | NR-FR1-TM3.1a

Default value: NR-FR1-TM1.1 .

Select the test model you want, this parameter is constrained by **Test Model** .

**2. Bandwidth**

Optional:

FR1 5MHz| FR1 10MHz| FR1 15MHz| FR1 20MHz| FR1 25MHz| FR1 30MHz

FR1 35MHz| FR1 40MHz| FR1 45MHz| FR1 50MHz| FR1 60MHz| FR1 70MHz

FR1 80MHz| FR1 90MHz| FR1 100MHz| FR2-1 50MHz| FR2-1 100MHz

FR2-1 200MHz| FR2-1 400MHz| FR2-2 100MHz| FR2-2 400MHz| FR2-2 800MHz

FR2-2 1600MHz| FR2-2 2000MHz

Default value: FR1 100MHz.

**3. Numerology**

Optional:

FR1: μ= 1:30KHz| μ = 2:60KHz ;

FR2-1: μ= 2:60KHz| μ = 3:120KHz| μ = 4:240KHz ;

FR2-2: μ= 3:120KHz| μ = 5:480KHz| μ = 6:960KHz .

Default value: μ= 1:30KHz .

Sets the subcarrier spacing for the current test pattern, consistent with the parameter **Numerology** in **Carrier** (see5 ).

**4. Duplex Type**

Optional: TDD | FDD, default: TDD.

Select different duplex types.

**5. n ID**

Settable range: 0~ 1023 , default: 1.

Sets the cell ID of the current test pattern.

**6. Layers**

Configurable range: 1~ 2 , default value: 1.

Sets the number of layers for the current test pattern.

**7. Modulation**

Displays the modulation mode of the current test pattern.

**8. Phase Compensation State**

Selectable range: On | Off , default value: On.

Sets the phase compensation switch and the frequency of phase compensation.

**9. Radio Frequency**

Settable range: 0~200GHz , default value: 1GHz.

Set the current frequency of phase compensation when the phase compensation is On.

#### 4.11.2.6.2 DL FRC Config

Click **DL FRC Config** to enter the setting of downlink FRC test mode when the waveform type is Downlink.

**1. FRC Type**

Optional:

FR1 QPSK| FR1 64QAM| FR1 256QAM| FR1 1024QAM

FR2 QPSK| FR2 64QAM| FR2 256QAM .

**2. Numerology**

Options:

FR1: μ= 1:30KHz| μ = 2:60KHz ;

FR2-1: μ= 2:60KHz| μ = 3:120KHz| μ = 4:240KHz ;

Default: μ= 1:30KHz .

Sets the subcarrier interval for the current test pattern.

**3. BandWidth**

Optional:

FR1 5MHz| FR1 10MHz| FR1 15MHz| FR1 20MHz| FR1 25MHz| FR1 30MHz

FR1 35MHz| FR1 40MHz| FR1 45MHz| FR1 50MHz| FR1 60MHz| FR1 70MHz

FR1 80MHz| FR1 90MHz| FR1 100MHz

FR2-1 50MHz| FR2-1 100MHz | FR2-1 200MHz| FR2-1 400MHz

Default value: FR1 100MHz .

Sets the channel bandwidth for this test mode.

**4. Duplex Type**

Optional: TDD | FDD, default: TDD.

Select different duplex types.

**5. Phase Compensation State**

Options: On | Off , Default: On.

Set the phase compensation switch and the frequency of phase compensation.

**6. Radio Frequency**

Set the current frequency of phase compensation when the phase compensation is On, the setting range is according to the frequency range supported by the device.

#### 4.11.2.6.3 SS/PBCH Block

Click on the SS/PBCH Block node in the tree view on the left side of the window to enter the parameter settings.

**1. General Settings**

**1) State**

Options: On | Off , Default: Off.

SS/PBCH Block Channel Enable Switch.

#### 2) SS/PBCH Block Pattern

SS/PBCH Block Pattern Optional:

15kHz: Case A ;

30kHz: Case B | Case C ;

120kHz: Case D;

240kHz: Case E.

Default value: Case B .

Sets the sync broadcast block style.

#### 3) Numerology

Displays the subcarrier parameter set μ of the SSB, consistent with the parameter **Numerology** in **Carrier** (see5 ).

#### 4) Periodicity

Options: 5ms | 10ms | 20ms | 40ms | 80ms | 160m,

Default: 10ms.

Sets the sync broadcast period.

#### 5) Half Frame Index

Settable range: 0~ 1 (0: first half frame, 1: second half frame),

Default value: 0.

When the parameter **Periodicity** (SSB period) is not 5ms, this parameter is used to specify which half frame the SSB is in.

#### 6) Lmax

Optional:

CaseA / CaseB, CaseC: 4| 8 ;

CaseD / CaseE: 64 .

Set the number of SS/PBCH blocks, the specific selection is constrained by **SS/PBCH Block Pattern**.

#### 7) Active Indices

Set the number of active SS/PBCH blocks in one half frame, the maximum value is constrained by **Lmax** . Example: When the maximum number of SS/PBCH blocks is 4, you can set the active indices to be any one or more of 0~3.

You can set it in the following three ways:

- If you need to configure by single SS/PBCH block, you can use "," as the separator, example: 0,1,2,3 .
- If you need to configure by range of SS/PBCH blocks, you can use 2:7 for start index and last index, for example, 2:7 for 2,3,4,5,6,7.
- If you need to configure by different steps, you can use two ":" to indicate the starting SS/PBCH block position, step size and last SS/PBCH block position respectively, for example, 0:2:8 means 0,2,4,6,8.

The above three configuration methods can be used in combination.

#### 8) SS/PBCH Block Power

Configurable range: -40 dB~ 40 dB ; default value: 0 dB.

Sets the power of the Sync Broadcast Block relative to other channels.

#### 9) PSS Power

Setting range: -40 dB~ 40 dB, default value: 0 dB.

Set the power of PSS with respect to SSS or PBCH, the power of SSS and PBCH is the same.

#### 10) RB Offset

Settable range: -1~ Maximum number of RBs for numerology - 1 ;

Default value: -1 .

Sets the offset of the center of the Synchronous Broadcast Block (SSB) relative to CRB0 (PointA).

#### 11) kSSB

Settable range: 0~ 23 (u=0 and u=1) | 0~ 11 (u=3 and u=4) ;

Default value: 0 .

Set the parameter kSSB size for SS/PBCH.

### 2. NR-PBCH Settings

#### 1) Channel Coding

Options: On | Off , Default: On.

Enables or disables channel coding.

#### 2) Auto MIB

Optional: On | Off , Default: On.

Enables or disables automatic MIB generation.

#### 3) Payload Data

Options: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files.

Default: PN9 .

Set the Payload data type, you can choose PN code or custom data.

Note: Configurable only when Auto MIB is Off, not configurable when Auto MIB is On, displayed as Auto.

### 3. MIB Setting

#### 1) subCarrierSpacingCommon

Optional:

FR1: 15kHz | 30kHz.

FR2: 60kHz | 120kHz.

Default: 30kHz.

The current parameter is read-only (30kHz) when only a single **Numerology** exists.

#### 2) ssb-SubCarrierOffset

Settable range: 0~ 31 , default value: 0.

Sets the frequency domain offset in terms of the number of subcarriers between the SSB and the entire resource block grid.

#### 3) Dmrs Config SIB

Optional: 2| 3, Default: 2 .

Select the location of the PDSCH or PUSCH DMRS.

#### 4) PDCCH Config SIB1

Settable range: 0~ 255 , Default value: 0 .

Sets the bandwidth for PDCCH/SIB, common CORESET, common search space and necessary PDCCH parameters.

#### 5) Cell Barred

Optional: 0:barred| 1:notbarred , Default: 0:barred .

Select the barred value, a barred value of 0 indicates that the cell is barred from access.

#### 6) Intra Freq Reselection

Optional: 0:allowed| 1:notallowed , Default: 0: allowed .

This parameter indicates whether the same frequency cell re-selection is allowed or not.

### 4.11.2.6.4 PDCCH

Click the PDCCH node in the tree view on the left side of the window to enter the parameter setting.

#### 1. Add PDCCH

Multiple channels can be added, the default number is 1.

Add a new PDCCH channel at the end of the list.

#### 2. Remove PDCCH

Remove the currently selected PDCCH channel.

#### 3. Copy PDCCH

Removes the currently selected PDCCH channel.

#### 4. General Settings

#### 1) State

Options: On | Off , Default: On.

PDCCH Channel Enable Switch.

#### 2) Power Boosting

Settable range: -40 dB~ 40 dB , default value: 0 dB.

Sets the power of PDCCH data relative to other channels.

#### 3) DMRS Power

Settable range: -40 dB~ 40 dB , Default: 0 dB.

Set the power of PDCCH DMRS relative to PDCCH channel.

#### 4) DMRS-Scrambling-ID

Settable range: -1~ 65535 , Default value: -1 (Setting to -1 means CellID is used).

Sets the nID for DMRS sequence generation.

#### 5) RNTI

Settable range: 0~ 65535 , Default value: 0.

Setting the scrambling RNTI for CRC

#### 6) C-RNTI

Settable range: 0~ 65535 , default value: 0.

Set the C-RNTI value, this parameter is used in the following two cases:

- If **pdcch-DMRS-ScramblingID** is not configured, to be used as data scrambling in UE-specific search space.
- If not 0, used for CCE offset calculation for UE-specific search spaces.

### 5. Search Spaces

#### 1) CORESET Selection

Use the drop-down list to select the CORESET for the current PDCCH, subject to the number of **CORESETs** .

#### 2) Allocated Slots

Settable range: 0~ 10*2^μ , default value: 0.

Allocated Slots Sets the number of slots of the transmitted PDCCH within a frame. It can be set in the following three ways:

- If you need to configure by single slot, you can use "," as separator, e.g. 0,1,2,3.
- If you need to configure by a range of slots, you can use 2:7 for the start index and the last index, e.g. 2:7 for 2,3,4,5,6,7.
- If you need to configure by different steps, you can use two ":" to indicate the start slot, step and last slot respectively, for example, 0:2:8 means 0,2,4,6,8.

The above three configuration methods can be used in combination.

#### 3) Search Space

Optional: UE-Specific | Common , Default: UE-Specific.

Use the drop-down list to select the search space.

#### 4) Aggregation Level

Options: 1 | 2 | 4 | 8 | 16 , Default: 4.

Set the aggregation level of PDCCH, the optional maximum aggregation level is constrained by CORESET .

#### 5) Number of PDCCH Candidates

Options: 1 | 2 | 3 | 4 | 5 | 6 | 8 , Default: 1 .

Sets the number of search space candidates used to calculate CCE Offset.

#### 6) Candidate Index

Range: 0~ PDCCH Candidate Number - 1 , Default Value: 0 .

Sets the candidate index of the search space for the current PDCCH aggregation level.

#### 7) Start Symbol Within Slot

Settable range: 0~ 13 , default value: 0.

Set the start symbol position of current PDCCH within a slot.

### 6. DCI Payload Data

#### 1) Coding

Optional range: 0 ~ 13 , default value: 0 .

Enables or disables channel coding.

#### 2) Payload Data

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files .

Default: PN9 ITU .

Set the Payload data type, you can choose PN code or customized data.

3) Payload Size

Settable range: 1~ 408 , default value: 20.

Set the size of Payload data.

#### 4.11.2.6.5 CORESET

Click the PDCCH node in the tree view on the left side of the window, and enter the parameter setting from **CORESET** on the top of the PDCCH list.

1. Add CORESET

You can add multiple CORESETs, the default number is 1.

Add a new CORESET at the end of the list.

2. Remove CORESET

Remove the currently selected CORESET.

3. Control Resource Sets

1) BWP ID

Use the drop-down list to select the BWP number of the current CORESET, subject to the number of **BWPs** .

2) CORESET ID

Use the drop-down list to select the BWP number of the current CORESET, the options are constrained by the number of **CORESETs** .

3) RB Offset

Range: 0~ Current BWP RB number - 1,

Default: 0.

Set the offset RB number of the current CORESET relative to the start of BWP.

4) Duration

Settable range: 1~ 3 , Default value: 1.

Sets the number of symbols in the current CORESET.

#### 5) Freq Domain Resources

Setting content: one bit means one RBG, setting 1 means active, the number of bits is calculated according to the RBG size meter and BWP.

Set the number and position of RBGs.

#### 6) CCE-REG Mapping Type

Optional: Interleaved | Non-Interleaved ,

Default: Non-Interleaved .

Sets the mapping type of CCE to REG.

#### 7) REG-BundleSize

Optional: 2| 3| 6 ,

Default: 6.

When the parameter CCE-REG Mapping Type is set to interleaved mapping, this parameter is used to set the parameter L for interleaved mapping, the specific constraints are described in the 3PGG protocol; for non-interleaved mapping, L defaults to 6.

Note: This parameter is only displayed when CCE-REG Mapping Type is set to Interleaved.

#### 8) Interleaver Size

Optional: 2| 3| 6 , Default: 2.

Sets the interleaver size of the interleaver mapping.

Note: Displayed only when CCE-REG Mapping Type is set to Interleaved.

#### 9) Shift Index

Settable range: -1~ 274 ,

Default value: 0 (Set to -1 to use CellID).

Set the $n_{\text{shift}}$ parameter for Interleaved Mapping.

Note: Displayed only when CCE-REG Mapping Type is set to Interleaved.

#### 10) Precoder Granularity

Optional: Reg Bundle Size| CORESET Size .

Default: Reg Bundle Size .

Sets the precoding granularity; when this parameter is set to Reg Bundle Size, DMRS maps only to

REGs with PDCCHs; when it is set to CORESET Size, DMRS maps to all RBs of CORESET.

Note: Displayed only when CCE-REG Mapping Type is set to Interleaved.

#### 4.11.2.6.6 PDSCH

Click the PDSCH node in the tree view on the left side of the window to enter the parameter settings.

**1. Add PDSCH**

Multiple channels can be added , the default number is 1.

Add a new PDSCH channel at the end of the list.

**2. Remove PDSCH**

Removes the currently selected PDSCH channel.

**3. Copy PDSCH**

Removes the currently selected PDSCH channel.

**4. General Settings**

**1) State**

Options: On | Off .

Default: On.

PUSCH Channel Enable Switch.

**2) Power**

Settable range: -40 dB~ 40 dB .

Default value: 0 dB.

Sets the power of PUSCH data relative to other channels.

**3) RNTI**

Settable range: 0~ 65535 .

Default value: 0.

Set the PDSCH data scrambling sequence of $n_{\mathrm{RNTI}}$ for distinguishing different UEs.

**4) nID**

Settable range: -1~ 65535 ,

Default value: -1 (Setting to -1 means CellID is used).

Set the nID of the PDSCH data scrambling sequence.

### 5. Transmission Settings

#### 1) DMRS Port(s)

Configurable range: 0~ 3 , Default value: 0 .

Set the port number of DMRS.

#### 2) Layers Number

Range: 1~ 4 , Default: 1.

The number of layers of PDSCH, calculated according to the number of DMRS port numbers.

#### 3) Antenna Port(s)

Available options: Port_0 | Port_1 | Port_2 | Port_3 ,

Default: Port_0 .

Specifies the data for each antenna that is used to assign the PDSCH layers to the antenna. The number of antenna ports is determined by the antenna data in Waveform Setup.

#### 4) Number of DMRS CDM groups without data

Configurable range: 1~ 3 , Default value: 1.

Set the number of DMRS CDM groups without data mapping for PDSCH. Configuration Type1 has 2 CDM groups with setting range 1~2, and Configuration Type2 has 3 CDM groups with setting range 1~3.

### 6. Resource Allocation

#### 1) Allocated Slots

Configurable range: 0~ 10*2^μ , default value: 0.

Set the Slot number of PDSCH transmitted in one frame. It can be set in the following three ways:

- If you need to configure by individual slots, you can use "," as the separator, for example: 0,1,2,3.
- If you need to configure by range of slots, you can use 2:7 for start index and last index, e.g. 2:7 for 2,3,4,5,6,7.
- If you need to configure by different steps, you can use two ":" to indicate the starting slot, step

and last slot respectively, for example, 0:2:8 means 0,2,4,6,8.

The above three configuration methods can be used in combination.

#### 2) Symbol Start

Range: 0~ 13 , Default: 0.

Set the first symbol position of current PDSCH.

#### 3) Symbol Number

Range: 0~ 14 (Normal)| 0~ 11 (Extended),

Default value: 14| 11 .

Set the number of available symbols for current PDSCH, the maximum value is related to CP type.

#### 4) BWP

Select the BWP for current PDSCH transmission.

#### 5) Resource Allocation Type

Optional: Type0| Type1 ,

Default: Type1 .

Select the type of frequency domain resource allocation for the current PDSCH, see 3GPP Protocol Physical Layer for details.

#### 6) RB Offset

Settable range: 0~Current BWP RB number - 1 ,

Default value: 0 .

Sets the offset RB number relative to the start of BWP when the current PUSCH is Type1.

Note: Displayed only when the parameter **Resource Allocation Type** in this section is Type1.

#### 7) RB Number

Settable range: 0~Current BWP RB count - **RB Offset** ,

Default value: max RB count.

Sets the number of RBs when the current PUSCH is Type1.

Note: Displayed only when the parameter **Resource Allocation Type** is Type1 in this section.

#### 8) VRB to PRB Interleaver

Optional: Interleaved | Non-Interleaved ,

Default: Non-Interleaved .

Sets the mapping method of VRB to PRB.

#### 9) VRB Bundle

Optional: 2| 4 , Default: 2.

Set the size of the bundle for interleaved mapping.

### 7. Modulation and Coding

#### 1) Coding

Options: On | Off , Default: On.

Enables or disables LDPC coding of PDSCH data.

#### 2) MCS Table

Options: QAM64| QAM256| QAM64Low SE| QAM1024 ,

Default: QAM64.

Select the table for calculating the TB size accordingly, see 3GPP Protocol Physical Layer Agreement.

#### 3) MCS Index

Default value: 0.

Set the corresponding MCS index, the specific range is related to the corresponding table of the 3GPP protocol.

#### 4) xOverhead

Optional: 0 | 6 | 12 | 18 .

Default Value: 0 .

Sets the high-level parameter *xOverhead* of the 3GPP protocol, *which* is used to set the parameter for calculating the TBS $N_{oh}^{PRB}$ .

#### 5) TB Scaling Factor S

Optional value: 1 | 0.5| 0.25 .

Default value: 1 .

Set the Scaling Factor S used to calculate the TBS, please refer to 3GPP protocol TS38.214 Table 5.1.3.2-2 for the exact value.

#### 6) Coding Rate

Display the coding rate, which is obtained according to the parameter **MCS Table** .

#### 7) Modulation

Displays the modulation mode, which is obtained according to the parameter **MCS Table** .

#### 8) Payload Data

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files .

Default: PN9.

Set the Payload Data type, you can choose PN code or customized data.

#### 9) RV index

Settable range: 0~ 3 .

Default value: 0.

Set the RV index of the redundant version with matching rate.

### 8. DMRS Settings

#### 1) DMRS-Downlink-r16

Options: On | Off .

Default: Off.

Sets whether to provide the high-level parameter *dmrsUplink-r16*.

#### 2) n_SCID

Settable range: 0~ 1 .

Default value: 0 .

Sets the parameter $n_{SCID}$ for sequence generation.

#### 3) Scrambling ID0

Settable range: -1~ 65535 .

Default value: -1 (set to -1 to use CellID).

Sets $N_{\mathrm{ID}}^{0}$ for DMRS sequence generation.

#### 4) Scrambling ID1

Settable range: -1~ 65535 .

Default value: -1 (set to -1 to use CellID).

Sets$N_{\mathrm{ID}}^{1}$ for DMRS sequence generation.

#### 5) DMRS Power

Settable range: -40 dB~ 40 dB .

Default: 0 dB.

Set the power of PDSCH DMRS relative to PUSCH channel.

#### 6) DMRS Configuration Type

Optional: Type1| Type2 .

Default: Type1.

Sets the DMRS configuration type.

#### 7) DMRS Length

Options: Single Symbol|Double Symbol .

Default: Single Symbol.

Default value: Single Symbol.

Sets the DMRS symbol length.

#### 8) DMRS Additional Position

Optional:

- Single symbol DMRS:

  pos0 | pos1 | pos2 | pos3 ;
- DMRS Length is Double Symbol or Single symbol when FH is turned on in the time slot:

  Single symbol: pos0 | pos1 .

Default value: pos0.

Set the 3GPP protocol high-level parameter *dmrs-AdditionalPosition* .

#### 9) DMRS TypeA Position

Optional: 2| 3 .

Default value: 2 .

Sets the 3GPP protocol high-level parameter *dmrs-TypeA-Position* .

**10) DMRS Mapping type**

Optional: TypeA| TypeB ,

Default: TypeA.

Sets the PDSCH mapping type.

**11) DMRS Mapping Reference**

Optional CRB| RRB ;

Default: CRB.

Select the reference point for DMRS mapping, please refer to 3GPP protocol for details.

**9. PTRS Settings**

**1) PTRS Enabled**

Optional: On | Off ;

Default: On.

PTRS Enabled switch.

**2) PTRS Power**

Settable range: -40 dB~ 40 dB .

Default value: 0 dB.

Sets the power of PTRS data relative to PUSCH data.

**3) Frequency Density (K_PTRS)**

Selectable range: 2| 4 .

Default value: 2.

Sets the frequency density.

**4) Time Density (L_PTRS)**

Option: 2| 4 .

Default: 2.

Sets the number of points for each PT-RS group.

#### 5) PTRS RE Offset

Option: 00| 01 | 10 | 11 ;

Default: 00.

Sets the RE offset of PTRS.

### 4.11.2.6.7 CSI-RS

Click on the CSI-RS node in the tree view on the left side of the window to enter the parameter settings.

#### 1. Add CSI-RS

Multiple channels can be added , the default number is 1.

Add a new CSI-RS channel at the end of the list.

#### 2. Remove CSI-RS

Removes the currently selected CSI-RS channel.

#### 3. Copy CSI-RS

Removes the currently selected CSI-RS channel.

#### 4. General Settings

#### 1) State

Options: On | Off , Default: On.

CSI-RS Channel Enable Switch.

#### 2) Power Boosting

Settable range: -40 dB~ 40 dB ,

Default: 0 dB.

Sets the power of CSI-RS data relative to other channels.

#### 3) Antenna Port(s)

Optional range: Port_0 | Port_1 | Port_2 | Port_3 ,

Default value: Port_0 .

Sets the mapping of CSI-RS ports to antenna ports.

#### 4) nID

Settable range: 0~ 65535 , default value: 1000 .

Set the parameter$n_{ID}$ to generate CSI-RS sequence.

#### 5) Zero Power

Options: On | Off , Default: Off.

Sets the CSI-RS type, either zero-power (On) or non-zero-power (Off).

### 5. Resource Allocation

#### 1) CSI-RS Locations Table Index

Configurable range: 1~ 18 , Default value: 1.

Set the row index of the CSI-RS Locations Table, see 3GPP protocol 38211 Table 7.4.1.5.3-1 for details.

#### 2) Slot Allocation

Configurable range: 0~ 10*2^μ , default value: 0.

Sets the Slot number of the CSI-RS to be transmitted within a frame. It can be set in the following three ways:

- If you need to configure by single slot, you can use "," as the separator, e.g.: 0,1,2,3 .
- If you need to configure by range of slots, you can use 2:7 to indicate the start index and the last index, e.g. 2:7 for 2,3,4,5,6,7 .
- If you need to configure by different steps, you can use two ":" to indicate the starting slot, step and last slot respectively, for example, 0:2:8 means 0,2,4,6,8.

The above three configuration methods can be used in combination.

#### 3) BWP

Select the BWP of the current CSI-RS transmission.

#### 4) RB Offset

Configurable range: 0~ Current BWP RB number + BWP RB start number - 4 ,

Default value: 0 .

Sets the current CSI-RS offset RB number relative to the BWP start.

Note: Setting the RB number must be a multiple of 4.

#### 5) RB Number

Settable range: 4~Current BWP RB Number - **RB Offset** ,

Default value: Maximum RB Number.

Sets the number of RBs for the current CSI-RS.

Note: Setting the RB number must be a multiple of 4.

#### 6) First Symbol (l0)

Settable range: 0~ 13 ;

Default value: 10.

Set l0 of the CSI-RS location table, see 3GPP protocol 38.211 Table 7.4.1.5.3-1 for details.

#### 7) First Symbol2 (l1)

Settable range: 2~ 12 ;

Default value: 2.

Set l1 of the CSI-RS location table as described in 3GPP protocol 38.211 Table 7.4.1.5.3-1 .

Note: Displayed only if the **CSI-RS Locations Table Index** is 13 | 14 | 16 | 17.

#### 8) Freq Domain Bitmap

Setting content: one bit means one RBG, checking means active.

Set the frequency domain location of CSI-RS by bitmap, the number of bits is constrained by **CSI-RS Locations Table Index** .

Note: If **CSI-RS Locations Table Index** is 1, 4 bits can be set;

When **CSI-RS Locations Table Index** is 2, 12 bits can be set;

If the **CSI-RS Locations Table Index** is 4, 3 bits can be set;

For CSI-RS Locations Table Index of 2 , 12 bits can be set; for **CSI-RS Locations Table Index** of 4, 3 bits can be set; for other values, 6 bits can be set.

#### 9) Density

Optional: 1 | 0.5.

Default: 1.

Set the density of CSI-RS, this parameter is constrained by the Locations Table, see 3GPP protocol 38.211 Table 7.4.1.5.3-1 for details.

Note: ① When **CSI-RS Locations Table Index** is set to 1, Density = 3;

② Density = 1 when **CSI-RS Locations Table Index** is set to 4~ 10 ;

The parameter is hidden in the above two cases.

When **CSI-RS Locations Table Index** is set to other values, Density=1 | 0.5, this parameter is only displayed at this time.

### 10) PRB Allocation for Density= 0.5

Option: Even | Odd ,

Default: Even.

When **Density** is 0.5, set the position of PRBs, either odd PRBs or even PRBs .

Note: Displayed only when **Density** is 0.5.

### 11) RE used for PDSCH

Options: On | Off ,

Default: Off.

Sets whether the resources configured for CSI-RS can be used for PDSCH or not, On means PDSCH will be mapped to CSI-RS resources and CSI-RS will override PDSCH, Off means PDSCH mapping will skip CSI-RS resources.


### 12) CSI-RS Type


Displays the CDM type of the CSI-RS.


## 4.12 LTE

The protocol version realized by this software: 3GPP TS36 V17.3.0 .

You can click LTE on the home page to select different duplex types and enter the corresponding setting interface.

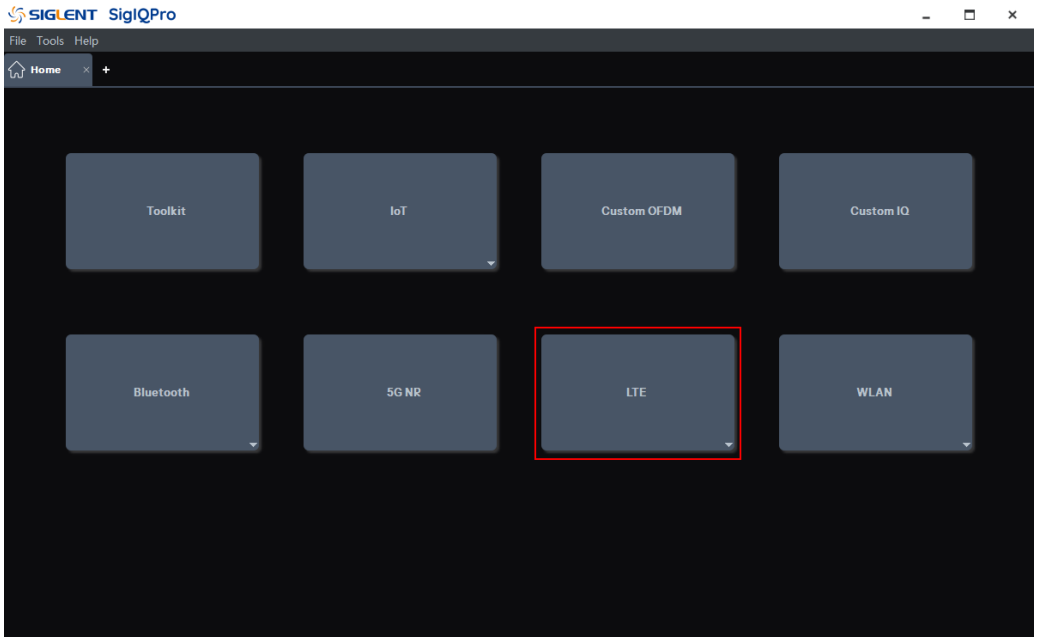

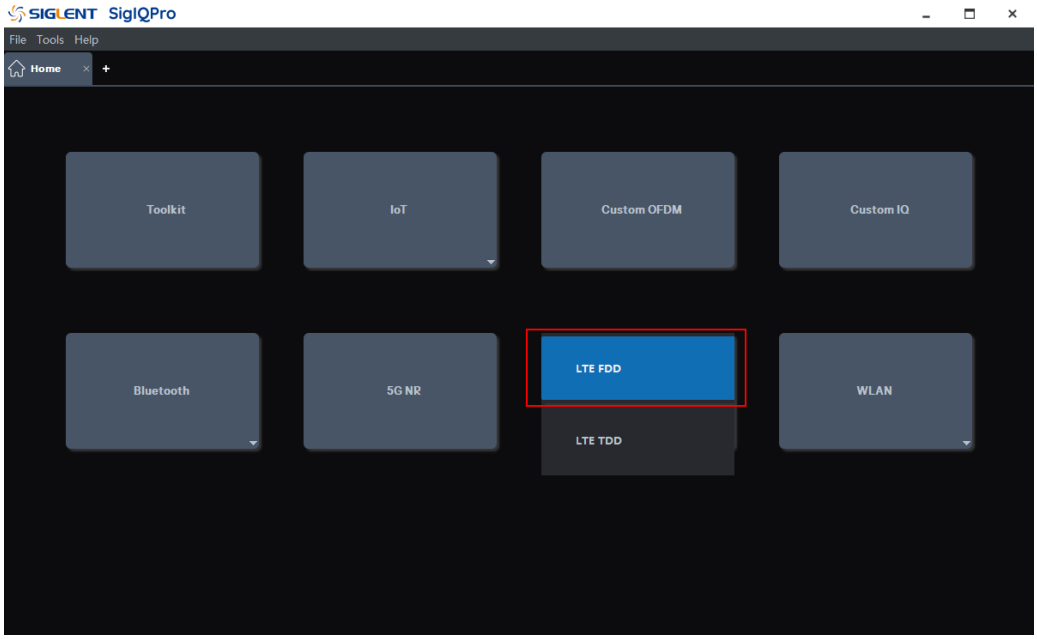

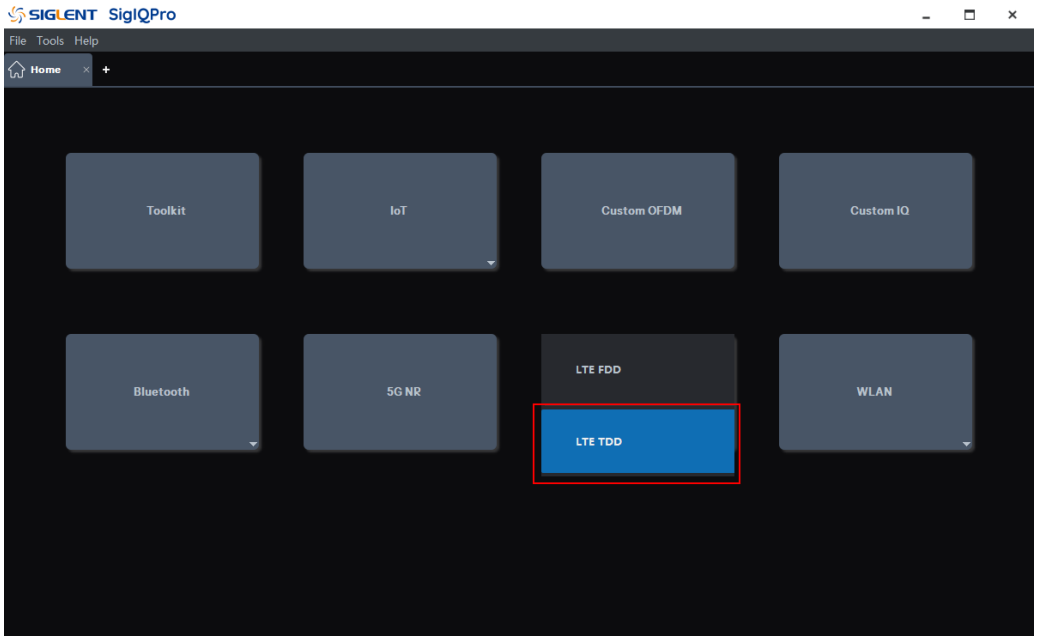
### 4.12.1 Waveform Setup

Click the **Waveform Setup** node in the tree view on the left side of the window to enter the waveform setup.

**1. Frame Number**

Settable range: 1~4, default value: 1.

Set the number of frames in the generated waveform.

**2. Sample Rate**

Display the sample rate of the generated waveform.

Note: This parameter can only be displayed but not edited.

**3. Sample Points**

Displays the length of the generated waveform in points.

Note: This parameter is not editable.

**4. IQ Map**

Optional: normall invert , Default: normal.

This parameter toggles the inversion state of the baseband IQ data.

**5. Subframe Number**

Displays the number of subframes of the generated waveform.

Note: This parameter is only displayed without editing.

**6. Crest Factor Reduction**

Options: on | off ,

Default: off.

Toggles the state of Crest Factor Reduction for baseband signal spectrum.

### 4.12.2 Carrier

Click the **Carrier** node in the tree view on the left side of the window to enter the parameter setting.

**1. State**

Options: on | off,

Default: on.

Toggles the carrier enable state.

**2. Carrier Type**

Options: DownLink | UpLink ,

Default: DownLink.

Toggles the carrier type.

**3. CP Type**

Optional: Normal | Extended,

Default: Normal.

Toggles the cyclic prefix type, selects Normal Cyclic Prefix or Extended Cyclic Prefix.

**4. Channel Bandwidth**

Options: 1400K | 3M | 5M | 10M | 15M | 20M ,

Default: 20M.

Switch the bandwidth of the carrier.

### 5. Antenna Number

Options: 1| 2| 4| 8 ,

Default: 1.

Sets the total number of antennas used for transmission.

### 6. Antenna Port

Optional:

When Antenna Number is 1, the option is Port 0;

When Antenna Number is 2, the options are Port 0,1;

When Antenna Number is 4, the options are Port 0,1,2,3;

When Antenna Number is 8, the options are Port 0,1,2,3,4,5,6,7;

Default value: Port 0 .

Sets the antenna port number used for transmission.

### 7. Cell ID

Settable range: 0~503 ,

Default value: 0.

Set the value of Cell ID.

### 8. Baseband Filter

Options: on | off ; Default: on.

Toggles the enable state of the baseband filter.

### 9. Frequency Offset

Settable range: 0 hz~ 75Mhz ,

Default: 0 hz.

Sets the frequency offset of the carrier with respect to the generator.

### 10. Time Offset

Settable range: 0ms~10ms,

Default value: 0ms.

Set the timing offset.

### 11. Oversampling Rate

Settable range: 1~4.

Default value: 1.

Set the oversampling rate of the generated waveform.

### 12. Init Phase

Settable range: 0°~ 359° .

Default value: 0° .

Sets the initial phase of the carrier waveform.

### 13. Sequence Hopping Type

OFF | Group Hopping | Sequence Hopping .

Default value: Off.

Set whether to turn off or turn on Group Hopping/Sequence Hopping, PUCCH and PUSCH are unified by this parameter.

### 14. TDD Configure (TDD)

Optional: Config 0~6 . Default:

Config 0.

Set TDD uplink-downlink configuration index, for more information, please refer to 3GPP TS 36211.

Note: Displayed only when LTE TDD.

### 15. Special subframe config (TDD)

Optional: Config 0~10 ,


Default: Config 0.

Set the configuration index of TDD special subframe, please refer to 3GPP TS 36211 for more information.

Note: Displayed only when LTE TDD.

### 16. DL Test Mode

Click **DL Test Mode** when the waveform type is DownLink to enter the setting of downlink test mode. For more information about Downlink Test Mode, please refer to 3GPP TS 36141 Section 6.1.1.

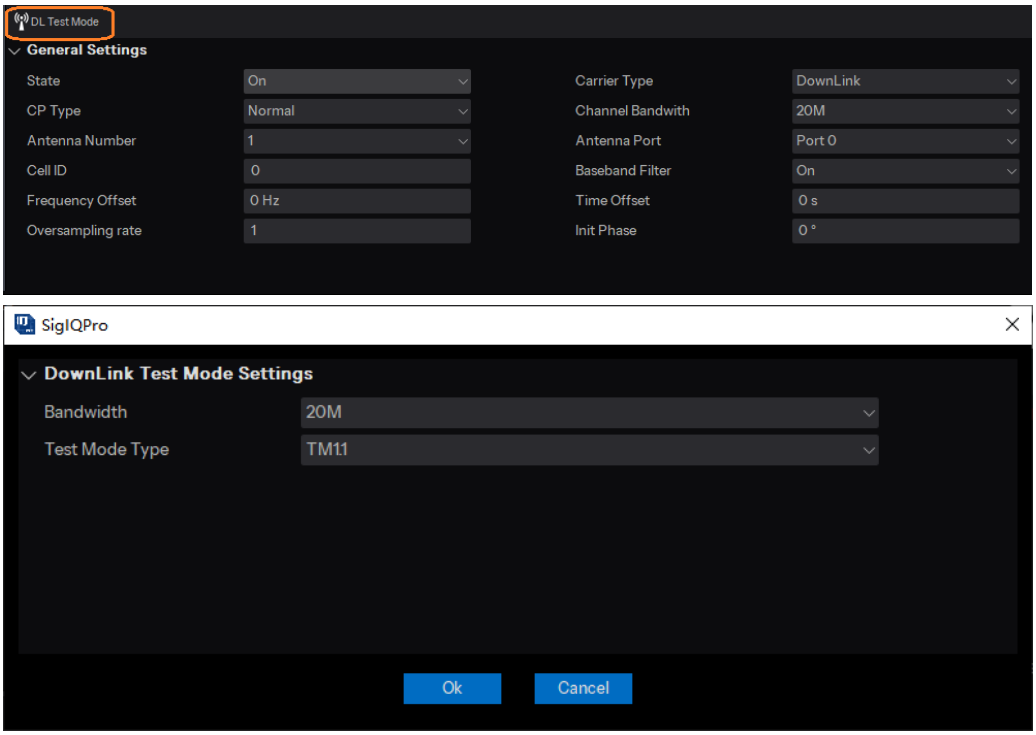


### 1) Bandwidth

Options: 1400K | 3M | 5M | 10M | 15M | 20M ;

Default: 20M.

Sets the bandwidth of the test mode.

### 2) Test Mode Type

Optional:

E-TM1.1 | E-TM1.2 | E-TM2.0| E-TM2.0a | E-TM2.0b


E-TM3.1 | E-TM3.1a | E-TM3.1b| E-TM3.2| E-TM3.3

Default value: E-TM1.1.

Sets the type of test mode.

## 17. UL FRC Test Mode

Click **UL FRC Test Mode** when the waveform type is Upllink to enter the setting of the uplink FRC test mode. For more information about the uplink test mode, please refer to 3GPP TS 36141.

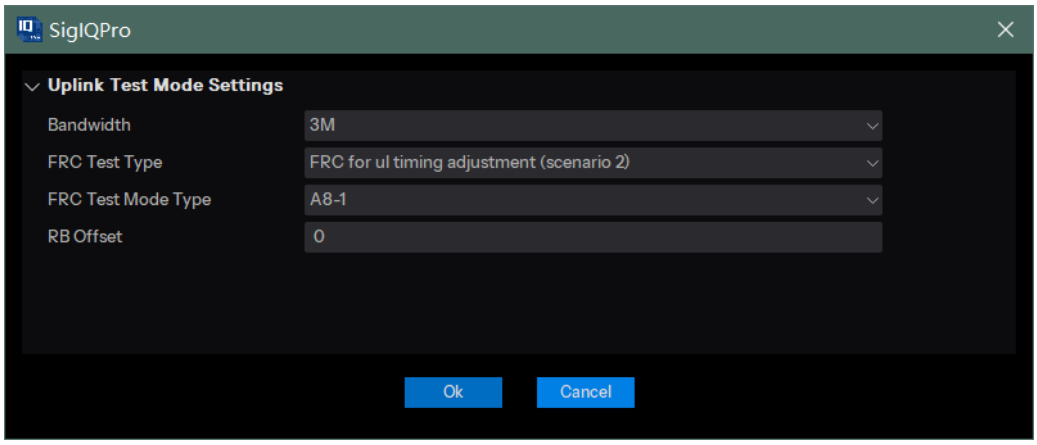


### Uplink Test Mode Settings

#### 1) Bandwidth

Options: 1400K | 3M | 5M | 10M | 15M | 20M .

Default: 20M.

Sets the test mode bandwidth.

#### 2) FRC Test Type

Optional:

FRC for reference sensitivity and in-channel selectivity (QPSK R= 1/3)

FRC for dynamic range (16QAM R= 2/3)

FRC for performance requirements (QPSK R= 1/3)

FRC for performance requirements (16QAM R = 3/4)

FRC for performance requirements (64QAM R= 5/6)

FRC for ul timing adjustment (scenario 1)

FRC for ul timing adjustment (scenario 2)

Default: FRC for reference sensitivity and in-channel selectivity (QPSK R= 1/3)

Set the test mode you want.

#### 3) FRC Test Mode Type

Optional:

A1-1| A1-2| A1-3| A1-4| A1-5

A2-1| A2-2| A2-3

A3-1| A3-2| A3-3| A3-4| A3-5| A3-6| A3-7

A4-1| A4-2| A4-3| A4-4| A4-5| A4-6| A4-7| A4-8

A5-1| A5-2| A5-3| A5-4| A5-5| A5-6| A5-7

A7-1| A7-2| A7-3| A7-4| A7-5| A7-6

a8-1| a8-2| a8-3| a8-4| a8-5| a8-6

Default: A1-1 .

Set the type of test pattern you want, the options of this parameter are constrained by **FRC Test Type** .

#### 4) RB Offset


Settable range: 0~ Maximum number of RBs that can be set for the current bandwidth - the number of RBs required for the current test pattern.

Default value: 0.

Sets the RB offset for the current test mode.

### 18. PUCCH Test Mode

Click **PUCCH Test Mode** when the waveform type is Upllink to enter the PUCCH test mode setting.

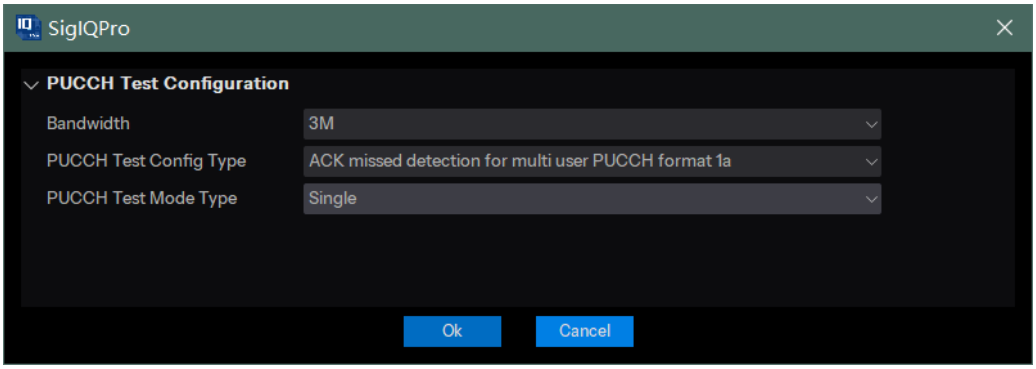


#### PUCCH Test Configuration

#### 1) Bandwidth

Options: 1400K | 3M | 5M | 10M | 15M | 20M,

Default: 20M.

Set the bandwidth of PUCCH test mode.

#### 2) PUCCH Test Config Type

Optional:

ACK missed detection for multi user PUCCH format 1a;

ACK missed detection for PUCCH format 1b with channel selection;

ACK missed detection for PUCCH format 2;

CQI performance requirements for PUCCH format 2 with dtx detection .

Default: ACK missed detection for multi user PUCCH format 1a .

Select the PUCCH test mode.

**3) PUCCH Test Mode Type**

Optional: Single| interferer 1| interferer 2| interferer 3 ,

Default: Single .

Sets the test mode type.

### 4.12.3 Channel (DL)

When the waveform type is DownLink, the channels related to the downlink are displayed under the Channel node in the tree view on the left side of the window, and you can enter the configuration interface of the related channels by clicking each channel.

#### 4.12.3.1 BCH

Click the BCH node in the tree view on the left side of the window to enter the parameter setting.

**1. State**

Optional: On | Off, default: On.

Toggles the enable state of BCH channel.

**2. Power Boosting**

Configuration range: 0 dB~20 dB,

Default value: 0 dB.

Set the power level of the channel in dB.

**3. Data Source**

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | Auto| User Files .

Default: Auto .

Set the data source of BCH channel, when Auto is selected, the Master Information Block (MIB) will be generated automatically according to the data content.

**4. Coding State**

Options: On | Off , Default: On.

Toggles the coding enable state of BCH channel.

**5. Scrambling State**

Options: On |Off , Default: On.

Toggles the scrambling enable state of the BCH channel.

#### 4.12.3.2 SS

Click the SS node in the tree view on the left side of the window to enter the parameter setting.

**1. PSS State**

Optional: On | Off, default: On.

Toggles the enable state of PSS channel.

**2. PSS Power**

Settable range: 0 dB~ 20 dB , default value: 0 dB.

Sets the power level of the channel in dB.

**3. SSS State**

Selectable range: On | Off , default value: On.

Toggles the enable state of SSS channel.

**4. SSS Power**

Settable range: 0 dB~ 20 dB , default value: 0 dB.

Sets the power level of the channel in dB.

#### 4.12.3.3 CRS

Click the CRS node in the tree view on the left side of the window to enter the parameter setting.

**1. State**

Displays the enable state of the CRS channel.

Note: This parameter is only displayed and cannot be edited.

**2. Power Boosting**

Setting range: 0 dB~20 dB, default value: 0 dB.

Set the power level of the channel in dB.

**3. Port Number**

Optional:

When Antenna Number = 1, the option is 1 Port;

When Antenna Number = 2, the options are 1 Port | 2 Port;

When Antenna Number = 4 / 8, the options are 1 Port | 2 Port | 4 Port.

Default value: 1 Port .

Sets the number of antenna ports for CRS.

**4. Transmit Number**

Optional:

When Port Number is 1 Port, the available options are Port 0;

When Port Number is 2 Ports, the option is Port 0 | Port 1;

When Port Number is 4 Ports, the options are Port 0 | Port 1 | Port 2 | Port 3.

Default: Port 0 .

Sets the CRS transmission port.

#### 4.12.3.4 PRS

Click the PRS node in the tree view on the left side of the window to enter the parameter settings.

**1. State**

Options: On | Off , Default: Off.

Toggles the enable state of the PRS channel.

**2. Power Boosting**

Settable range: 0 dB~20 dB, Default value: 0 dB.

Set the power level of the channel in dB.

**3. Bandwidth**

Optional:

When Channel Bandwidth= 1400K, the option is 1400K;

When Channel Bandwidth = 3M, the options are 1400K | 3M;

When Channel Bandwidth = 5M, the options are 1400K | 3M | 5M;

When Channel Bandwidth = 10M, the options are 1400K | 3M | 5M | 10M;

When Channel Bandwidth = 15M, the options are 1400K | 3M | 5M | 10M | 15M;

When Channel Bandwidth = 20M, the options are 1400K | 3M | 5M | 10M | 15M | 20M .

Default: the value of Channel Bandwidth.

Sets the bandwidth occupied by the PRS signal.

**4. N_PRS**

Options: 1 subframe | 2 subframes | 4 subframes | 6 subframes ,

Default: 1 subframe .

Sets the number of consecutive subframes transmitted by the PRS signal in the downlink.

**5. I_PRS**

Settable range: 0~2554 , default value: 0.

Sets the PRS configuration index, for more information please refer to 3GPP TS 36211 Section 6.10.4.3.

**6. T_PRS**

Displays the subframe configuration period for PRS.

Note: This parameter is only displayed not editable.

**7. Delta PRS**

Displays the subframe offset of the PRS.

Note: This parameter only displays non-editable.

#### 4.12.3.5 CSI-RS

Click on the CSI-RS node in the tree view on the left side of the window to enter the parameter settings.

**1. State**

Options: On | Off , Default: Off.

Toggles the enable state of the CSI-RS channel.

### 2. Power Boosting

Settable range: 0 dB~20 dB ,

Default value: 0 dB.

Set the power level of the channel in dB.

### 3. Port Number

Optional:

When Antenna Number = 1, the option is 1;

When Antenna Number = 2, the options are 1 | 2;

When Antenna Number = 4, the options are 1 | 2 | 4;

When Antenna Number = 8, the options are 1 | 2 | 4| 8 .

Default Value: 1 .

Sets the number of antenna ports for CSI-RS.

### 4. Total Ports

Displays the virtual ports used to transmit CSI-RS signals.

Note: This parameter is displayed only and cannot be edited.

### 5. Config

Configurable range:

When CP Type is Normal, the settable range is 0~ 31;

When CP Type is Extend, the setting range is 0~27.

Default value: 0.

Set the CSI-RS Mapping Configuration Index, please refer to 3GPP TS 36211 Section 6.10.5.2 for more information.

### 6. i CSIRS

Settable range: 0~154 ,

Default value: 0 .

Set the CSI-RS subframe configuration index, for more information please refer to 3GPP TS 36211 Section 6.10.5.3.

### 7. tCSIRS

Displays the CSI-RS subframe period.

Note: This parameter is only displayed non-editable.

**8. Delta CSIRS**

Displays the subframe offset of the CSI-RS.

Note: This parameter only displays non-editable.

#### 4.12.3.6 CFI

Click on the CFI node in the tree view on the left side of the window to enter the parameter settings.

**1. State**

Displays the enable state of the CFI channel.

Note: This parameter is only shown as non-editable.

**2. Power Boosting**

Configuration range: 0 dB~20 dB ;

Default value: 0 dB.

Set the power level of the channel in dB.

**3. Scrambling State**

Options: On |Off ,

Default: On.

Toggles the scrambling enable state of CFI channel.

**4. Coding State**

Optional: On |Off ,

Default: On.

Toggles the coding enable state of CFI channel.

**5. CFI Allocation**

Displays the Control Format Indicator value for each subframe as determined by the DCI setting.

Note: This parameter is displayed only and is not editable.

#### 4.12.3.7 HI

Click the HI node in the tree view on the left side of the window to enter the parameter setting.

1. **State**

Optional: On | Off , Default: On.

Toggles the enable state of the HI channel.

2. **Power Boosting**

Configuration range: 0 dB~20 dB, Default value: 0 dB.

Set the power level of the channel in dB.

3. **Scrambling State**

Options: On |Off , Default: On.

Toggles the scrambling enable state of CFI channel.

4. **Coding State**

Optional: On |Off , Default: On.

Toggles the coding enable state of CFI channel.

5. **Duration**

Optional: Normal | Extend , Default: Normal.

Toggles the HI duration type, selects Normal duration or Extend duration.


6. **NG**


Optional: 1/6| 1/2| 1| 2 , Default value: 1/6.

Sets the assigned value of the HI channel.

7. **PHICH Transmission Config**

Click PHICH Transmission Config to set the PHICH transmission configuration.

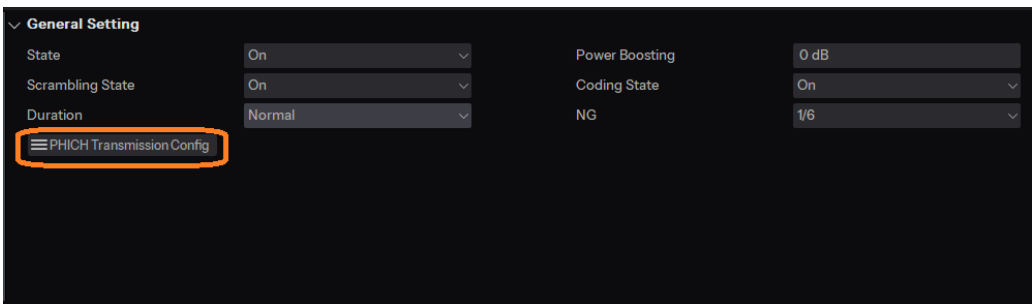

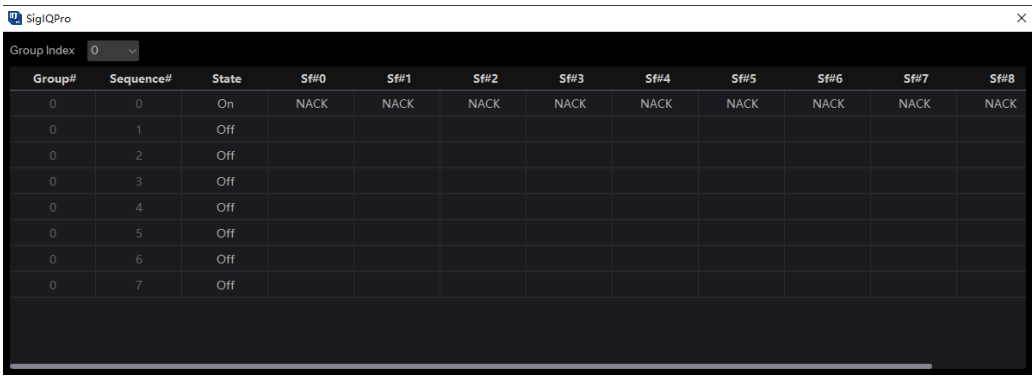


### 1) Group Index

Toggles the serial number of the configuration group.


### 2) State

Toggles the enable state of HI in the group.

### 3) Sf#

Configure the answer state of HI for the corresponding subframe.

Click the HI Answer State form to configure the HI answer state, the default answer state is NACK.

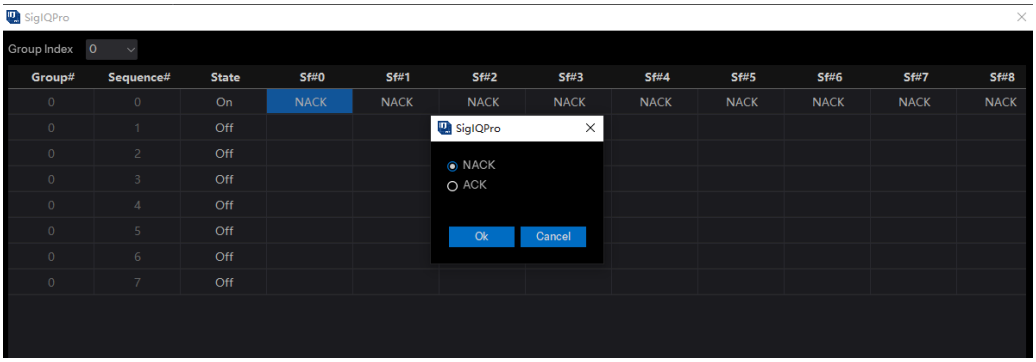


## 4.12.3.8 DCI

Click the DCI node in the tree view on the left side of the window to enter the parameter setting.

### 1. State

Displays the enable state of the DCI channel.

Note: This parameter is only displayed and cannot be edited.

### 2. Power Boosting

Configuration range: 0 dB~20 dB, default value: 0 dB.

Set the power level of the channel in dB.

### 3. Scrambling State

Options: On |Off , Default: On.

Toggles the scrambling enable state of DCI channel.

### 4. Coding State

Optional: On |Off , default: On.

Toggles the coding enable state of the DCI channel.

### 5. Resource Allocation

Resource Allocation

If the Channel Bandwidth is greater than 1400K, the range is 1 ~ 3, and the length is the number of subframes;

Channel Bandwidth equal to 1400K can be set in the range of 2~ 4 and the length is the number of subframes.

Default value:

When Channel Bandwidth is greater than 1400K, the default value is 1 and the length is the number of subframes;


When Channel Bandwidth is equal to 1400K, the settable range is 2 and the length is the number of subframes;

The default value of unenabled subframe is 0 which cannot be changed.

Set the number of symbols used for PDCCH transmission in each subframe.

### 6. DCI # DLSCH Transmission Config

Click DCI # DLSCH Transmission Config to enter the corresponding DCI transmission configuration interface.

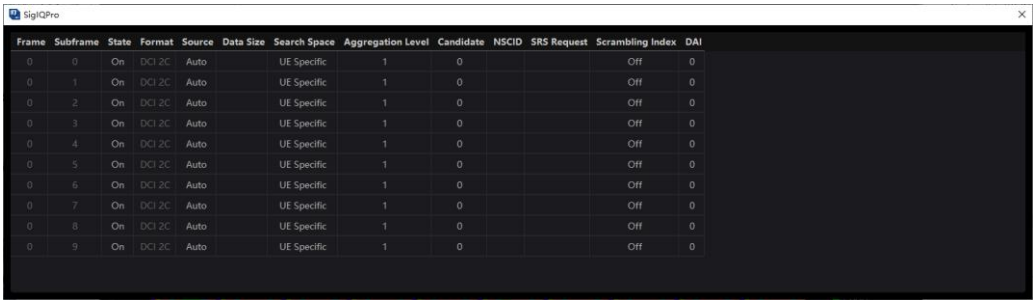

#### 1) State

Optional: On | Off, default: On.

Toggles the enable state of PDCCH and PDSCH channels for the corresponding subframe.

#### 2) Format

Displays the DCI format of the corresponding subframe.

Note: This parameter only displays non-configurable. For more information about DCI format, please refer to 3GPP TS 36212 Section 5.3.3.

#### 3) Source

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | Auto | User Files .

Default: Auto .

Set the data source of DCI information, when Auto is selected, DCI data will be generated automatically according to the data content.

#### 4) Date Size

Displays the bit length of DCI data when Source is not Auto.

Note: This data is displayed only when it is not configurable.

#### 5) Search Space

Optional: UE Specific | Common, Default: UE Specific.

Sets the type of search space for DCI.

#### 6) Aggregation Level

Optional: UE Specific | Common , default: UE Specific:

When Search Space is UE Specific, the options are 1| 2| 4| 8 ;

When Search Space is Common, the options are 4 | 8 .

Default Value: 1 .

Sets the aggregation level of the DCI.

#### 7) Candidate

Candidate Range:

When Search Space is UE Specific and Aggregation Level is 1 or 2, the settable range is 0-5;

When Search Space is UE Specific and Aggregation Level is 4 or 8, the settable range is 0-1;

When the Search Space is Common and the Aggregation Level is 4, the settable range is 0-3;

When Search Space is Common and Aggregation Level is 8, the settable range is 0-1.

For more information, refer to 3GPP TS 36213 Section 9.1.1.

Default value: 0 .

Sets the DCI candidate.

#### 8) NSCID

Optional: 0| 1 , Default value: 0 .

Sets the NSCID value when the DCI is in a specific format.

#### 9) SRS Request

Optional:

When this field is 2 bits, the options are: 0| 1| 2| 3 ;

When this field is 1 bit, the options are: 0 | 1.

Default: 0 .

Sets the SRS request for PUSCH scheduling information transmitted on the PDCCH. Refer to 3GPP TS 36213 Section 8.2 and 3GPP TS 36212 Section 5.3.3 for more information.

#### 10) Scrambling Index

Options: On | Off , Default: Off.

Toggles the state of the scrambling index bit of the DCI.

#### 11) TPC Bits

Optional range: 0~3, default value: 0.

Sets the TPC bits.

#### 12) DAI (TDD)

Optional range: 0| 1| 2| 3 , Default value: 0 .

Set the value of Downlink Assignment Indicator.

### 7. UL Bandwidth

Optional: 1400KHz | 3MHz | 5MHz | 10MHz | 15MHz | 20MHz ,

Default value: 20MHz .

Toggles the bandwidth of the carrier in DCI uplink scheduling.

### 8. UE Tx Antenna

Options: TX0 | TX1 ;

Default: TX0.

Set the transmission antenna of UE in DCI uplink scheduling.

### 9. Assigned Process

Displays the assigned process.

Note: This parameter only shows non-configurable.

### 10. UE RNTI

Configurable range: 0~ 65535 ;

Default: 1.

Sets the RNTI of the uplink UE.

### 11. UE UL Transmit Mode

Optional: TM1 | TM2 ,

Default: TM1.

Set the uplink UE transmission mode.

### 12. Number of UE UL Codewords

Settable range: 1~2,

Default value: 1.

Set the number of UE UL Codewords.

### 13. UE UL Number of Antenna


Optional: 1| 2| 4 Antenna ;

Default value: 1.

Set the number of user uplink antennas.

### 14. DCI # UL Transmission Config

Click DCI # UL Transmission Config to enter the corresponding DCI transmission configuration interface, please refer to Channel (UL) for more information.

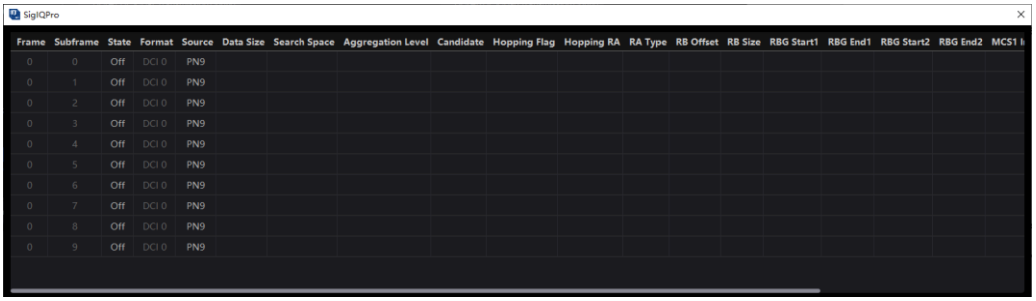



### 15. RA RNTI

Configuration range: 0~65535 , Default value: 1.

Set the value of RA RNTI.

### 16. DCI # RA Initial Transmission Config

Click DCI # RA Initial Transmission Config to enter the corresponding DCI transmission configuration interface.

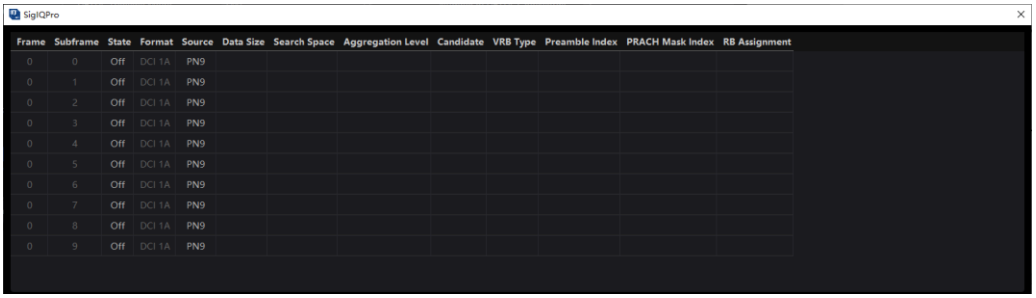


#### 1) State

Optional: On | Off , Default: Off.

Toggles the enable state of the corresponding DCI.

#### 2) Format

Displays the DCI format of the corresponding subframe.

Note: This parameter is only shown as non-configurable. For more information about DCI format, please refer to 3GPP TS 36212 Section 5.3.3.

#### 3) Source

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files.

Default: PN9 .

Sets the data source for DCI information.

#### 4) Date Size

When displaying the bit length of the DCI data.

Note: This data is displayed only if it is not configurable.

#### 5) Search Space

Optional: UE Specific | Common , Default: UE Specific.

Sets the type of search space for DCI.

#### 6) Aggregation Level

Optional:

When Search Space is UE Specific, the options are 1| 2| 4| 8 ;

When Search Space is Common, the options are 4 | 8 .

Default Value: 1 .

Sets the aggregation level of the DCI.

#### 7) Candidate

Candidate Range:

When Search Space is UE Specific and Aggregation Level is 1 or 2, the settable range is 0-5;

When Search Space is UE Specific and Aggregation Level is 4 or 8, the settable range is 0-1;

When the Search Space is Common and the Aggregation Level is 4, the settable range is 0-3;

When Search Space is Common and Aggregation Level is 8, the settable range is 0-1.

For more information, refer to 3GPP TS 36213 Section 9.1.1.

Default value: 0 .

Sets the DCI candidate.

#### 8) VRB Type

Displays the VRB type.

Note: This parameter only displays non-configurable.

#### 9) Preamble Index

Optional range: 0~63 , default value: 0.

Sets the leading index.

### 10) PRACH Mask Index

Optional range: 0~15 , default value: 0.

Set the Mask Index of PRACH.

### 11) RB Assigment

Show RB Assigment.

Note: This parameter only shows non-configurable.

### 17. TPC PUSCH RNTI

Optional range: 0~ 65535 , Default value: 1.

Sets the PUSCH RNTI.

### 18. TPC PUCCH RNTI

Optional range: 0~65535 , Default value: 1 .

Set the RNTI of PUCCH.

### 19. DCI # UL-Power-Control Transmission Config

Click DCI # UL-Power-Control Transmission Config to enter the corresponding DCI transmission configuration interface. For more information, please refer to DCI # DLSCH Transmission Config.




### 20. User RNTI


Configuration range: 0~65535 , Default value: 1.

Set the value of User RNTI.

### 21. DCI # User Transmission Config

Click DCI # User Transmission Config to enter the corresponding DCI transmission configuration

interface. For more information, please refer to DCI # DLSCH Transmission Config.

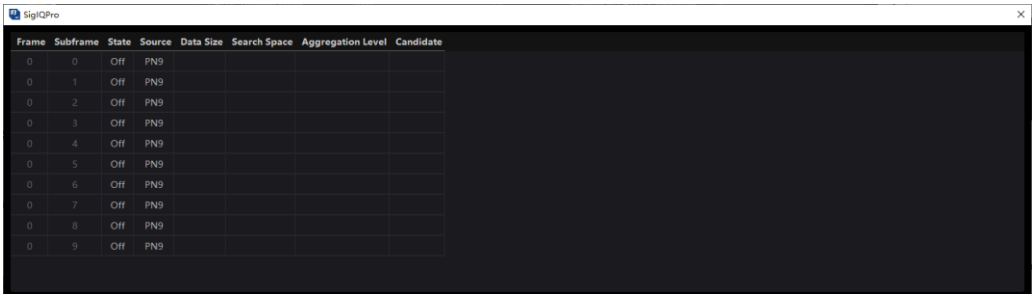


#### 4.12.3.9 DL-SCH

Click the DL-SCH node in the tree view on the left side of the window to enter the DL-SCH channel parameter settings for the corresponding number.

**1. State**

Optional: On | Off , Default: On.

Toggles the enable state of DL-SCH channel.

**2. Power Boosting**

Configuration range: 0 dB~20 dB,

Default value: 0 dB.

Set the power level of the channel in dB.

**3. UE Category**

Optional:

Category0_1 Layer | Category1_1 Layer | Category2_1 Layer | Category3_1 Layer | Category4_1 Layer | Category5_1 Layer | Category6_2 Layer | Category6_4 Layer | Category7_2 Layer | Category7_4 Layer | Category8_8 Layer | Category9_2 Layer | Category9_4 Layer | Category10_2 Layer | Category10_4 Layer | Category11_2 Layer | Category11_4 Layer

Category11_4 Layer | Category12_2 Layer | Category12_4 Layer | Category13_2 Layer | Category13_4 Layer

Category13_4 Layer | Category14_8 Layer | Category12_2 Layer | Category12_4 Layer

Default value: Category0_1 Layer.

Set the UE Category of DL-SCH, please refer to 3GPP TS 36306 for more information.

### 4. Scrambling State

Optional: On |Off , Default: On.

Toggles the scrambling enable state of the DL-SCH channel.

### 5. RNTI Type

Options: PRNTI | CRNTI |SIRNTI ,

Default: CRNTI.

Sets the RNTI type of the DL-SCL.

### 6. RNTI

Settable range:

When RNTI Type is PRNTI, the value is 65534;

When RNTI Type is CRNTI, the settable range is 0 to 65533;

When RNTI Type is SIRNTI, the value is 65535.

Default Value:

When RNTI Type is PRNTI, the value is 65534;

When RNTI Type is CRNTI, the default value is 1;

When RNTI Type is SIRNTI, the value is 65535.

Sets the RNTI value for the DL-SCH.

### 7. RS State

Optional: On | Off , Default value: Off.

Toggles the enable state of the UE Specific Reference Signal channel.

### 8. RS Power

Configuration range: 0 dB~20 dB ;

Default value: 0 dB.

Set the power level of the channel in dB.

### 9. RS Beam Cfg Mode

Options: Degree | Complex, Default: Degree.

Sets the antenna beam configuration.

### 10. RS Beam for Port

Settable range: -90~ 90 ;

Default value: 0.

Sets the value of the main flap direction of the antenna beam for Port.

### 11. UE Specific CRS Port

Optional:

Port5 | Port7 | Port11 | Port13 | Port7, Port8 | Port11, Port13 | Port7, Port8, Port9, Port10 | Port7, Port8, Port9, Port10 | Port12, Port13, Port14 .

Port7, Port8, Port9, Port10, Port11, Port12, Port13, Port14 .

Default Value:

The default value is Port5 when Transmission Mode is TM7;

The default value for other Transmission Modes is Port7.

Set the transmission port of the UE reference signal, please refer to 3GPP TS 36211 for more information.

### 12. Transmission Mode

Optional:

When Antenna Number is 1, the options are TM1| TM7~ TM10;

If the Antenna Number is 2 or 4, the options are TM2~TM10;

When the Antenna Number is 8, the options are TM9~TM10.

Default Value:

The default value is TM1 when Antenna Number is 1;

The default value is TM4 when Antenna Number is 2 or 4;

The default value is TM9 when Antenna Number is 8.

Set the transmission mode of DL-SCH.

### 13. Coding State

Optional: On | Off, default: On.

Toggles the coding enable state of DL-SCH channel.

### 14. Data Source

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | Auto| User Files.

Default: PN9.

Sets the data source for the DL-SCH channel.

### 15. MCS Index Table

Optional: Table 1~4 , Default: Table 1 .

Set the TBS index table, please refer to 3GPP TS 36213 for more information.

### 16. RV Index Config

Options: Auto | Manual , Default: Manual.

Sets the RV configuration method.

### 17. RV Index Sequence

Configurable range: When RV Index Config is Auto, the configurable range is 0~3 and the length is 1~16.

Default value: 0,2,3,1.

### 18. Number of HARQ Processes

Displays the number of HARQ processes.

Note: This parameter is only displayed if it is not configurable.


### 19. Assigned Processes

Displays the number of associated processes.

Note: This parameter is only displayed if it is not configurable.

### 20. Transmission Configuration

Click Transmission Configuration to enter the corresponding DL-SCH transmission configuration interface.

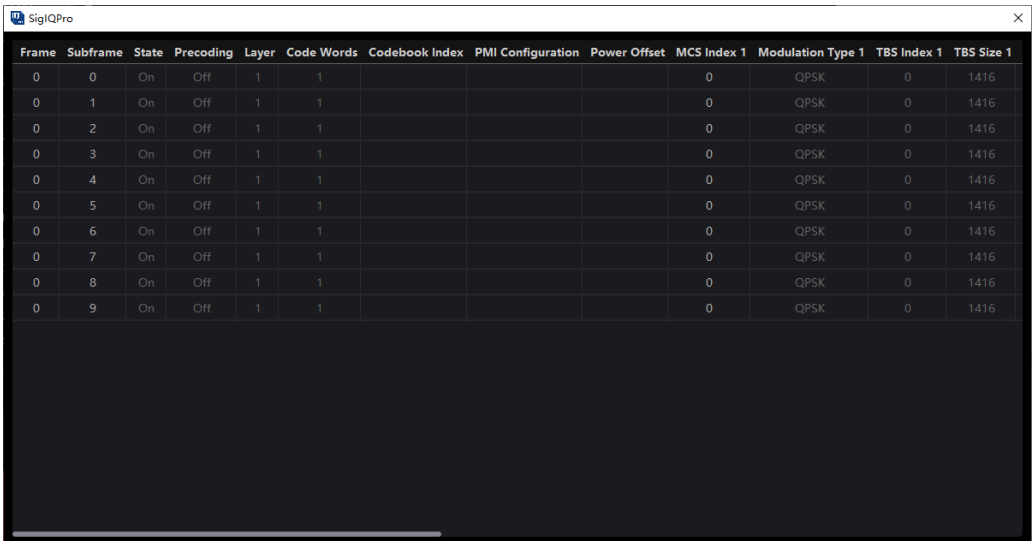


### 1) State

Displays the PDCCH enable state on the subframe.

Note: This parameter is not configurable.

### 2) Precoding

Optional: Off | TX Diversity | Spatial Mulpex ;

Default: Off.

Configure the precoding type of DL-SCH, please refer to 3GPP TS 36211 for more information.

### 3) Layer

Options: 1| 2| 4 . Default: 1.

Configure the number of layers of DL-SCH, please refer to 3GPP TS 36211 for more information.

### 4) Code Words

Optional range 1~2;

Default value: 1.

Set the number of DL-SCH code words, please refer to 3GPP TS 36211 for more information.

### 5) Codebook Index

Optional range: 0~15

Default value: 0

Set the codebook index, please refer to 3GPP TS 36211 for more information.

### 6) PMI Configuration

Optional:

The option is TPMI Indicated| Last PMI when Precoding is Spatial Mulpex, otherwise the parameter is hidden.

Default value: TPMI Indicated.

Set the PMI reported by UE.

### 7) Power Offset

Optional:

When Transmission Mode is TM5 and Precoding is Spatial Mulpex, the option is 0 dB | -10log10(2) dB.

The parameter is hidden in other cases.

Default value: 0 dB.

Sets the power offset.

### 8) MCS Index

Range can be set:

The settable range is 0~28 when MCS Index Table is Table 1;

If MCS Index Table is Table 2, the setting range is 0~27;

If MCS Index Table is Table 2, the range is 0~27; if MCS Index Table is Table 3, the range is 0~26;

If MCS Index Table is Table 3, the range is 0 to 26; if MCS Index Table is Table 4, the range is 0 to 58;

Default value: 0.

Set the MCS index of the DL-SCH, which affects the modulation type and TBS index, please refer to 3GPP TS 36213 for more information.

### 9) Modulation Type

Displays the modulation type specified by the corresponding MCS index.

Note: This parameter is only shown as non-configurable.

### 10) TBS Index

Displays the TBS index as specified by the corresponding MCS index.

Note: This parameter is not configurable.

### 11) TBS Size

Displays the TBS size as specified by the corresponding TBS index.

Note: This parameter is not configurable.

### 12) Retransmission

Options: On | Off , Default: Off.

Toggles the subframe retransmission enable state.

### 13) RV Index Seq

Configurable range:

When RV Index Config is Manual, the configurable range is 0~3;

Not configurable when RV Index Config is Auto.

Default Value:

The default value is 0 when RV Index Config is Manual;

When RV Index Config is Auto, the default value is displayed in RV Index Sequence order.

Sets the RV Index Sequence.

### 14) RA Type

Optional:

When Transmission Mode is TM3~TM4 or TM7~10, the options are: Type 0| Type 1;

When Transmission Mode is TM5~ 6, the parameter is fixed to Type 2;

For the rest of the cases, the options are: Type 0 | Type 1| Type 2.

Default value:

When Transmission Mode is TM5~6, this parameter is fixed to Type 2;

The default value is Type 0 in other cases.

Set the resource allocation type, for more information refer to 3GPP TS 36213 Section 7.1.6.

### 15) Subset

Settable range:

When RA Type is Type 1 can be set, the parameter is hidden in the rest of the cases;

Fixed to 0 when Channel Bandwidth is 1400K;

When Channel Bandwidth is 3M or 5M, it can be set to 0~ 1;

When Channel Bandwidth is 10M, the range can be set to 0~2;

When the Channel Bandwidth is 15M or 20M, the range is 0~3.

Default value: 0 .

Set the subset number, for more information, please refer to 3GPP TS 36213 Section 7.1.6.

### 16) Shift

Options: On | Off .

Can be set when RA Type is Type 1, otherwise the parameter is hidden.

Default value: Off .

Toggles the subset offset enable state, please refer to 3GPP TS 36213 Section 7.1.6 for more information.

### 17) RBG Bitmap

Settable range: 0~1 .

It can be set when RA Type is Type 0~ 1, and the parameter is hidden in the rest of the cases.

Default value: display the default value according to the current bandwidth occupancy status.

To set the RB occupancy status, please refer to 3GPP TS 36213 Section 7.1.6 for more information.

### 18) VRB Type

Optional: localized| Distributed .

Can be set when RA Type is Type2, in the rest of the cases the parameter is hidden.

Default value: Localized .

Set the VRB type, refer to 3GPP TS 36213 section 7.1.6 for more information.

### 19) RB Size

Settable range:

When VRB Type is Localized, the settable range is from 1 to the number of RBs specified by Channel Bandwidth;

When VRB Type is Distributed, the settable range is 1~ Channel Bandwidth;

It can be set when RA Type is Type2, and the parameter is hidden in the rest of the cases.

Default Value: displays the default value according to the current bandwidth occupancy status.

Sets the number of RB occupancy for the subframe.

### 20) RB Offset

Settable range:

When VRB Type is Localized, 0~ Number of RBs specified by Channel Bandwidth - RB Size;

When VRB Type is Distributed, 0~ VRB number specified by Channel Bandwidth - RB Size;

It can be set when RA Type is Type2, and the parameter is hidden in the rest of the cases.

Default value: 0 .

Sets the RB offset.

**21) RB Gap**

Optional:

Optional when the number of RBs specified by Channel Bandwidth>= 50 NGap 1| NGap 2 ;

Fixed to NGap 1 when the number of RBs specified by Channel Bandwidth< 50 ;

Settable when VRB Type is Distributed, the parameter is hidden in the rest of the cases.

Default value: NGap 1 .

Toggles the RB Gap type, refer to 3GPP TS 36213 for more information.

## 4.12.4 Channel (UL)

When the waveform type is DownLink, the channels related to the downlink are displayed under the Channel node in the tree view on the left side of the window, and you can enter the configuration interface of the related channels by clicking each channel.

### 4.12.4.1 SRS

Click the SRS node in the tree view on the left side of the window to enter the parameter setting.

**General Setting**

**1. State**

Options: On | Off, Default: Off.

Toggles the enabling state of SRS channel.

**2. Power Boosting**

Selectable range: -60.000 ~ 20.000 dB,

Default value: 0 dB.

Set the power of SRS relative to the carrier.

### 3. Subframe Configuration

Configurable range: 0 ~ 15 , default value: 0.

Select the subframe configuration of SRS, see 3GPP protocol for details.

### 4. SRS Subframe

Displays the current subframe configuration of SRS, constrained by the parameter **Subframe Configuration** .

### 5. nSRS_CS

Settable range: 0 ~ 7, default value: 0.

Set the SRS parameter $n_{SRS}^{cs}$ to determine the SRS cyclic shift.

### 6. C_SRS

Settable range: 0 ~ 7, default value: 7.

Set SRS parameter $C_{SRS} \in \{0,1,2,3,4,5,6,7\}$ to select SRS bandwidth configuration.

### 7. B_SRS

Settable range: 0 ~ 3 , default value: 0 .

Set SRS parameter $B_{SRS} \in \{0,1,2,3\}$ .

### 8. KTC

Settable range: 0 ~ 1, default value: 0.

Set SRS parameter $k_{TC} \in \{0,1\}$ .

### 9. b_hop

Settable range: 0 ~ 3, default value: 3.

Set SRS parameter $b_{hop}$ .

Note: If the parameter $b_{hop} \geq B_{SRS}$ SRS **Frequency Hopping** is on, the parameter $b_{hop} < B_{SRS}$ SRS Frequency **Hopping** is on.

### 10. I_SRS

Setting range: TDD: 0~ 644; FDD: 0~ 636;

Default value: 0 .

Set the SRS parameter ISRS, which is used to determine the SRS period T_SRS and the subframe offset T_Offset, for the specific constraints, please refer to 3GPP protocol 36211 Table 8.2-1 and Table 8.2-2.

**11. nRRC**

Settable range: 0~ 23 , Default value: 0 .

Set the SRS parameter $n_{\mathrm{RRC}}$ .

**12. T_SRS.**

Displays the SRS parameter $T_{\mathrm{SRS}}$ , subject to I_SRS and 3GPP protocol 36211 Table 8.2-1 and Table 8.2-2.

**13. T_Offset**

Display parameter $T_{offset}$ , subject to I_SRS and 3GPP protocol 36211 Table 8.2-1 and Table 8.2-2.

**14. Frequency Hopping**

Displays the SRS frequency hopping enable state, subject to **b_hop** and **B_SRS** .

#### 4.12.4.2 UL-SCH

Click the UL-SCH node in the tree view on the left side of the window to enter the parameter setting.

##### 4.12.4.2.1 General Setting

**1. State**

Options: On | Off , Default: On.

Toggles the enable state of PUSCH channel.

**2. Coding State**

Options: On | Off , Default: On.

Toggles the coding state of the PUSCH channel.

**3. Scrambling**

Options: On | Off , Default: On.

Toggles the scrambling state of the PUSCH channel.

**4. RNTI(1)**

Configuration range: 0 ~ 65535 , Default value: 1.

Set the RNTI value at code word 0.

**5. RNTI(2)**

Configuration range: 0 ~ 65535, Default value: 1.

Set the RNTI value for code word 1.

Note: If the code word is 0, the current parameter is hidden.

#### 4.12.4.2.2 PUSCH Common

**1. Hopping Mode**

Optional: Off | Inter-subframe hopping| Intra and inter-subframe hopping .

Default value: Off.

Off or select different hopping modes for PUSCH.

Intra and inter-subframe hopping: Hopping within the same subframe and between different subframes at the same time.

Inter-subframe hopping: Hopping between subframes, no hopping between two slots in the same subframe.

**2. PUSCH Hopping Type**

Type1 +1/4 | Type1 -1/4 | Type1 +1/2 | Type2 , | Type1 +1/2 | Type2 , | Type1 +1/4 | Type1 -1/4 | Type1 +1/2

Default: Type1 +1/2.

Note: This option is not available when **Hopping Mode** is Off.

**3. N_HO_RB**

Type1 +1/4 | Type1 -1/4 | Type1 +1/2 | Type2 .

Default: Type1 +1/2.

Note: This option is not available when **Hopping Mode** is Off.

**4. Nsb**

Configuration range: 1 ~ 4 .

Default value: 1.

Set the number of subbands of PUSCH $N_{sb}$ .

Note: This option is not available when Hopping Mode is Off.

### 5. Delta ss

Configuration range: 0 ~ 29.

Default value: 0.

Set the DMRS sequence parameter for calculating the sequence shift.

### 6. nDMRS(1)

Configuration range: 0 ~ (Maximum REs - 1), default value: 0.

Set the DMRS sequence related parameters (set the parameters of Format 4 and Format 5 in PUCCH, the setting range is shown in Table 4-11 ), to calculate the cyclic shift of the demodulation reference signal (DMRS) within the frame, range: 0 ~ (Maximum REs - 1), default 0

Table 4-11 (TS36.211 Table 5.5.2.1.1-2) Mapping of cyclicShift to $n_{DMRS}^{(1)}$ values

| cyclicShift | $n_{DMRS}^{(1)}$ |
|---|---|
| 0 | 0 |
| 1 | 2 |
| 2 | 3 |
| 3 | 4 |
| 4 | 6 |
| 5 | 8 |
| 6 | 9 |
| 7 | 10 |

### 7. PUSCH ID

Configuration range: 0 ~ 509 ,

Default value: -1 (no configuration).

Set the PUSCH ID value.

### 8. DMRS PUSCH CSH ID

Configuration range: 0 ~ 509 ,

Default value: -1 (no configuration).

Sets the initial value of the cyclic shift hop used for PUSCH DMRS pseudo-random sequence generation.

#### 4.12.4.2.3 MIMO Settings

**1. Layer Number**

Configurable range: 1 (1 Antenna) | 2 (2 Antennas) | 4 (4 Antennas) .

Default value: 1.

Set the layer number of PUSCH, the range of this parameter depends on the number of antennas.

**2. Codeword Index**

Settable range:

0 ~ 5 (2 Antennas, 1 Layer) | 0 ~ 23 (4 Antennas, 1 Layer) | 0 ~ 15 (4 Antennas, 2 Layers)

0 ~ 11 (4 antennas, layer 3) | 0 (4 antennas, layer 4)

Set the codebook index of PUSCH.

**3. Activate DMRS with OCC**

Optional: On | Off , Default: Off .

Determines whether DMRS uses orthogonal cover code.

#### 4.12.4.2.4 Transmission Settings

**1. Transmission Mode**

Displays the current transmission mode of PUSCH, constrained by the number of antennas, TM1 is used for single antenna transmission, TM2 is used for multi-antenna transmission.

**2. MCS Table**

Optional: Table 1| Table 2 , Default: Table 1.

This parameter is used to determine the MCS (Modulation Coding Scheme) index table, Table 1 is for Supporting64QAM, Table 2 is for Supporting256QAM, for details, please refer to 3GPP protocol 36213.

**3. Data(1) Source**

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files,

Default: PN9.

Sets the data sequence for transmission block 1, you can choose PN code or customized data.

**4. Data(2) Source**

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files ,

Default: PN9 .

Sets the data sequence of transfer block 2, you can choose PN code or customized data.

**5. Harq Process Number**

Displays the number of HARQ processes.

**6. Assigned Process**

Displays the number of currently enabled HARQ processes.

**7. Rv Index Config**

Range: 0 ~ 3, Default: 0,2,3,1.

Set Rv Index Sequence.

**8. Rv Index Sequence**

Range: 0 ~ 3, Default Value: 0,2,3,1.


Set the RV Index Sequence. It can be set in the following three ways:

- If you need to configure by single index, you can use "," as the separator, e.g. 0,1,2,3 .
- If you need to configure by index range, you can use 0:3 to indicate the start index and the last index, e.g. 0:3 means 0,1,2,3.
- If you need to configure by different steps, you can use two ":" to indicate the start index, step and last index respectively, for example, 1:2:3 means 1,3.

All the above three configuration methods can be used in combination.

#### 4.12.4.2.5 UL SCH Transmission Table

Click Transmission Configuration to enter the corresponding UL-SCH transmission configuration interface.

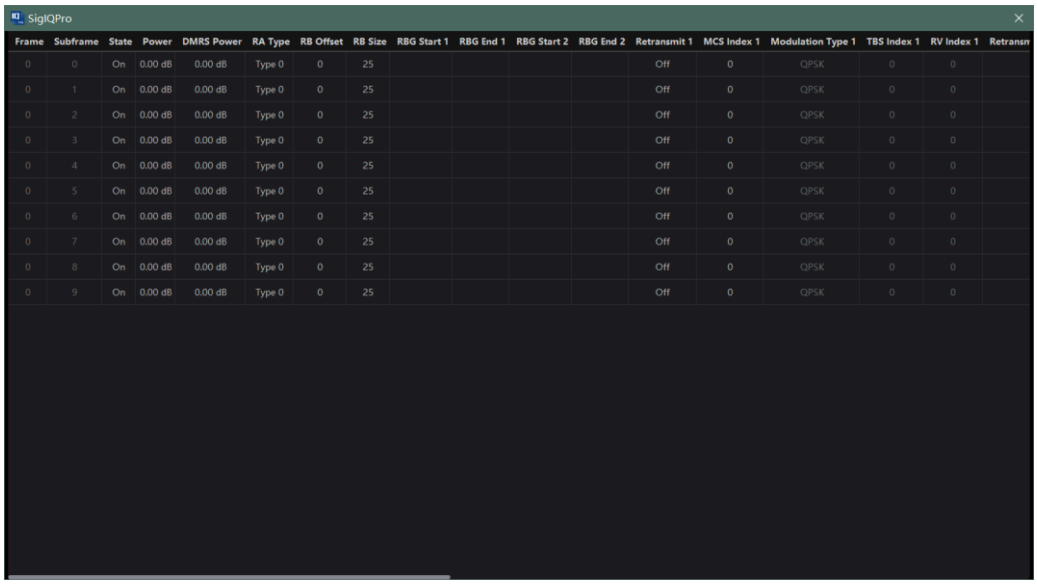


### 1. Frame

Display the frame number of each frame.

### 2. Subframe

Displays the subframe number corresponding to each subframe.

### 3. State

Options: On | Off , Default: On.

Toggles the enable switch for each subframe.

### 4. Power

Settable range: -40 dB~ 40 dB ,

Default value: 0 dB.

Sets the power of each subframe of PUSCH data relative to other channels.

### 5. DMRS Power

Settable range: -40 dB~ 40 dB,

Default value: 0 dB.

Set the power of PUSCH DMRS relative to PUSCH channel.

### 6. RA Type

Optional range: Type 0 | Type 1 ,

Default value: Type 0.

Sets the mapping method of PUSCH.

### 7. RB Offset

Settable range: 0~ Maximum number of RBs that can be set for the current bandwidth - PUSCH **RB Size** .

Default Value: 0 .

Sets the RB offset of the current subframe of PUSCH, the range is constrained by the maximum number of RBs that can be set for the current bandwidth and the **RB Size** .

Note: Only available when RA Type of PUSCH is set to **Type 0** .

### 8. RB Size

Settable range: 0~ Maximum RBs for current bandwidth.

Default value: 25.

Set the occupied RBs of the current subframe of PUSCH, and the **sum of RB Size** and **RB Offset** cannot exceed the maximum RBs of the current bandwidth.

Note: Only available when RA Type of PUSCH is set to **Type 0** .

### 9. RBG Start 1

Configurable range: 1~ **RBG End 1** - 1 .

Default value: 1 .

Sets the RBG start position of the current subframe when PUSCH is Type 11 .

Note: Available only when RA Type of PUSCH is set to Type 1.

### 10. RBG End 1

Configurable range: **RBG Start 1** + 1~ **RBG End 2** - 1 .

Default value: 8 .

Set the RBG end position of the current subframe when PUSCH is Type 1 1 .

Note: It is assignable only when the RA Type of PUSCH is set to Type 1.

### 11. RBG Start 2

Configurable range: **RBG End 1** + 1~ **RBG Start 2** - 1 .

Default value: 10 .

Sets the RBG start position 1 of the current subframe when PUSCH is set to Type 1.

Note: Assignable only when RA Type of PUSCH is set to Type 1.

### 12. RBG End 2

Settable range: **RBG End 1** + 1~ Maximum number of RBGs that can be set for the current bandwidth;

Default value: 18 .

Set the current subframe RBG start position when PUSCH is set to Type 1 1 .

Note: Assignable only when RA Type of PUSCH is set to Type 1.

### 13. Retransmit 1

Optional: On | Off .

Default value: Off .

The subframe retransmit enable state when switching to single code word.

### 14. MCS Index 1

Range: 0~28,

Default: 0.

Sets the MCS index 1 of the current subframe (for single codeword), which affects the modulation mode and TBS index, please refer to 3GPP TS 36213 for more information.

### 15. Modulation Type 1

Displays the modulation type of the current subframe, constrained by the parameter **MCS Index 1** .

### 16. TBS Index 1

Displays the TBS index specified by the corresponding MCS index.

### 17. RV Index 1

Settable range: when RV Index Config is Manual, the settable range is 0~3.

Default Value: when RV Index Config is Manual, the default value is 0.

Sets the RV index sequence of the current subframe.

Note: Not configurable when **RV Index Config** is Auto.

### 18. Retransmit 2

Optional: On | Off , Default: Off.

Toggles the subframe retransmit enable state when Codeword Number is 2.

Note: Configurable only when **Codeword Index** is 2.

### 19. MCS Index 2

Range: 0~28, Default: 0.

When the codeword is 2, set the MCS index 1 of the current subframe (for single codeword), which affects the modulation mode and TBS index, please refer to 3GPP TS 36213 for more information.

Note: Only available when **Codeword Index** is 2.

### 20. Modulation type 2

When Codeword Index is 2, displays the modulation type of the current subframe, constrained by parameter **MCS Index 2** .

Note: Only available when **Codeword Index** is 2.

### 21. TBS Index 2

When the code word is 2, it displays the TBS index corresponding to the MCS index specification.

Note: Only available if **Codeword Index** is 2.

### 22. RV Index 2

Range: 0~3 when RV Index Config is Manual.

Default Value: when RV Index Config is Manual, the default value is 0.

When Code Word is 2, set the RV Index Sequence of the current subframe.

Note: ① Not configurable when **RV Index Config** is Auto.

② Configurable only when **Codeword Index** is 2.

### 23. CS Field Index

Configurable range: 0~ 7 , Default value 0.

Sets the cyclic shift index of the current subframe.

### 24. Harq ACK Enable

Options: On | Off , Default: On.

Toggles the HARQ-ACK enable state of the current subframe.

### 25. Harq Data Source

Options: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files .

Default: PN9 .

Sets the HARQ-ACK sequence for the current subframe, you can choose PN code or customized data.

### 26. Harq ACK Info Size

Configurable range: 1~ 128 , Default value: 1.

Set the number of HARQ-ACK bit of the current subframe.

### 27. Harq ACK Offset Index

Sets the parameter $I_{offset}^{HARQ-ACK}$ for the current subframe, see Table 4-12 for the range and constraints.

Table 4-12 (Table8.6.3 -1): Mapping of HARQ-ACK offset values and the index signalled by higher layers

| $I_{offset}^{HARQ-ACK}$ | $\beta_{offset}^{HARQ-ACK}$ |
|---|---|
| 2.000 | 2.000 |
| 2.000 | 2.500 1 |
| 2 | 3.125 |

### 28. RI Enable

Options: On | Off ,

Default: On.

Toggles the RI enable state of the current subframe.

### 29. RI Data Source

Options: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files.

Default: PN9 .

Set the RI sequence of the current subframe, you can choose PN code or customized data.

### 30. RI Info Size

Settable range: 1~ 128 ,

Default value: 1.

Set the RI bit number of the current subframe.

### 31. RI Offset Index

Sets the parameter $I_{offset}^{CQI}$ for the current subframe, the range is shown in Table 4-13.

Table 4-13 (Table8.6.3 -3): Mapping of CQI offset values and the index signalled by higher layers

| $I_{offset}^{CQI}$ | $\beta_{offset}^{CQI}$ |
|---|---|
| 0 | reserved |
| 1 reserved | reserved |
| 2 reserved | 1.125 |
| 1.125 | 1.250 |
| 4 | 1.375 |
| 5 | 1.625 |
| 6 | 1.750 |
| 7 | 2.000 |
| 8 | 2.250 |
| 9 | 2.500 |
| 10 | 2.875 |
| 11 | 3.125 |
| 12 | 3.500 |
| 13 | 4.000 |
| 14 | 5.000 |
| 15 | 6.250 |

### 32. CQI Enable

Options: On | Off , Default: On.

Toggles the CQI enable state of the current subframe.

**33. CQI Data Source**

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files ,

Default: PN9.

Set the CQI sequence of the current subframe, you can choose PN code or customized data.

**34. CQI Info Size**

Settable range: 1~ 128 , Default: 1.

Set the CQI bit number of the current subframe.

**35. CQI Offset Index**

Setting range: 2~ 15 , Default value: 2.

Sets the CQI offset of the current subframe.

#### 4.12.4.3 UCI

Click the UCI node in the tree view on the left side of the window to enter the parameter setting.

**1. General Setting**

**1) State**

Options: On | Off , Default: On.

PUCCH channel enable switch.

**2) Scrambling**

Options: On | Off , Default: On.

Toggles the scrambling state of the PUCCH channel.

**3) RNTI**

Settable range: 0~65535 ,

Default value: 1.

Set the RNTI value of PUCCH.

**2. Demodulation Reference Signal Settings**

#### 1) N_RB(2)

Range: 0~ Maximum RBs of current bandwidth; Default value: 0 .

Sets the number of RBs used for PUCCH format 2/2a/2b resources (nPUCCH2).

#### 2) N_CS(1)

Settable range: 0~ 7 , Default value: 0.

Sets the number of resources used for format 1 in the PUCCH format 1/1a/1b and format 2/2a/2b mixed resources.

#### 3) Delta Shift PUCCH

Settable range: 1~ 3 , Default value: 1.

Set the cyclic shift interval for PUCCH format 1/1a/1b $\Delta_{\text{shift}}^{\text{PUCCH}}$ .

### 3. UL CoMP Settings

#### PUCCH ID


Settable range: -1~ 509 , Default value: -1.

Setting parameter $n_{\text{ID}}^{\text{PUCCH}}$ .

### 4. Transmission Settings

#### 1) Transmission Configuration

Click Transmission Configuration to enter the corresponding UCI transmission configuration interface.

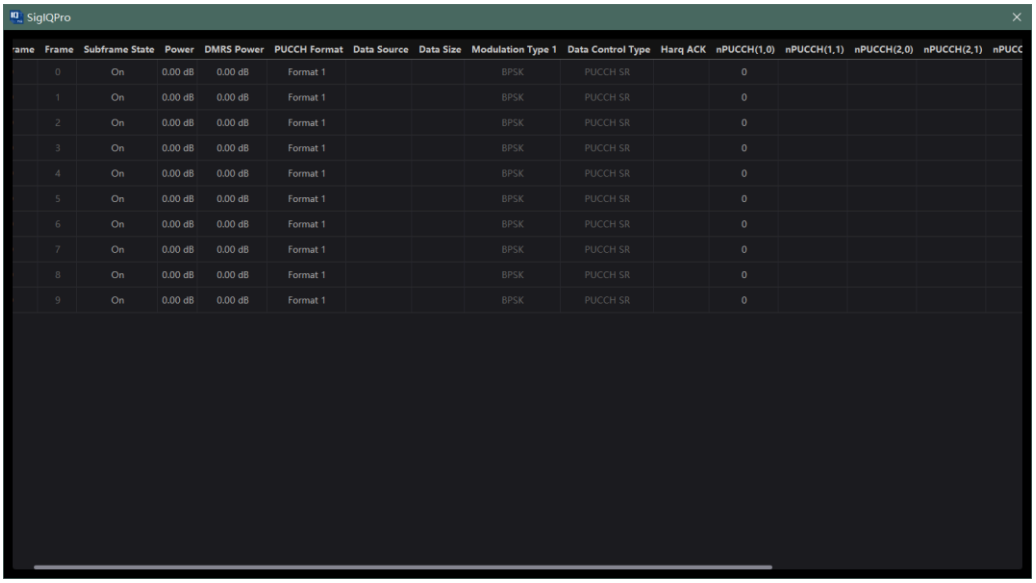

### 2) Frame

Displays the frame number of each frame.

### 3) Subframe

Displays the subframe number corresponding to each subframe.

### 4) State

Options: On | Off . Default: On.

Toggles the enable switch for each subframe.

### 5) Power

Settable range: -40 dB~ 40 dB . Default value: 0 dB.

Sets the power of each subframe of PUCCH data relative to other channels.

### 6) DMRS Power

Settable range: -40 dB~ 40 dB. Default value: 0 dB.

Set the power of PUCCH DMRS relative to the PUCCH channel.

### 7) PUCCH Format

Optional:

Format 1| Format 1a | Format 1b | Format 2 | Format 2a;

Format 2b| Format 3 | Format 4 | Format 5;

Default value: Format 1 .

Sets the PUCCH format of the current subframe.

### 8) Data Source

Optional: PN9 ITU | PN9 | PN11 | PN15 | PN23 | User Files .

Default: PN9 .

Set the data type of the current subframe, you can choose PN code or custom data.

Note: Only available when **PUCCH Format** is set to Format 2a | 2b.

### 9) Data Size

Settable range: 1~ 13 . Default value: 1.

Sets the number of bits in the current subframe.

Note: Available only when **PUCCH Format** is set to Format 2a | 2b.

#### 10) Modulation Type 1

Displays the modulation type of the current subframe.

#### 11) Data Control Type

Displays the UCI data type of the current subframe.

#### 12) Harq ACK

Optional: ACK | NACK; Default: ACK.

Toggles the HARQ ACK enable state.

Note: Only assignable when **PUCCH Format** is set to Format 1a | 1b| 2a | 2b.

#### 13) nPUCCH(1,0)

Settable range: The maximum value is bound by **CP Type** , current bandwidth maximum RB count and **Delta Shift PUCCH** .

Default value: 0.

Set the resource index of PUCCH Format 1| 1a | 1b, please refer to 3GPP protocol 36211 for details.

Only assignable when **PUCCH Format** is set to 1| 1a | 1b.

#### 14) nPUCCH(1,1)

Settable range: the maximum value is bound by **CP Type** , current bandwidth maximum RB count and **Delta Shift PUCCH** .

Default value: 0.

Set the resource index of PUCCH Format 1| 1a | 1b when the number of antennas is 2. For details, please refer to 3GPP protocol 36211.

Only assignable when **PUCCH Format** is set to 1| 1a | 1b.

#### 15) nPUCCH(2,0)

Settable range: the maximum value is bound by **N_RB(2)** and **N_CS(1)** .

Default value: 0.

Set the resource index of PUCCH Format 2| 2a | 2b, please refer to 3GPP protocol 36211 for details.

Only assignable when PUCCH Format is set to 2| 2a | 2b.

**16) nPUCCH(2,1)**

Range: The maximum value is bound by **N_RB(2)** and **N_CS(1)**

Default value: 0 .

Set the resource index of PUCCH Format 2| 2a | 2b when the number of antennas is 2. For details, please refer to 3GPP protocol 36211.

Only assignable when **PUCCH Format** is set to 2| 2a | 2b.

**17) nPUCCH(3,0)**

Settable range: the maximum value is constrained by the maximum number of RBs in the current bandwidth.

Default value: 0 .

Set the resource index of PUCCH Format 3, please refer to 3GPP protocol 36211 for details.

Only assignable when **PUCCH Format** is set to 3.

**18) nPUCCH(3,1)**

Settable range: the maximum value is constrained by the maximum number of RBs in the current bandwidth.

Default value: 0 .

Set the resource index of PUCCH Format 3 when the number of antennas is 2. For details, please refer to 3GPP protocol 36211.

Only assignable when **PUCCH Format** is set to 3.

**19) nPUCCH(4,0)**

Settable range: 0~ Maximum number of RBs/ 2 for current bandwidth.

Default value: 0 .

Sets the resource index of PUCCH Format 4. For details, please refer to 3GPP protocol 36211 .

Matchable only when **PUCCH Format** is set to 4.

**20) nPUCCH(5,0)**

Settable range: 0~ Maximum number of RBs for current bandwidth.

Default value: 0 .

Sets the resource index for PUCCH Format 5, see 3GPP protocol 36211 for details.

Only assignable when **PUCCH Format** is set to 5.

### 21) nPUCCH(4,rb)

Displays the number of RBs for the current subframe PUCCH Format 4, corresponding to the parameter $M_{RB}^{PUCCH4}$ .

Assignable only when **PUCCH Format** is set to 4.

### 22) noc


Settable range: 0| 1 , Default value: 0 .

Sets the spreading sequence index of the current subframe PUCCH Format 5 $n_{oc}$ .


Configurable only when **PUCCH Format** is set to 5.

## 4.13 WLAN_802_11b/g

On the homepage, click WLAN and select WLAN_802_11b/g (i.e., WiFi1) to enter the corresponding protocol waveform settings page.

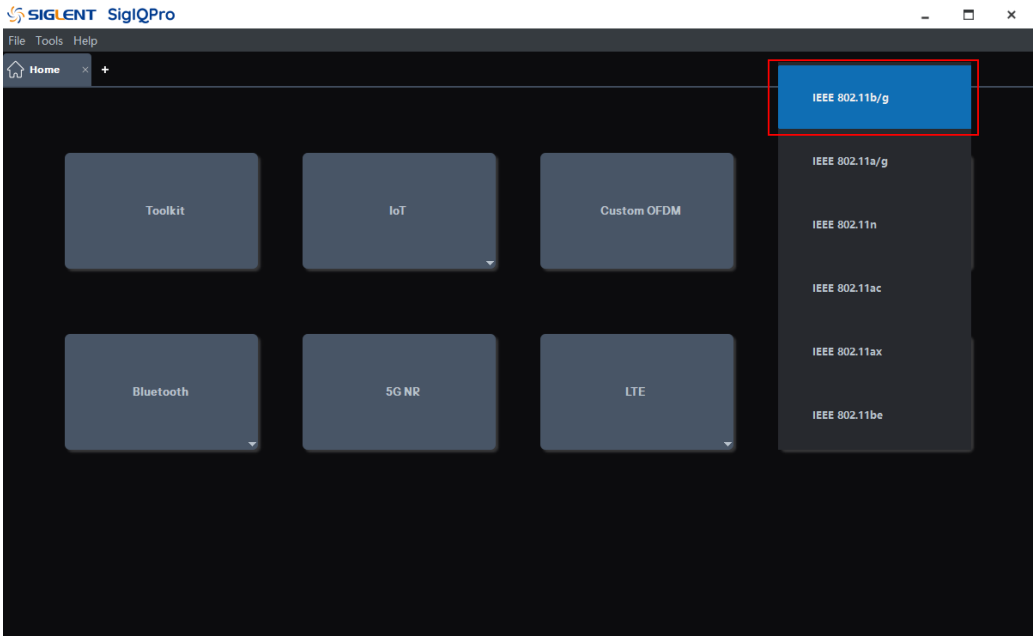


The waveform settings panel is used to configure waveform parameters such as data rate.

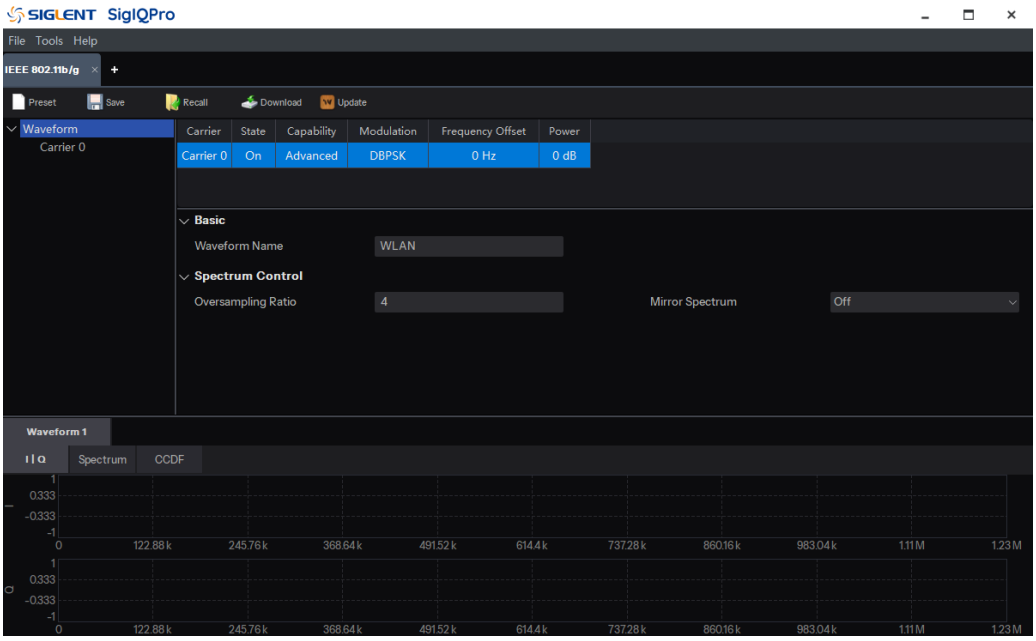


The parameter configuration for WLAN follows a hierarchical structure, roughly divided into levels such as Waveform and Carrier.

## 4.13.1 Waveform

The Waveform page is divided into two sections: Basic and Spectrum Control.

### 4.13.1.1 Basic

This interface configures basic waveform parameters.

**Waveform Name**

Names the generated waveform. If not configured by the user, the default name is used.

### 4.13.1.2 Spectrum Control

This interface configures spectrum control-related parameters.

**1. Oversampling Ratio**

Configurable range: 1–128. Default value: 4.

Sets the oversampling ratio of the baseband signal.

This parameter increases the actual FFT points during OFDM-modulated baseband signal generation. If set too high, it may reduce signal generation speed or even cause program crashes due to insufficient memory.

**2. Mirror Spectrum**

Options: On | Off.

Default value: Off.

Toggles the enabled state of baseband signal spectrum mirroring.

Spectrum mirroring is achieved by inverting the Q component of the baseband IQ data.

## 4.13.2 Carrier

The Carrier page is divided into five sections: Capability, Basic, Coding and Modulation, Spectrum Control, and Payloading Configuration.

### 4.13.2.1 Capability

This interface configures carrier capability parameters.

**Capability**

Options: Advanced | Basic

Basic functionality supports RF testing for all wireless LAN signals except channel coding. Advanced functionality supports full channel-coded waveform testing.

### 4.13.2.2 Basic

**1. Number of Frames**

Configurable range: 1–2000.

Default value: 1.

Sets the number of frames used in the waveform.

Selecting a value greater than 1 creates multiple consecutive data payload frames.

**2. Generation Mode**

Options: Framed | Unframed.

Default value: Framed.

Selects framed or unframed mode for signal generation.

**3. Head Idle Interval**

Configurable range: 0–20 μs.

Default value: 0 μs.

Sets the length of the idle time before the frame header (in microseconds).

**4. Idle Interval**

Configurable range: 0–20 μs. Default value: 0 μs.

Sets the length of the idle time between frames (in microseconds).

**5. Frequency Offset**

Configurable range: 0–30 MHz.

Default value: 0 Hz.

Sets the frequency offset relative to the signal generator's output frequency.

#### 4.13.2.3 Coding and Modulation

Configures coding and modulation-related parameters.

**1. Data Rate**

Options: 1 Mbps (DSSS) | 2 Mbps (DSSS) | 5.5 Mbps (DSSS) | 11 Mbps (DSSS)

The selected data transmission rate automatically sets the modulation and coding rate according to the 802.11 standard.

**2. Modulation**

For 1 Mbps and 2 Mbps data rates, the modulation format is automatically set to DBPSK and DQPSK, respectively, and cannot be changed.

For 5.5 Mbps and 11 Mbps data rates, CCK or PBCC is automatically set as the modulation scheme and cannot be changed.

**3. Preamble Type**

Options: Long | Short, default value: Long.

Selects the preamble type in DSSS/PBCC mode.

**4. Locked Clocks**

Options: On | Off, default value: On.

Only adjustable in advanced functionality. In "Basic" mode, it is automatically set to "On."

5. **Ramp Type**

Options: None | Linear | Cosine

- **None:** Transmits the signal at full power, the simplest power ramping.
- **Linear:** Linear ramping shapes the burst in a linear manner.
- **Cosine:** Cosine ramping minimizes out-of-channel interference.

6. **Ramp Time**

Sets the length of the power rise/fall ramp (in microseconds).

#### 4.13.2.4 Spectrum Control

Configures spectrum control parameters.

1. **Filter**

Options: None | Root Raised Cosine | Gaussian | FIR

- **None:** No filter.
- **Root Raised Cosine:** A root-raised cosine filter with a pulse response that is circular at the symbol rate.
- **Gaussian:** A Gaussian filter with non-zero inter-symbol interference (ISI).
- **FIR:** A finite impulse response filter.

2. **Alpha**

Configurable range: 0.1–1, default value: 0.5.

Only valid for the root-raised cosine filter. Sets the filter's alpha coefficient.

3. **BT**

Configurable range: 0.1–1, default value: 0.5.

Only valid for the Gaussian filter. Determines the degree of signal filtering.

4. **Length**

Configurable range: 0–1000, default value: 10.

The symbol length determines how many symbol periods are used in the calculation.

#### 4.13.2.5 Payloading Configuration

Configures data payload-related parameters.

**1. Data Type**

Options: All 0s, PN9, PN15, Custom. When enabled, the corresponding Seed value setting is displayed.

Sets the data byte pattern in the frame.

**2. Data Length**

Sets the number of data bytes in the frame.

**3. Head Format**

Enables or disables prepending the MAC header to the data payload.

**4. FCS**

Enables or disables appending the MAC FCS to the data payload. If enabled, the software automatically calculates the FCS.

**5. Increment Sequence Number**


Enables or disables incrementing the sequence number within the Sequence Control field of the MAC header.

**6. Sequence Number Increment by: (Frames)**


The number of frames set here determines when the sequence number in the Sequence Control field of the MAC header increments.

## 4.14 WLAN_802_11a/g

On the homepage, click **WLAN** and select **WLAN_802_11a/g** (i.e., WiFi2/3) to enter the corresponding protocol waveform settings page.

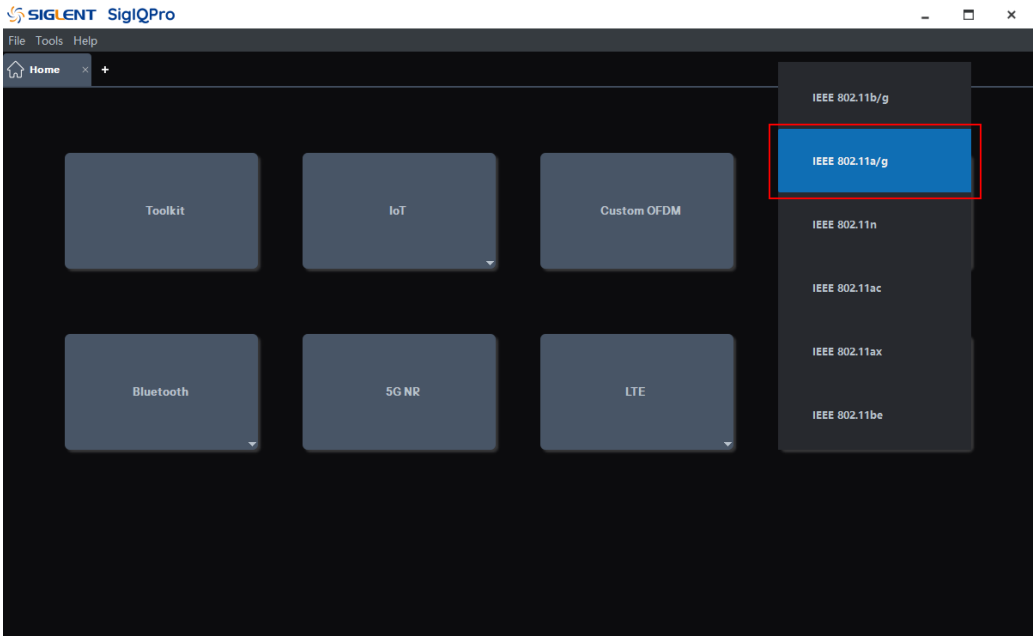


The waveform settings panel is used to configure waveform parameters such as activation mode, data rate, and data payload.

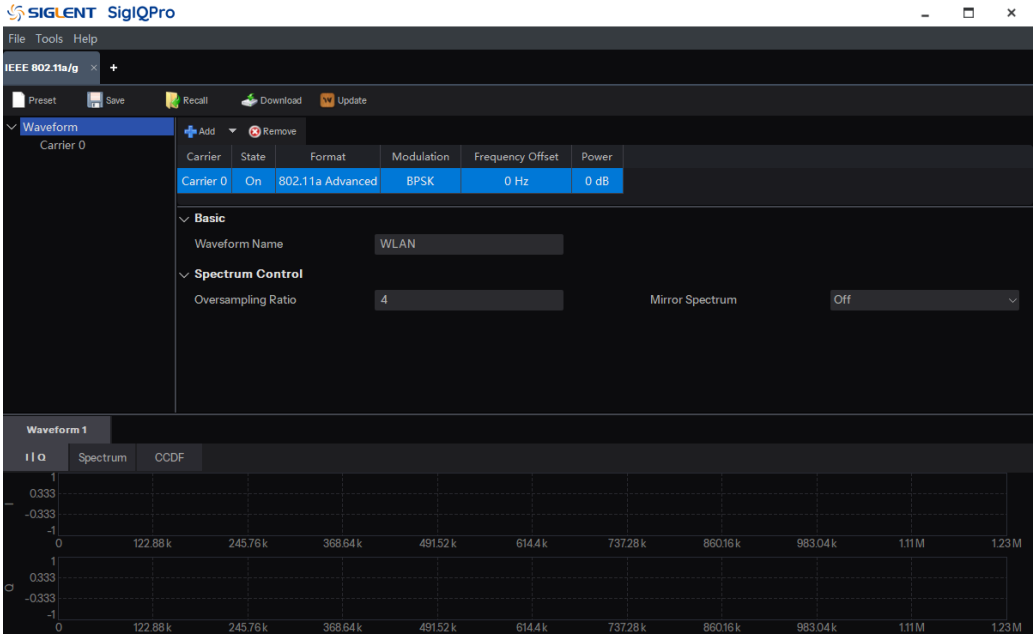


The WLAN parameter configuration follows a hierarchical structure, roughly divided into levels such as Waveform and Carrier .

### 4.14.1 Waveform

The Waveform page is divided into two sections: Basic and Spectrum Control .

#### 4.14.1.1 Basic

This interface configures basic waveform parameters.

**Waveform Name**

Names the generated waveform. If not configured by the user, the default name is used.

#### 4.14.1.2 Spectrum Control

This interface configures spectrum control-related parameters.

**1. Oversampling Ratio**

Configurable range: 1–128.

Default value: 4.

Sets the oversampling ratio of the baseband signal.

This parameter increases the actual FFT points during OFDM-modulated baseband signal generation. If set too high, it may reduce signal generation speed or even cause program crashes due to insufficient memory.

**2. Mirror Spectrum**

Options: On | Off. Default value: Off.

Toggles the enabled state of baseband signal spectrum mirroring.

Spectrum mirroring is achieved by inverting the Q component of the baseband IQ data.

### 4.14.2 Carrier

The Carrier page is divided into five sections: Capability, Basic, Coding and Modulation, Spectrum Control, and Payloading Configuration.

#### 4.14.2.1 Capability

This interface configures carrier capability parameters.

**1. Capability**

Options: Advanced | Basic

Basic: Supports RF testing for all wireless LAN signals except channel coding.

Advanced: Supports full channel-coded waveform testing.

2. State

Options: On | Off, default value: On.

Sets the current carrier activation state.

#### 4.14.2.2 Basic

This interface configures basic waveform parameters.

1. Number of Frames

Configurable range: 1–2000.

Default value: 1.

Sets the number of frames used in the waveform.

Selecting a value greater than 1 creates multiple consecutive data payload frames.

2. Generation Mode

Options: Framed | Unframed.

Default value: Framed.

Selects framed or unframed mode for signal generation.

3. Head Idle Interval

Configurable range: 0–20 μs.

Default value: 0 μs.

Sets the length of the idle time before the frame header (in microseconds).

4. Idle Interval

Configurable range: 0–20 μs.

Default value: 0 μs.

Sets the length of the idle time between frames (in microseconds).

5. Frequency Offset

Configurable range: 0–30 MHz.

Default value: 0 Hz.

Sets the frequency offset relative to the signal generator's output frequency.

6. Relative Power

Relative power value, default: 0 dB.

#### 4.14.2.3 Coding and Modulation

Configures coding and modulation-related parameters.

1. **Data Rate**

Options:

6 Mbps (OFDM) | 9 Mbps (OFDM) | 12 Mbps (OFDM) | 18 Mbps (OFDM)

24 Mbps (OFDM) | 36 Mbps (OFDM) | 48 Mbps (OFDM) | 54 Mbps (OFDM)

The selected data transmission rate automatically sets the modulation and coding rate according to the 802.11 standard.

2. **Modulation**

Displays the modulation method corresponding to the selected coding rate.

3. **Convolutional Coder**

Options: On | Off.

Default value: On.

Only adjustable in Advanced mode. In Basic mode, it is automatically set to Off.

4. **Coding Rate**

Displays the coding rate corresponding to the selected data rate.

5. **Interleaver**

Options: On | Off.

Default value: On.

Only adjustable in Advanced mode. In Basic mode, it is automatically set to Off.

6. **Scrambler**

Options: On | Off.

Default value: On.

Only adjustable in Advanced mode. In Basic mode, it is automatically set to Off.

7. **Scrambler Initialization**

Configurable range: 0–127.

Default value: 93.

Sets the initial value of the scrambler.

**8. Reserved Service Bits**

Sets the 9 reserved service bits in the Service field of OFDM mode.

**9. Subcarrier Mask**

Configures individual OFDM subcarriers through this window.

#### 4.14.2.4 Spectrum Control

Configures spectrum control parameters.

**1. Filter**

Options:

None: No filter.

Gaussian: Gaussian filter with non-zero inter-symbol interference (ISI).

Root Raised Cosine: Root-raised cosine filter with a circular pulse response at the symbol rate.

FIR: Finite impulse response filter.

User Defined: User-defined filter.

**2. Alpha**

Configurable range: 0.1–1.

Default value: 0.5.

Only valid for the root-raised cosine filter. Sets the filter's alpha coefficient.

**3. BT**

Configurable range: 0.1–1.

Default value: 0.5.

Only valid for the Gaussian filter. Determines the degree of signal filtering.

**4. Length**

Configurable range: 0–1000.

Default value: 10.

The symbol length determines how many symbol periods are used in the calculation.

#### 4.14.2.5 Payloading Configuration

Configures data payload-related parameters.

**1. Data Type**

Options: All 0s, PN9, PN15, Custom.

When enabled, the corresponding Seed value setting is displayed.

Sets the data byte pattern in the frame.

**2. Data Length**

Sets the number of data bytes in the frame.

**3. Head Format**

Enables or disables prepending the MAC header to the data payload.

**4. FCS**

Enables or disables appending the MAC FCS to the data payload. If enabled, the software automatically calculates the FCS.

**5. Sequence Number Increment by: (Frames)**

The number of frames set here determines when the sequence number in the Sequence Control field of the MAC header increments.

**6. MPDU Length**


Displays the corresponding MPDU value length.

**7. Payload Config Description**


Describes the payload type.

## 4.15 WLAN_802_11n

On the homepage, click **WLAN** and select **WLAN_802_11n** (i.e., WiFi4) to enter the corresponding protocol waveform settings page.

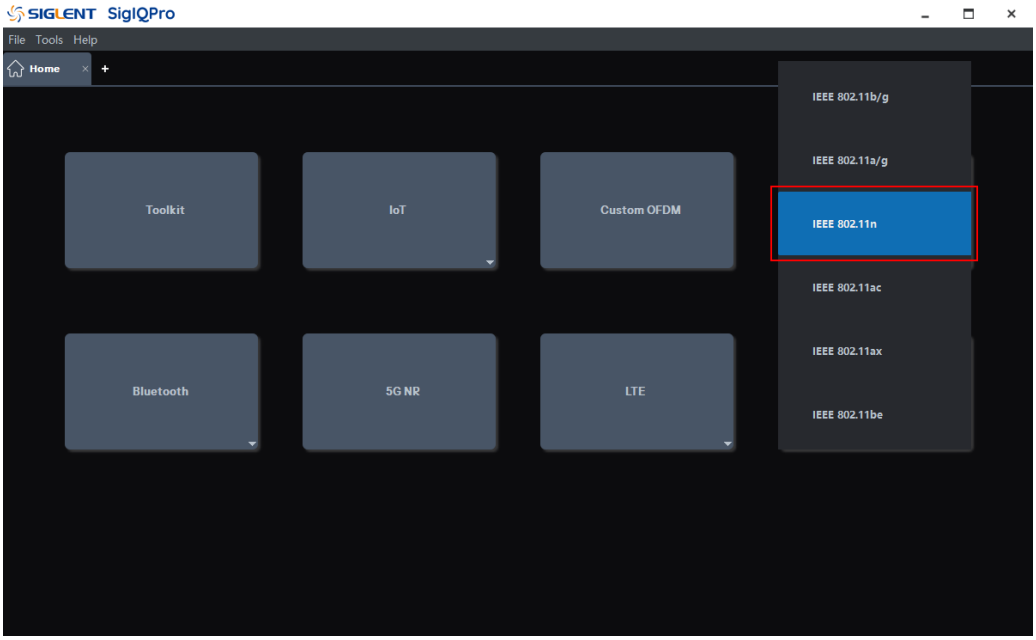


The waveform settings panel is used to configure waveform parameters such as frame type, bandwidth, and modulation scheme.

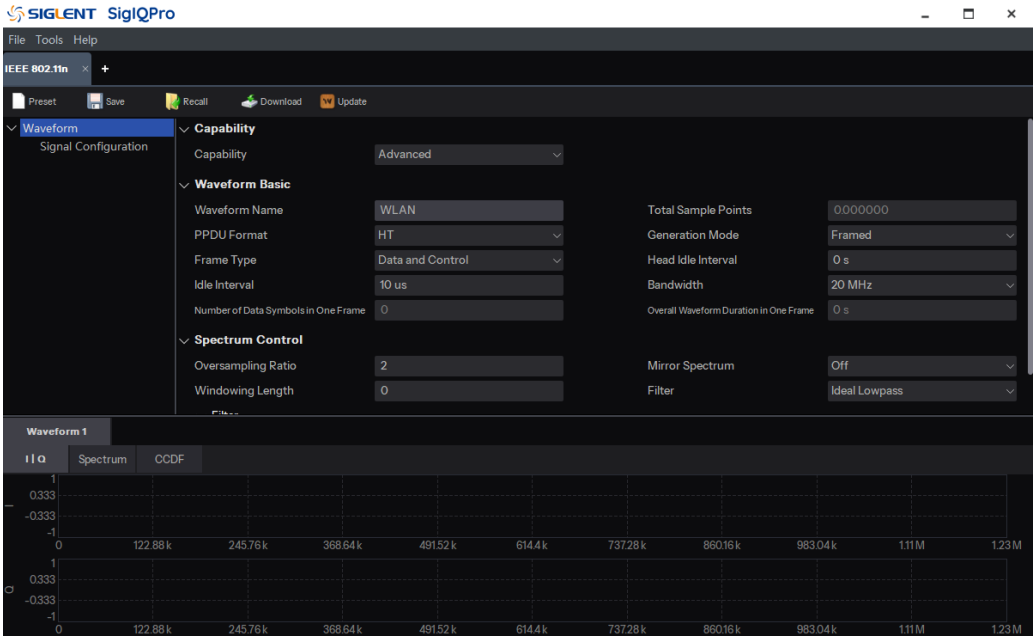


The WLAN parameter configuration follows a hierarchical structure, roughly divided into levels such as Waveform and Signal Configuration.

## 4.15.1 Waveform

The Waveform page is divided into three sections: Basic, Waveform Basic, and Spectrum Control.

### 4.15.1.1 Capability

This interface configures carrier capability parameters.

**Capability**

Options: Advanced | Basic

Basic: Supports RF testing for all wireless LAN signals except channel coding.

Advanced: Supports full channel-coded waveform testing.

### 4.15.1.2 Waveform Basic

This interface configures basic waveform parameters.

1. **Waveform Name**

Names the generated waveform. If not configured by the user, the default name is used.

2. **Total Sample Points**

Displays the total number of sampling points.

3. **PPDU Format**

Options: Legacy Mode | HT. Default value: HT (unchangeable).

Sets the PPDU mode—either Legacy Mode or HT Mode.

4. **Generation Mode**

Options: Framed | Unframed.

Selects framed or unframed mode for signal generation.

Framed: Required for receiver testing.

Unframed: Useful for component testing or scenarios requiring continuous, non-burst modulation.

5. **Frame Type**

Options: Data and Control | Beacon.

Selects the frame type—Data Frame, Control Frame, or Management Frame (e.g., Beacon Frame).

6. **Head Idle Interval**

Configurable range: 0–20 μs. Default value: 0 μs.

Sets the length of the idle time before the frame header (in microseconds).

7. **Idle Interval**

Configurable range: 0–20 μs. Default value: 0 μs.

Sets the length of the idle time between frames (in microseconds).

8. **Bandwidth**

Options: 20 MHz | 40 MHz.

Sets the bandwidth value.

9. **Number of Data Symbols in One Frame**

The number of OFDM symbols in the data portion of a single frame.

10. **Overall Waveform Duration in One Frame**

The total duration of the complete waveform in one frame (in seconds).

#### 4.15.1.3 Spectrum Control

This interface configures spectrum control parameters.

1. **Oversampling Ratio**

Configurable range: 1–128, default value: 2.

Sets the oversampling ratio of the baseband signal.

Increasing this parameter raises the actual FFT points during OFDM-modulated baseband signal generation. If set too high, it may reduce signal generation speed or cause crashes due to insufficient memory.

2. **Mirror Spectrum**

Options: On | Off, default value: Off.

Toggles the enabled state of baseband signal spectrum mirroring.

Spectrum mirroring is achieved by inverting the Q component of the baseband IQ data.

3. **Windowing Length**

Sets the number of samples for the windowing function. The window length must not exceed the guard interval of the OFDM symbol.

**4. Filter**

Options:

None: No filter.

Gaussian: Gaussian filter with non-zero inter-symbol interference (ISI).

Root Raised Cosine: Root-raised cosine filter with a circular pulse response at the symbol rate.

Ideal Lowpass: Low-pass filter.

User Defined: Custom filter.

**5. Filter Length**

Configurable range: 0–1000, default value: 10.

The symbol length determines how many symbol periods are used in the calculation.

**6. BT**

Configurable range: 0.1–1, default value: 0.5.

Only valid for the Gaussian filter. Determines the degree of signal filtering.

**7. Alpha**

Configurable range: 0.1–1, default value: 0.5.

Only valid for the root-raised cosine filter. Sets the filter's alpha coefficient.

**8. Filter Coefficient**

Filter coefficient settings.

**9. Frequency Offset**

Configurable range: 0–30 MHz, default value: 0 Hz.

Sets the frequency offset relative to the signal generator's output frequency.

### 4.15.2 Signal Configuration

The Signal Configuration page is divided into two sections: Coding and Modulation and Payloading

Configuration.

#### 4.15.2.1 Coding and Modulation

**1. MCS Index**

Selects the modulation and coding scheme (MCS) for all spatial streams.

**2. Number of Spatial Streams**

Specifies the number of spatial streams in HT (High Throughput) mode.

**3. Modulation**

Displays the modulation method corresponding to the selected coding rate.

**4. Coding Rate**

Displays the coding rate corresponding to the selected data rate.

**5. Data Rate**

Displays the corresponding data transmission rate.

**6. Number of Transmit Chains**

The number of independent RF channels used for signal transmission in wireless communication devices (e.g., Wi-Fi routers), directly related to MIMO technology.

HT Mode: Supports up to 4 transmit chains.

**7. Number of Spatial Time Streams**

Spatial-time streams are data streams in MIMO systems that extend spatial streams through the time dimension, enhancing transmission reliability or capacity.

In 802.11n (HT Mode) and later standards, achieved via space-time coding (e.g., STBC) or beamforming.

**8. Number of Extension Spatial Streams**

In MIMO systems, additional virtual data streams extended through techniques like channel bonding, higher-order modulation, or beamforming to improve throughput or coverage.

**9. Short Guard Interval**

The idle time between OFDM symbols, used to combat inter-symbol interference (ISI) caused by multipath effects.

Standard guard interval: 800 ns.

Short guard interval: 400 ns (improves efficiency by ~10% but is more sensitive to multipath delay).

### 10. Operating Mode

Options: Green Field | Mixed Mode, default value: Green Field.

Selects the preamble and SIGNAL field format in IEEE 802.11n HT Mode.

Green Field: Optimized for pure 802.11n networks (shorter preamble, no legacy compatibility fields, highest efficiency).

Mixed Mode: Retains legacy preamble for compatibility with 802.11a/b/g devices (slightly lower efficiency).

### 11. Spatial Mapping

Options: Direct Mapping | Spatial Expansion | User-defined.

Determines how spatial streams are mapped to transmit chains in MIMO systems.

Direct Mapping: High efficiency (ideal for pure HT environments).

Spatial Expansion: Enhanced compatibility/coverage.

User-defined: For experimental or specialized optimization.

### 12. Spatial Mapping Matrix

In 802.11n (HT Mode) MIMO systems, this matrix maps spatial streams to transmit antenna chains.

### 13. Scrambler

Options: On | Off. Default value: On.

Enables/disables data scrambling.

### 14. Scrambler Initialization

Sets the initial seed for the pseudo-random sequence generator, ensuring synchronized scrambling/descrambling between transmitter and receiver.

### 15. Channel Coding State

Options: On | Off. Default value: On.

Enables/disables channel coding.

**16. Channel Coding Mode**

Options: BCC | LDPC. Default value: BCC.

Selects the channel coding scheme for error correction:

BCC (Binary Convolutional Code): Traditional coding, low complexity, suitable for low-latency scenarios.

LDPC (Low-Density Parity-Check): Ideal for high-throughput or high-SNR environments.

**17. Interleaver**

Options: On | Off. Default value: On.

Enables/disables the interleaver.

BCC Mode: Must be enabled (convolutional codes are sensitive to burst errors).

LDPC Mode: Optional (LDPC inherently resists burst errors).

#### 4.15.2.2 Payloading Configuration

**1. Aggregation MPDU**

Options: On | Off. Default value: Off.

Enables/disables MPDU aggregation, combining multiple MAC Protocol Data Units (MPDUs) into a single Physical Layer Frame (PPDU) to significantly improve throughput.

**2. Smoothing**

Options: On | Off. Default value: On.

Reduces noise or interference caused by signal abruptness, improving signal stability.

**3. MPDU Length**

Displays the corresponding MPDU length.

**4. Data Type**

Options: All 0s, PN9, PN15, Custom.

When enabled, the corresponding Seed value setting is displayed.

Sets the data byte pattern in the frame.

### 5. Data Length

Sets the number of data bytes in the frame.

### 6. Head Format

Enables/disables prepending the MAC header to the data payload.

### 7. FCS

Enables/disables appending the MAC FCS to the data payload. If enabled, the software automatically calculates the FCS.

### 8. Increment Sequence Number

Enables/disables incrementing the sequence number in the Sequence Control field of the MAC header.

### 9. Sequence Number Increment by: (Frames)

Configurable range: 0–15.

Default value: 1.

Controls the increment rule for the sequence number field in the MAC header (used for frame ordering, deduplication, and reassembly).

### 10. Increment Fragment Number

Options: On | Off.

Default value: On.

Controls the increment behavior of the fragment number in the MAC header (used for reassembling fragmented frames).

Only effective when Sequence Control is enabled.

Applies only to fragmented frames.

### 11. Number of Frames


Configurable range: 1–2000.

Default value: 1.


Sets the number of frames used in the waveform.

## 4.16 WLAN_802_11ac

On the homepage, click **WLAN** and select **WLAN_802_11ac** (i.e., WiFi5) to enter the corresponding protocol waveform settings page.

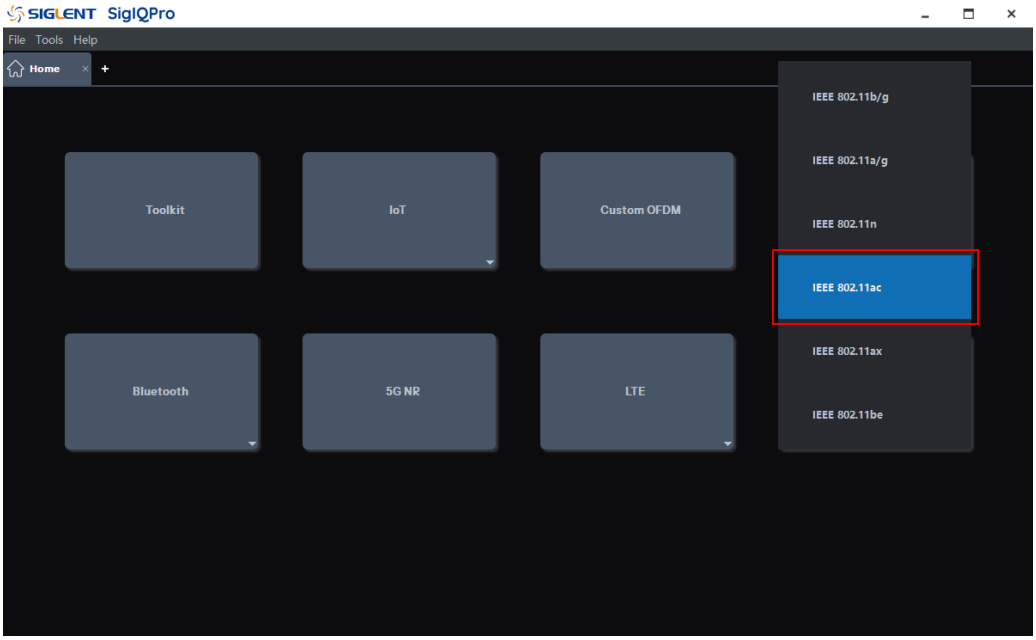


The waveform settings panel is used to configure waveform parameters such as frame type, bandwidth, and modulation scheme.

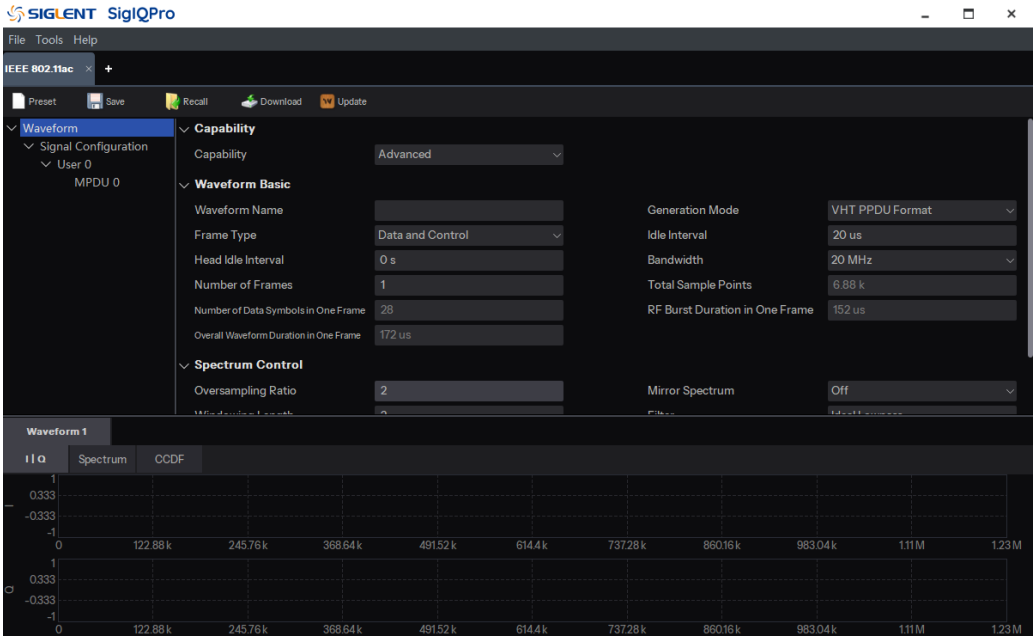


The WLAN parameter configuration follows a hierarchical structure, roughly divided into levels such as Waveform, Signal Configuration, User, and MPDU.

### 4.16.1 Waveform

The Waveform page is divided into three sections: Capability, Waveform Basic, and Spectrum Control.

#### 4.16.1.1 Capability

**Capability**

Options: Advanced | Basic

Basic: Supports RF testing for all wireless LAN signals except channel coding.

Advanced: Supports full channel-coded waveform testing.

#### 4.16.1.2 Waveform Basic

**1. Waveform Name**

Names the generated waveform. If not configured by the user, the default name is used.

**2. Generation Mode**

Options: VHT PPDU Format | VHT NDP Format | Non-HT, default value: VHT PPDU Format.

VHT PPDU Format (default): Standard 802.11ac format supporting high-speed data transmission (up to 8 spatial streams, 256-QAM).

VHT NDP Format: Null Data Packet, used for channel sounding (e.g., beamforming training) or ACK feedback, with no payload.

Non-HT: Legacy mode compatible with 802.11a/g devices (lower spectral efficiency but wider coverage).

**3. Frame Type**

Options: Data and Control | Beacon, currently only Data and Control is available.

Selects the frame type—Data Frame, Control Frame, or Management Frame (e.g., Beacon Frame).

**4. Idle Interval**

Configurable range: 0–200 ms. default value: 20 μs.

Sets the idle time between frames.

**5. Head Idle Interval**

Configurable range: 0–200 ms.

Default value: 0 μs.

Sets the idle time before the frame header.

**6. Bandwidth**

Options: 20 MHz | 40 MHz | 80 MHz | 160 MHz | 80+80 MHz.

Default value: 20 MHz.

Sets the bandwidth.

**7. Number of Frames**

Configurable range: 1–2000. Default value: 1.

Sets the number of frames in the baseband signal exported to a file or transmitted to the signal generator.

**8. Total Sample Points**

Displays the total number of baseband signal sampling points under the current configuration.

**9. Number of Data Symbols in One Frame**

Displays the number of OFDM symbols in the Data field of a single frame.

**10. RF Burst Duration in One Frame**

Displays the duration of the burst signal in one frame.

**11. Overall Waveform Duration in One Frame**

Displays the complete duration of the signal in one frame (including idle intervals).

#### 4.16.1.3 Spectrum Control

This interface configures spectrum control-related parameters.

**1. Oversampling Ratio**

Configurable range: 1–128.

Default value: 2.

Sets the oversampling ratio of the baseband signal.

Increasing this parameter raises the actual FFT points during OFDM-modulated baseband signal

generation. If set too high, it may reduce signal generation speed or cause crashes due to insufficient memory.

**2. Mirror Spectrum**

Options: On | Off. Default value: Off.

Toggles the enabled state of baseband signal spectrum mirroring.

Spectrum mirroring is achieved by inverting the Q component of the baseband IQ data.

**3. Windowing Length**

Configurable range: 0–32.

Default value: 2 (sampling points).

Sets the transition length (Ttr) of the windowing function, represented in sampling points.

**4. Filter**

Options: None | Gaussian | Root Raised Cosine | Ideal Lowpass | User Defined.

Default value: None.

Selects the baseband filter type.

## 4.16.2 Signal Configuration

The Signal Configuration page is divided into three sections: General, Transmission Setting, and Spatial Mapping.

### 4.16.2.1 General

**1. Short Guard Interval**

The idle time between OFDM symbols, used to combat inter-symbol interference (ISI) caused by multipath effects.

Standard guard interval: 800 ns.

Short guard interval: 400 ns (improves efficiency by ~10% but is more sensitive to multipath delay).

**2. Space Time Block Coding (STBC)**

Options: On | Off, default value: Off.

Enables/disables space-time block coding. When enabled, the number of space-time streams

doubles the number of spatial streams.

**3. Number of Transmit Chains (Ntx)**

The number of independent RF channels used for signal transmission in wireless communication devices (e.g., Wi-Fi routers), directly related to MIMO technology.

HT Mode: Supports up to 4 transmit chains.

**4. Number of VHT-LTFs (Nvhtltf)**

Used for channel estimation and MIMO equalization in 802.11ac (VHT) and 802.11ax (HE) systems.

**5. Number of Space Time Streams (Nsts.total)**

Displays the total number of space-time streams, equal to the sum of Nsts for all users.

**6. Partial AID**

A 9-bit field used to briefly identify the intended recipient of the PSDU (Physical Layer Service Data Unit) in Wi-Fi (e.g., 802.11ac/ax) physical layer frame structures, improving multi-user transmission efficiency.

**7. Scrambler Initialization**

Configurable range: 0–127, default value: 93.

Sets the initial value of the scrambler.

#### 4.16.2.2 Transmission Setting

**Transmission Mode**

Options: Single User | Multi User, default value: Single User.

Displays the current transmission mode.

#### 4.16.2.3 Spatial Mapping

**1. Spatial Mapping**

Options: Direct Mapping | Fourier | User-defined.

Determines how spatial streams are mapped to transmit chains in MIMO systems.

Direct Mapping: High efficiency (ideal for pure VHT environments).

Fourier: Uses Fourier transform to analyze channel characteristics and calculate optimal beam weights.

User-defined: For experimental or specialized optimization.

**2. Spatial Mapping Matrix**

The spatial mapping matrix, defaulting to the identity matrix (Direct mode).

## 4.16.3 User

The User page is divided into three sections: User Configuration, Modulation and Coding Scheme, and Transmit Data.

### 4.16.3.1 User Configuration

**1. Scrambler**

Sets the scrambler initial value (range: 0–127).

**2. Channel Coding Mode**

Options: BCC | LDPC.

Default value: LDPC.

Selects the channel coding scheme.

**3. Channel Coding State**

Options: On | Off, default value: On.

Enables/disables channel coding.

**4. BCC Interleaver**

Options: On | Off, default value: On.

Enables/disables the BCC interleaver.

**5. Number of Spatial Streams**

Configurable range: 1–8 (Single User) | 1–4 (Multi User), default value: 1.

Sets the number of spatial streams for the current user.

**6. Number of Space Time Streams**

Displays the number of space-time streams for the current user.

#### 4.16.3.2 Modulation and Coding Scheme

**1. MCS Index**

Configurable range: 0–11, default value: 8.

Sets the modulation and coding scheme (MCS) index for the current user.

**2. Modulation**

Displays the modulation method corresponding to the selected MCS.

**3. Coding Rate**

Displays the coding rate corresponding to the selected MCS.

**4. Data Rate**

Displays the data rate corresponding to the selected MCS.

#### 4.16.3.3 Transmit Data

**1. Aggregated MPDU**

Options: On | Off, default value: Off.

Enables/disables MPDU aggregation, combining multiple MAC Protocol Data Units (MPDUs) into a single Physical Layer Frame (PPDU) to significantly improve throughput.

**2. PSDU Length**

The length of the Physical Layer Service Data Unit (PSDU).

**3. Minimum MPDU Start Spacing**

Specifies the minimum time interval between adjacent MPDUs when receiving A-MPDU (Aggregated MPDU), affecting transmission efficiency and compatibility.

**4. Minimum MPDU Start Spacing in Octets**

The minimum byte interval between adjacent MPDUs in A-MPDU, determined by the time interval

and data rate.

**5. MPDU Length**

The total byte length of the A-MPDU before EOF (End-of-Frame) padding, equal to the sum of all A-MPDU subframe lengths.

### 4.16.4 MPDU

The MPDU parameter settings page.

#### 4.16.4.1 General Settings

**1. Data Type**

Options: All 0s | PN9 | PN15 | Custom,

Default value: PN9.

Selects the bit data generation type.

**2. PN Seed**

If Data Type is a PN sequence, sets the seed for PN sequence generation (default: all 1s).

**3. Data Length**

Sets the payload data length (unit: bytes).

**4. MPDU Length**

Displays the MPDU length in bytes.

**5. Head Format**

MAC frame structure filling. Click to open a dialog for displaying and filling MAC frame fields.

**6. FCS**

Options: On | Off, default value: On.

Enables/disables adding FCS (Frame Check Sequence) at the end of the frame.

**7. Increment Sequence Number**

Enables/disables incrementing the sequence number in the Sequence Control field of the MAC header.

**8. Sequence Number Increment by: (Frames)**

Configurable range: 0–15, default value: 1.

Controls the increment rule for the sequence number field in the MAC header (used for frame ordering, deduplication, and reassembly).

**9. Increment Fragment Number**

Options: On | Off, default value: On.


Controls the increment behavior of the fragment number in the MAC header (used for reassembling fragmented frames).

Only effective when Sequence Control is enabled.


Applies only to fragmented frames.

## 4.17 WLAN_802_11ax

Home Click **WLAN** to select **WLAN_802_11ax** (i.e. WiFi6) to enter the corresponding protocol waveform setting page.

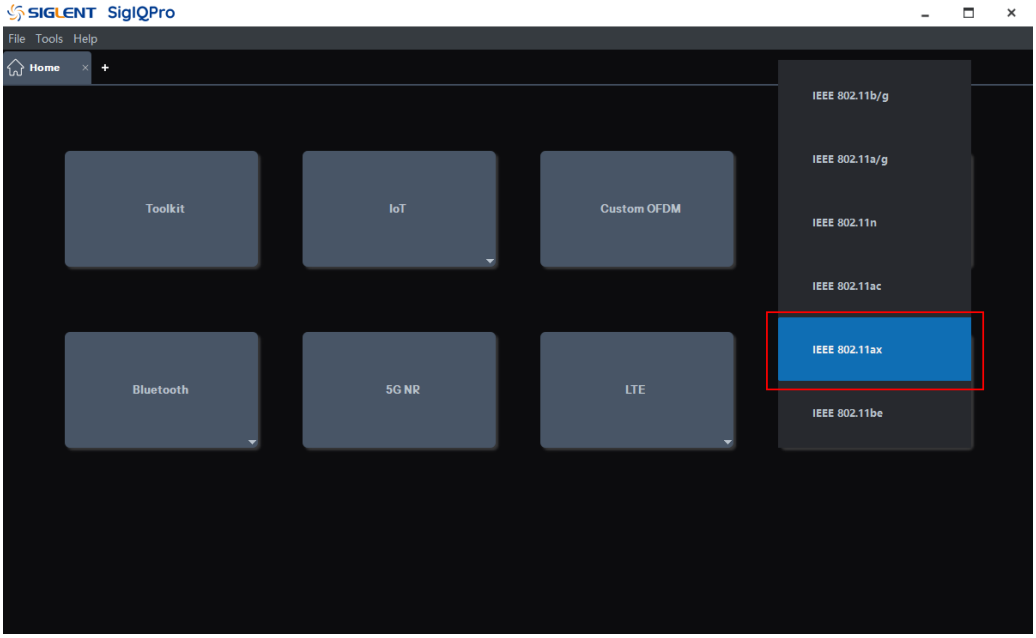


The Waveform Settings panel is used to set the parameters of the waveform, such as frame type, bandwidth, modulation method, etc.

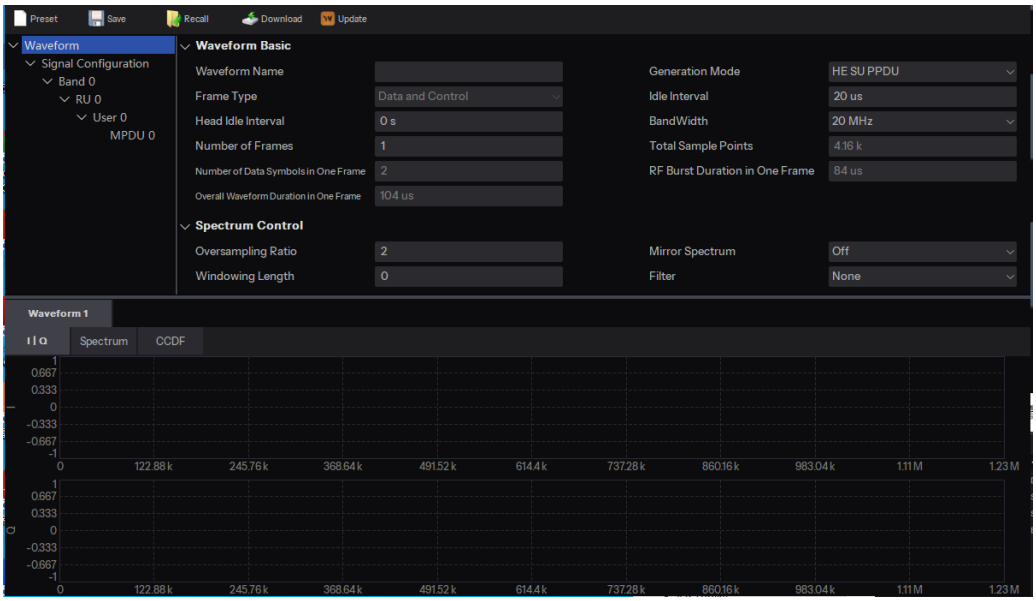


The parameter configuration of WLAN is hierarchical, roughly divided into Waveform, Signal Configuration, Band, RU, User, MPDU and other levels.

## 4.17.1 Waveform

The Waveform page is divided into two parts: Waveform Basic and Spectrum Control.

### 4.17.1.1 Waveform Basic

This interface configures the basic parameters of the waveform.

**1. Waveform Name**

Name the generated waveform. If user does not configure it, the default name will be used.

**2. Generation Mode**

Options: HE SU PPDU/ HE ER SU PPDU/ HE MU PPDU/ HE Trigger Based PPDU/ HE NDP.

Default value: HE SU PPDU.

Waveform generation method, indicating the frame type of PHY layer PPDU.

**3. Frame Type**

Indicates the frame type of MAC layer, currently only Data and Control option is available.

**4. Idle Interval**

Settable range: 0~200ms. Default value: 20us.

Sets the inter-frame idle interval.

**5. Head Idle Interval**

Settable range: 0~200ms. Default value: 0us.

Set the idle time before frame.

**6. BandWidth**

Selectable range: 20/40/80/160/80+80 MHz.

Default value: 20MHz.

Select the signal bandwidth.

**7. Number of Frames**

Selectable range: 1~2000. Default value: 1.

Set the number of frames contained in the baseband signal exported to a file or sent to the generator.

**8. Total Sample Points**

Display the total sample points of baseband signal under current configuration.

**9. Number of Data Symbols in One Frame**

Displays the number of OFDM symbols in Data field in one frame.

**10. RF Burst Duration in One Frame**

Displays the duration of the burst signal in one frame.

**11. Overall Waveform Duration in One Frame**

Displays the overall waveform duration in one frame (including idle interval).

#### 4.17.1.2 Spectrum Control

Parameters related to the spectrum control of this interface.

**1. Oversampling Ratio**

Settable range: 1 ~ 128. Default value: 2.

Set the oversampling rate of baseband signal.

This parameter will increase the number of actual FFT points when generating the baseband signal

for OFDM modulation. If this parameter is too large, it will reduce the signal generation rate and may even lead to a program crash due to lack of memory.

### 2. Mirror Spectrum

Options: On | Off. Default: Off.

Toggles the state of mirroring the baseband signal spectrum.

Mirror Spectrum is realized by inverting the Q component of the baseband IQ data.

### 3. Windowing Length

Settable range: 0~32

Default value: 2 samples.

The conversion length (Ttr) of the windowing function, expressed as the number of samples.


### 4. Filter

Options: None/Gaussian/Root Raised Cosine/Ideal Lowpass/User Defined.

Default value: None, means no filter.

Select the baseband filter type.

## 4.17.2 Signal Configuration

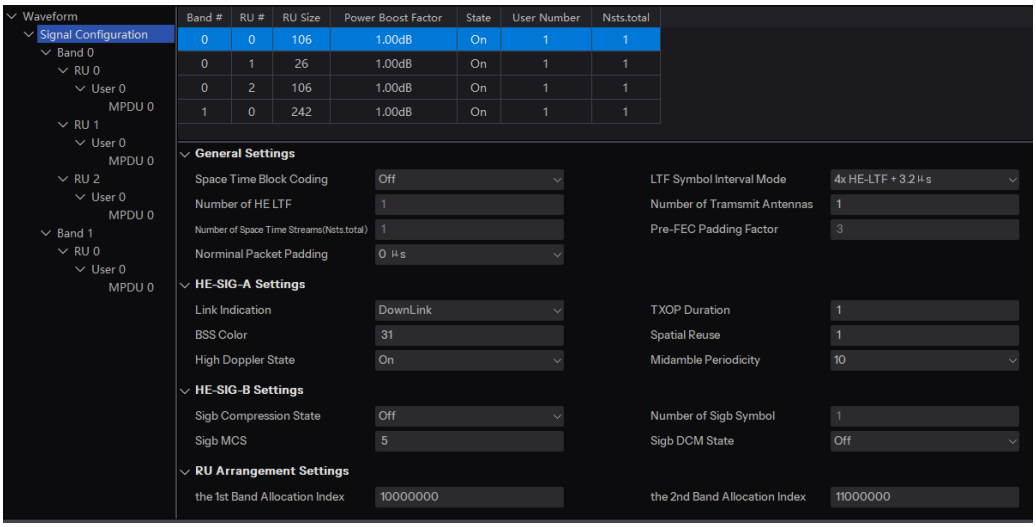


Signal Configuration page is divided into General Settings, HE-SIG-A Settings, HE-SIG-B Settings (HE MU), RU Arrangement Settings (HE MU) and Spatial Mapping.

#### 4.17.2.1 General Settings

**1. Space Time Block Coding**

Options: On | Off . Default: Off.

If or not the option of Space Time Block Coding is enabled, when it is enabled, the number of space time streams is twice as many as the number of space streams.

**2. LTF Symbol Interval Mode**

Optional:

1x HE-LTF+0.8us| 2x HE-LTF+0.8us| 2x HE-LTF+16us| 4x HE-LTF+0.8us| 4x HE-LTF+3.2us .

Default value: 4x HE-LTF+3.2us .

Select the HE-LTF type and GI length joint parameter, which is used to adjust the HE-LTF symbol. The HE-LTF type is categorized into 1x, 2x, and 4x methods, and the GI length is categorized into 0.8us, 1.6us, and 3.2us.

**3. Number of HE LTF**

Displays the number of OFDM symbols of HE-LTF, which is determined by the number of transmitting antennas. It is not editable.

**4. Number of Transmit Antennas**

Set the number of transmit antennas.

Range: 1~8. Default value: 1.

**5. Number of Space Time Streams ($N_{sts,total}$)**

Display the total number of space time streams, can not exceed the number of transmit antennas. Cannot be edited.

**6. Pre-FEC Padding Factor**

Display the pre-FEC padding factor. Range: 1~4, auto-determined, not editable.

**7. Norminal Packet Padding**

Set the packet extension (i.e. PE) padding length in time.

Optional: 0us, 8us, 16us, default: 0us.

**8. Puncture 20MHz subbands**

Configured when the bandwidth≥ 80MHz, it indicates the puncturing of 20MHz subchannels.

Punctured subchannels are indicated by "0" and unpunctured by "1".

#### 4.17.2.2 HE-SIG-A Settings

**1. Link Indication**

Indicates whether the packet is transmitted up (UpLink) or down (DownLink). Default: DownLink.

**2. TXOP Duration**

Fill TXOP length, range: 0~ 127 . Default value: 1.

**3. BSS Color**

BSS coloring settings, range: 0~ 63 . Default value: 31 .

**4. Beam Change**

Options: On | Off , Default: On.

(For SU PPDU) Indicates whether the spatial mapping of L-LTF and HE-LTF is the same or not; On means not the same, Off means the same.

**5. Spatial Reuse**

Setting range: 0~15, default value: 1.

The default value is 1. It is related to the spatial reuse situation and indicates the CCA value.

**6. High Doppler State**

Selectable range: On | Off, default value: Off.

Indicates the high Doppler state, Off means non-high Doppler, so there is no Midamble in the Data field, On means high Doppler, need to insert Midamble in the Data field.

**7. Midamble Periodicity**

This item is configured when High Doppler State is On. Optional: 10| 20 , Default: 10.

Indicates how many Data symbols to insert a midamble period.

#### 4.17.2.3 HE-SIG-B Settings

**1. Sigb Compression State**

Optional: On | Off . Default: Off.

HE-SIG-B Compression State, On means full bandwidth transmission, Off means OFDMA transmission.

**2. Number of Sigb Symbol**

Displays the number of OFDM symbols for HE-SIG-B, not editable.

**3. Sigb MCS**

MCS value of HE-SIG-B, settable range: 0~5. Default value: 1.

**4. Sigb DCM State**

Optional: On | Off . Default: Off.

If or not HE-SIG-B is using DCM modulation, On means DCM modulation is used, and Sigb MCS can only be 0/1/3/4 at this time. Off means no DCM modulation.

**5. Number of Full BW MU-MIMO Users**

This item needs to be configured when Sigb Compression State is On, which indicates the number of users in full bandwidth transmission. The value cannot exceed the Number of Transmit Antennas. Default value: 1.

Note: MU-MIMO transmission will be performed when the number of users exceeds 1.

#### 4.17.2.4 RU Arrangement Settings

**1. Lower Center 26 Tone RU State**

Options: On | Off . Default: Off.

Bandwidth≥ Configured at 80 MHz, indicates the allocation of center-26-tone RUs in the lower 80 MHz band. On means allocated to users with information transmission; Off means not allocated, no information transmission.

**2. Upper Center 26 Tone RU State**

Options: On | Off . Default: Off.

Configured when the bandwidth is 160MHz or 80+80MHz, it indicates the allocation of center-26-tone RUs in the upper 80MHz band. on means allocated to the user, with message transmission; off means not allocated, no message transmission.

### 3. the x Band Allocation Index

The RUs on the 20 MHz subchannels are assigned serial numbers, one serial number value for each 20 MHz subchannel, and the serial number values map a specific RU delineation method.


Each RU allocation number is an 8-bit binary number.

#### 4.17.2.5 Spatial Mapping

**Spatial Mapping Matrix**


Spatial Mapping Spatial Mapping Matrix, the default is the unit array (Direct mode).

## 4.17.3 Band

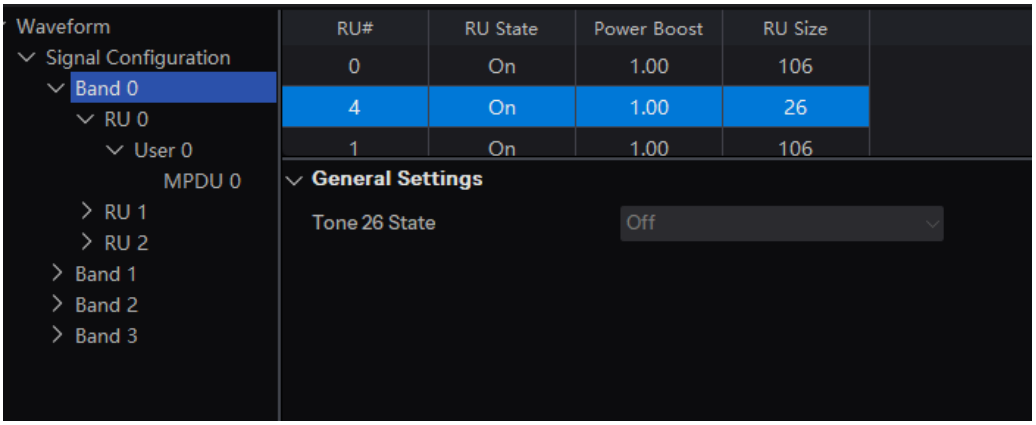


This page displays the setting parameter table of each RU under the corresponding Band.

## 4.17.4 RU

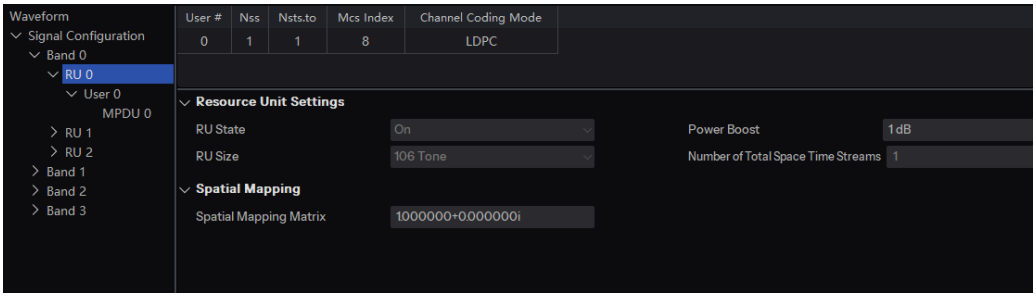


### 4.17.4.1 Resource Unit Settings

#### 1. RU State

Options: On | Off , Default: On.

On means the RU will be used to transmit information; Off means the RU is not used and does not carry information.

#### 2. RU Size

Displays the number of subcarriers of the RU and cannot be edited.

#### 3. Power Boost

Configure the power boost factor of this RU, setting range: 0.25 ~ 2 , default value: 1.

#### 4. Number of Total Space Time Streams


Display the number of Total Space Time Streams of this RU.

### 4.17.4.2 Spatial Mapping

#### Spatial Mapping Matrix

Spatial Mapping Spatial Mapping Matrix, the default is unit array (Direct mode).

## 4.17.5 User

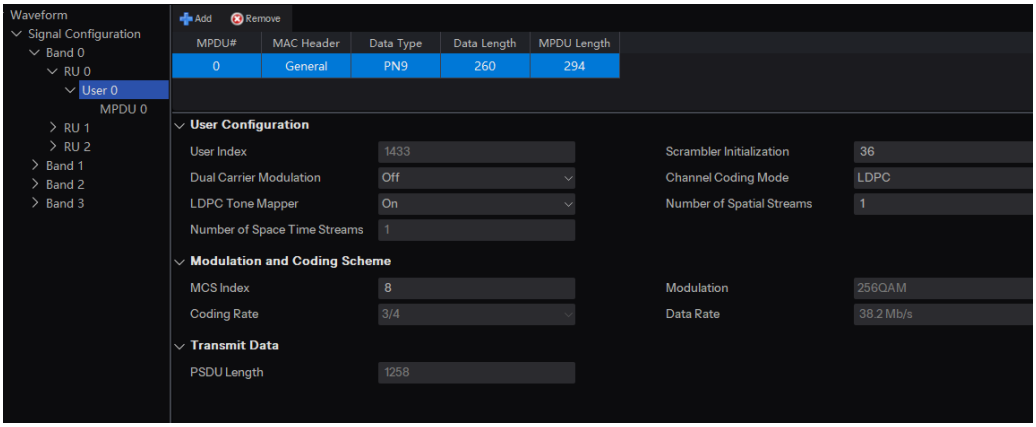


### 4.17.5.1 User Configuration

#### 1. STA ID

Set user ID number. Range: 0~2047. Default value: 0.

Note: When STA ID is 2046, it means the RU does not transmit data (i.e. empty RU).

#### 2. Scrambler Initialization

Set the initialization value of scrambler, range: 0~127.

#### 3. Dual Carrier Modulation

Optional: On | Off .

Default: Off .

Dual-carrier modulation switch, use DCM modulation when On.

#### 4. Channel Coding Mode

Set the coding mode, select BCC or LDPC, default value: LDPC.

#### 5. LDPC Tone Mapper

On | Off, default value: On.

LDPC Tone Mapper Option: On | Off , default value: On.

#### 6. Number of Spatial Streams

Configure the number of spatial streams for the current user. Setting range: Single User1~ 8 ; Multi-

User1~ 4 . Default value: 1.

#### 7. Number of Space Time Streams

Show the number of Space Time Streams of current user.

### 4.17.5.2 Modulation and Coding Scheme

#### 1. MCS Index

Configure the modulation and coding scheme index of current user data, range: 0~ 11 .

Default value: 8.

#### 2. Modulation

After configuring the MCS value, the corresponding modulation mode is displayed.

#### 3. Coding Rate

After configuring the MCS value, the corresponding coding rate is displayed.

#### 4. Data Rate


After configuring the MCS value, the corresponding data rate is displayed.

### 4.17.5.3 Transmit Data

#### PSDU Length

Displays the number of PSDU bytes.

## 4.17.6 MPDU

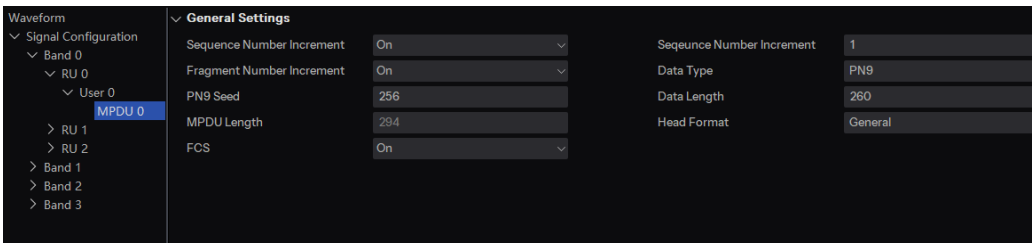

#### 4.17.6.1 General Settings

**1. Data Type**

Optional: All 0s/PN9/PN15/Custom .

Default is PN9.

Select the type of bit data generation.

**2. PN Seed**

If Data Type is PN Sequence, set the seed for generating PN sequence.

Default: All 1s.

**3. Data Length**

Set the data length of the load, unit: byte.

**4. MPDU Length**

Displays the number of bytes of MPDU.

**5. Head Format**

MAC frame structure filling, click on the pop-up window to display and fill in each field of the MAC frame.


**6. FCS**

Options: On | Off. Default: On.


Whether to add FCS check at the end, On means FCS check is needed, Off means no FCS check is added.

## 4.18 WLAN_802_11be

Click **WLAN** on the home page and select **WLAN_802_11be** (i.e. WiFi7) to enter the corresponding protocol waveform setting page.

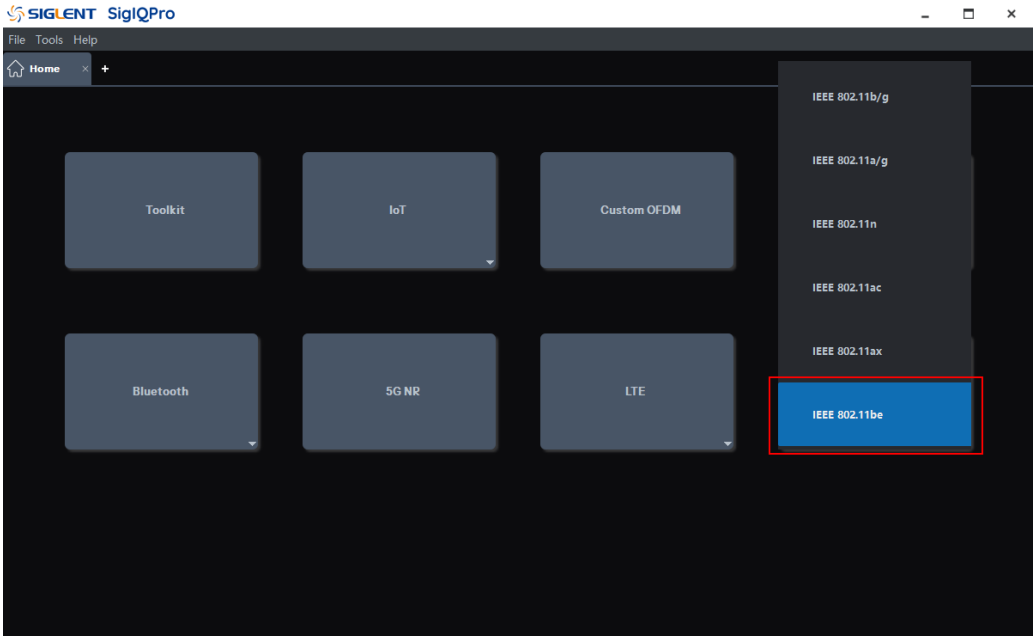


The Waveform Settings panel is used to set the parameters of the waveform, such as frame type, bandwidth, modulation method, etc.

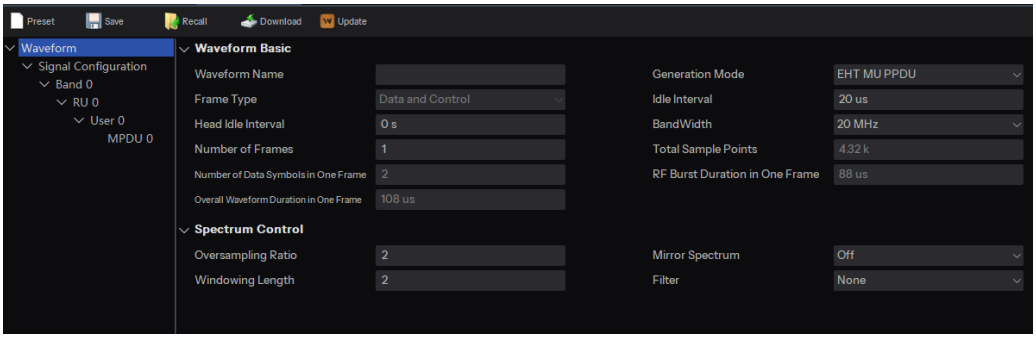


The parameter configuration of WLAN is hierarchical, roughly divided into Waveform, Signal Configuration, Band, RU, User, MPDU and other levels.

### 4.18.1 Waveform

The Waveform page is divided into two parts: Waveform Basic and Spectrum Control.

#### 4.18.1.1 Waveform Basic

This interface configures the basic parameters of the waveform.

**1. Waveform Name**

The name of the generated waveform. If user does not configure it, the default name will be used.

**2. Generation Mode**

Optional: EHT MU PPDU/EHT TB PPDU.

Default: EHT MU PPDU.

Generation Mode, indicates the PHY layer PPDU frame type.

**3. Frame Type**

Indicates the frame type of MAC layer, only Data and Control option is available at present.

**4. Idle Interval**

Settable range: 0~200ms.

Default value: 20us.

Sets the inter-frame idle interval.

**5. Head Idle Interval**

Settable range: 0~200ms .

Default value: 0us .

Set the idle time before frame.

**6. BandWidth**

Selectable range: 20/40/80/160/320 MHz .

Default value: 20MHz.

Select the signal bandwidth.

**7. Channelization**

Options: 320 MHz-1/320 MHz-2.

Default: 320 MHz-1.

When the bandwidth is 320 MHz, select the channelization mode.

**8. Phase Rotation Coefficients**

Options: -1;-1;-1/-1;-1;1/-1;1;-1/-1;1;1/1;-1;-1;-1;-1/1;-1;-1/1;-1;1/1;1;-1/1;1;-1/1;1;1;1; 1,

Default: 1;-1;-1.

When the bandwidth is 320 MHz, select the phase rotation coefficients of the last three 80 MHz blocks.

**9. Number of Frames**

Range: 1~2000. Default Value: 1 .

Set the number of frames contained in the baseband signal exported to a file or sent to the generator.

**10. Total Sample Points**

Displays the total sample points of baseband signal under current configuration.

**11. Number of Data Symbols in One Frame**

Displays the number of OFDM symbols in Data field in one frame.

**12. RF Burst Duration in One Frame**

Displays the duration of RF Burst in One Frame.

**13. Overall Waveform Duration in One Frame**

Displays the full waveform duration in One Frame (including idle interval).

#### 4.18.1.2 Spectrum Control

Parameters related to the spectrum control of this interface.

**1. Oversampling Ratio**

Settable range: 1 ~ 128 . Default value: 2 .

Set the oversampling rate of baseband signal.

This parameter will increase the number of actual FFT points when generating the baseband signal for OFDM modulation. If this parameter is too large, it will reduce the signal generation rate and may even cause the program to crash due to lack of memory.

**2. Mirror Spectrum**

Options: On | Off. Default: Off.

Toggles the state of mirroring the baseband signal spectrum.

Mirror Spectrum is realized by inverting the Q component of the baseband IQ data.

### 3. Windowing Length

Settable range: 0~32. Default value: 2 samples.

The conversion length (Ttr) of the windowing function, expressed as the number of samples.


### 4. Filter

Options: None/Gaussian/Root Raised Cosine/Ideal Lowpass/User Defined.

Default value: None, means no filter.

Select the baseband filter type.

## 4.18.2 Signal Configuration

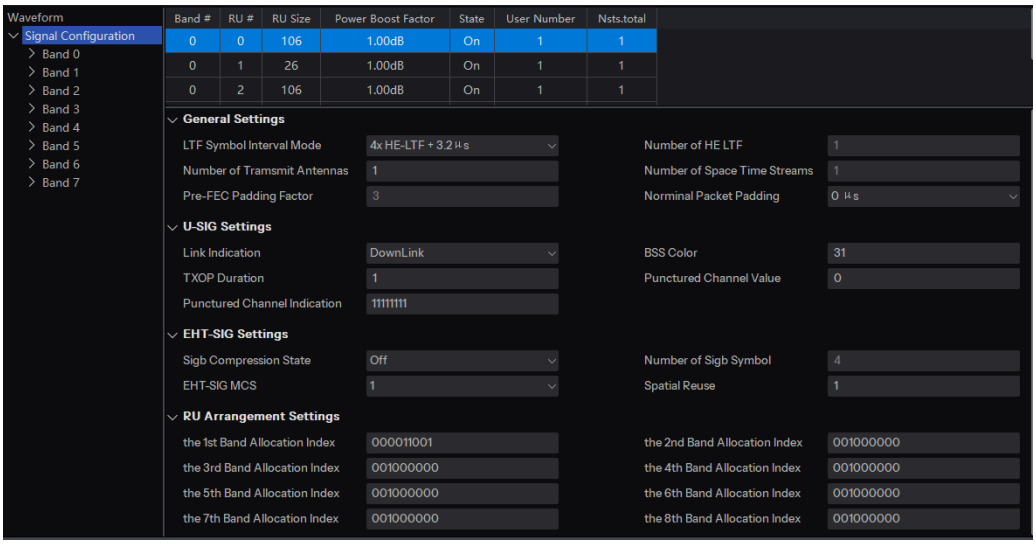


Signal Configuration page is divided into General Settings, U-SIG Settings, EHT-SIG Settings (EHT MU), RU Arrangement Settings.

### 4.18.2.1 General Settings

### 1. LTF Symbol Interval Mode

Optional: 2x EHT-LTF+0.8us|2x EHT-LTF+1.6us|4x EHT-LTF+0.8us|4x EHT-LTF+3.2us .

Default: 4x EHT-LTF+0.8us|4x EHT-LTF+3.2us.

Default value: 4x EHT-LTF+3.2us .

Select the joint parameter of EHT-LTF type and GI length to adjust the EHT-LTF symbol.

EHT-LTF type is categorized into 2x and 4x, and GI length is categorized into 0.8us, 1.6us and 3.2us.

**2. Number of EHT LTF**

Displays the number of OFDM symbols of EHT-LTF, which is determined by the number of transmitting antennas. Not editable

**3. Number of Transmit Antennas**

Set the number of transmitting antennas, range: 1~ 8 , default: 1.

**4. Number of Total Spatial Streams ($N_{ss,total}$)**

Display the total number of spatial streams, cannot exceed the number of transmit antennas. Cannot be edited.

**5. Pre-FEC Padding Factor**

Display the pre-FEC Padding Factor, range: 1~4, auto-determined, non-editable.

**6. Norminal Packet Padding**

Set the packet extension (PE) padding length in time. Can be 0us, 8us, 16us. Default value: 0us.

#### 4.18.2.2 U-SIG Settings

**1. Link Indication**

Indicates whether the packet is transmitted up (UpLink) or down (DownLink).

Default value: DownLink.

**2. TXOP Duration**

Fill TXOP length, range: 0~127. Default value: 1.

**3. BSS Color**

BSS Color Setting, range: 0~63. Default value: 31.

**4. Punctured Channel Value**

Set to "0" or "1", default is "0".

Set the value of the punched sub-channel, for example, "0" for punched and "1" for unpunched.

#### 5. Punctured Channel Indication

Punctured Channel Indication, a set of binary values, each bit represents the punched condition of a 20MHz sub-channel. The default is not punched.

### 4.18.2.3 EHT-SIG Settings

#### 1. Compression State

Options: On | Off . Default: On.

EHT-SIG Compression status, On for full bandwidth transmission, Off for OFDMA transmission.

#### 2. Number of EHT-SIG Symbol

Displays the number of OFDM symbols of EHT-SIG, not editable.

#### 3. EHT-SIG MCS

EHT-SIG MCS value, range: 0/1/3/15. Default value: 1.

#### 4. Number of Full BW MU-MIMO Users

This item needs to be configured when Compression State is On, and indicates the number of users in full bandwidth transmission. The value cannot exceed the Number of Transmit Antennas.

Default value: 1.

Note: MU-MIMO transmission will be performed when the number of users exceeds 1.

#### 5. Spatial Reuse

Settable range: 0~ 15 . Default value: 1.

Indicates the CCA value in relation to spatial reuse.


### 4.18.2.4 RU Arrangement Settings

#### the x Band Allocation Index

The RU allocation number on the 20 MHz subchannels has a number value for each 20 MHz subchannel, which maps to a specific M/RU division.


Each M/RU allocation number is a 9-bit binary number.

### 4.18.3 Band

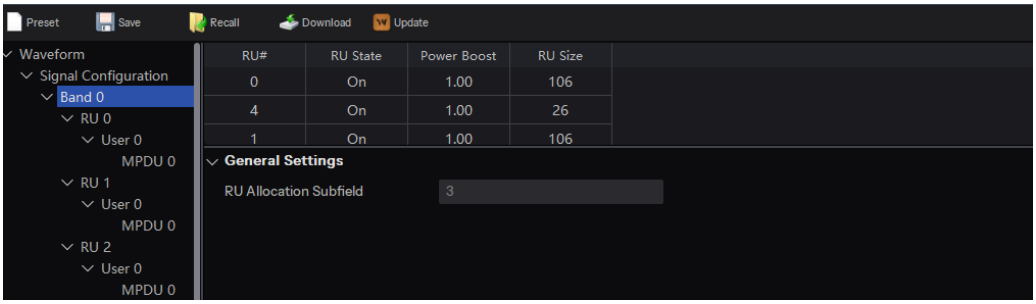


This page displays a table of setting parameters for each RU under the corresponding Band.

### 4.18.4 RU

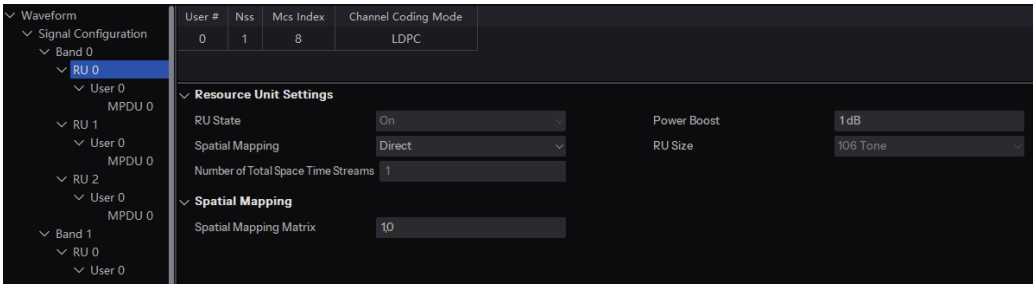


#### 4.18.4.1 Resource Unit Settings

**1. RU State**

Options: On | Off . Default: On.

On means the RU will be used to transmit information; Off means the RU is not used and does not carry information.

**2. RU Size**

Displays the number of subcarriers in the RU, not editable.

**3. Power Boost**

Configure the power boost factor of this RU, setting range: 0.25 ~ 2 . Default value: 1.

#### 4. Number of Total Spatial Streams


Display the number of total spatial streams of this RU.

### 4.18.4.2 Spatial Mapping

#### Spatial Mapping Matrix

Spatial Mapping Spatial Mapping Matrix, the default is unit array (Direct mode).

## 4.18.5 User

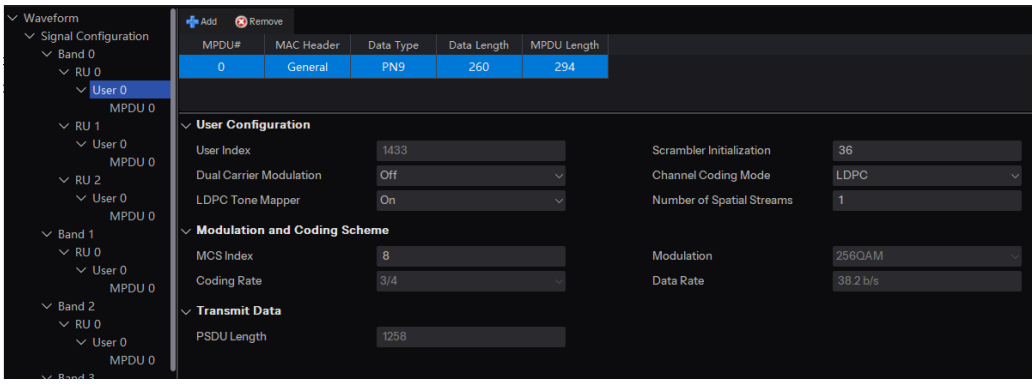


### 4.18.5.1 User Configuration

#### 1. STA ID

Set the user ID number, range: 0-2047, default: 0.

Note: When STA ID is 2046, it means the RU does not transmit data (i.e. empty RU).

#### 2. Scrambler Initialization

Set the initialization value of scrambler, range: 0~2047.

#### 3. Channel Coding Mode

Option: BCC/LDPC.

Set the coding mode, default is LDPC.

#### 4. LDPC Tone Mapper

Option: On | Off . Default: On.

LDPC Tone Mapper: On | Off . Default: On.

#### 5. Number of Spatial Streams

Configure the number of spatial streams for current user.

Setting range: 1~8 for single user, 1~4 for multi-user.

Default value: 1.

### 4.18.5.2 Modulation and Coding Scheme

#### 1. MCS Index

Configure the modulation and coding scheme index of current user data,

range: 0~ 13,15. Default: 8.

#### 2. Modulation

After configuring the MCS value, the corresponding modulation mode is displayed.

#### 3. Coding Rate

After configuring the MCS value, the corresponding coding rate is displayed.

#### 4. Data Rate


After configuring the MCS value, the corresponding data rate is displayed.

### 4.18.5.3 Transmit Data

#### PSDU Length

Displays the number of PSDU bytes.

## 4.18.6 MPDU

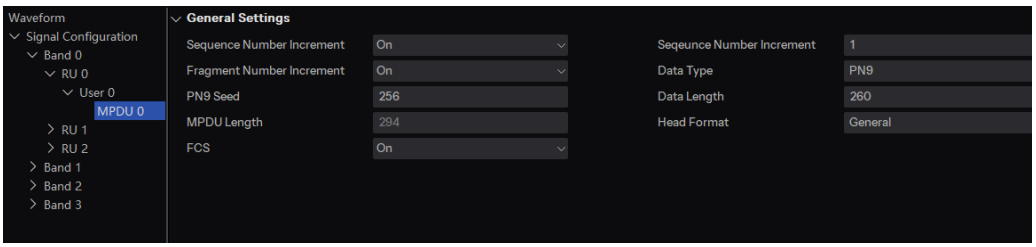


#### General Settings

### 1. Data Type

Optional: All 0s/PN9/PN15/Custom .

Default is PN9.

Select the type of bit data generation.

### 2. PN Seed

If Data Type is PN Sequence, set the seed for generating PN sequence. Default: All 1s.

### 3. Data Length

Set the data length of the load, unit: byte.

### 4. MPDU Length

Display the number of bytes of MPDU.

### 5. Head Format

Fill in the MAC frame structure, click it to pop-up window to display and fill in each field of the MAC frame.


### 6. FCS

Options: On | Off, Default: On.

Whether to add FCS checksum at the end, On means FCS checksum is required, Off means FCS checksum is not added.


## 4.19 GSM

Click **GSM** on the home page to enter the corresponding protocol waveform setting page.

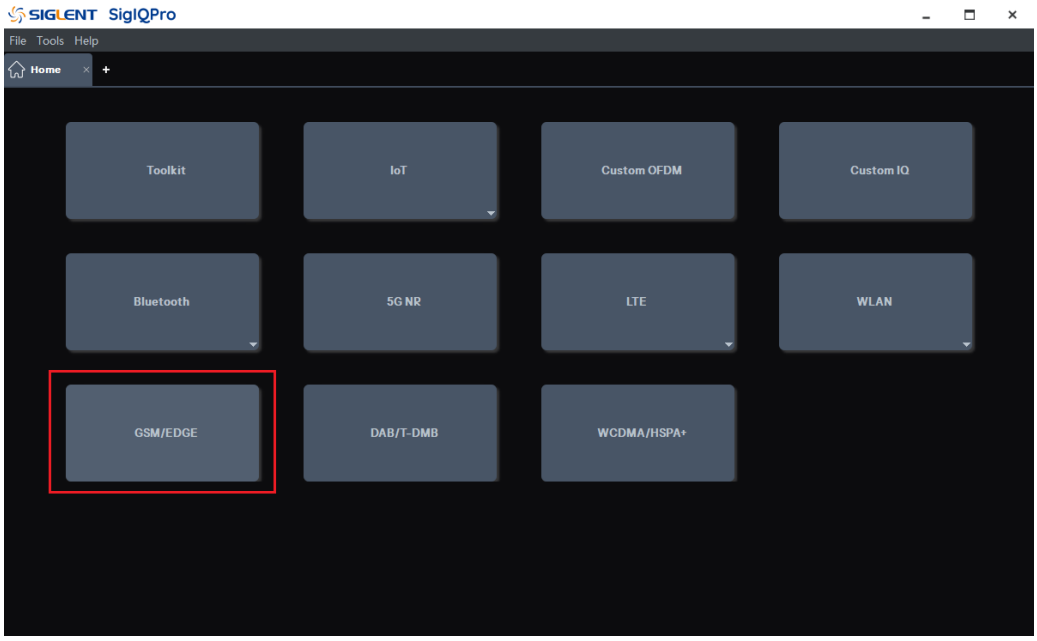


GSM parameter configuration uses a hierarchical structure, divided into three levels: Waveform, Carrier, and Timeslot.

### 4.19.1 Waveform

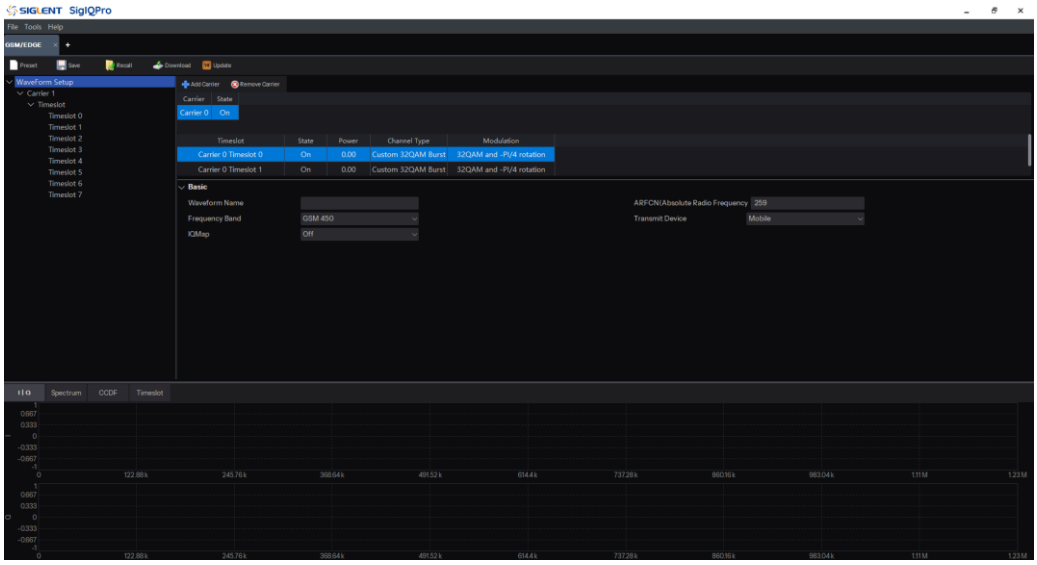

#### 4.19.1.1 Carrier List

**1. Add Carrier**

The number of carriers can be added: 1 ~ 25

Add a new carrier at the end of the list.

**2. Remove Carrier**

Remove the currently selected carrier;

The list shows all the channels, click one of them to select the channel and remove or copy it, and view and modify the parameters of different channels in the tree view on the left side of the window.

#### 4.19.1.2 Waveform Basic

This interface configures the basic parameters of the waveform section.

**1. Waveform Name**

This parameter defines the waveform name, when you download the waveform, the name you defined here will be displayed on the generator. Default is empty.

**2. ARFCN (Absolute Radio Frequency Channel Number)**

Depending on the Freqency Band, different ranges will be applied.:

Settable range： GSM 450: 259~293/ GSM 480: 306~340/ GSM 750: 438~511/ GSM 850: 128~251/P_GSM 900: 1~124/ E_GSM 900: 0~124&975~1023/ R_GSM 900: 0~124&955~1023/ DCS 1800: 512~885/ PCS 1900: 512~810,

default：259.

**Absolute Radio Frequency Channel Number**

**3. Freqency Band**

可选项：GSM 450/ GSM 480/ GSM 750/ GSM 850/ P_GSM 900/ E_GSM 900/ R_GSM 900/ DCS 1800/ PCS 1900.

default：GSM 450.

**Freqency Band of GSM**

**4. Transmit Device**

Options：Mobile/Base，

default：Mobile。

**Transmit Device Type**


### 5. IQMap

Options：Off/On

default：Off

Data IQ Inversion Enabled

## 4.19.2 Carrier

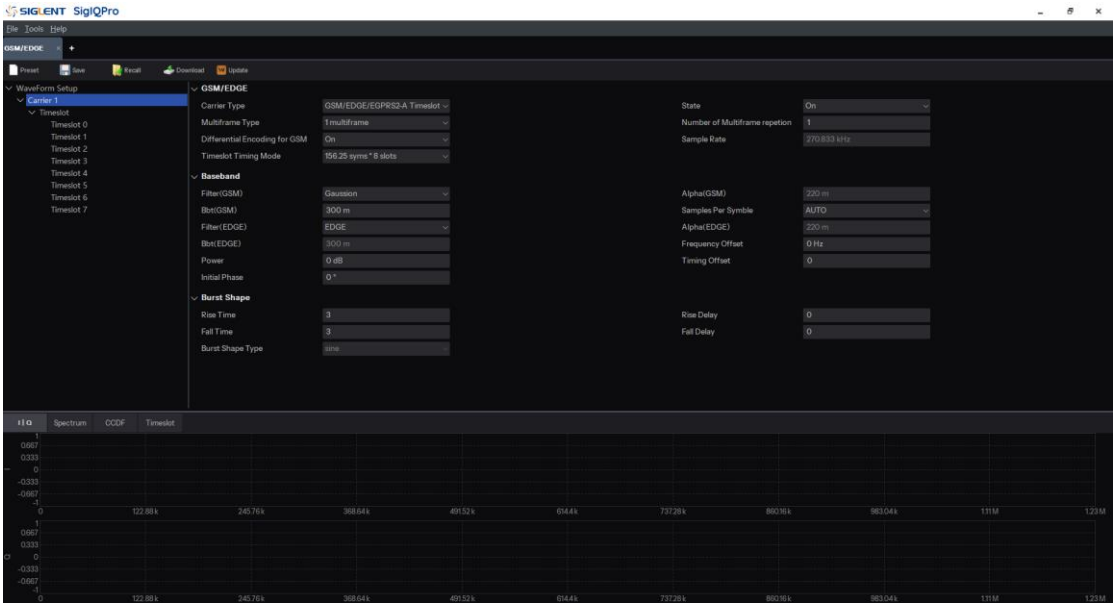


This interface configures the basic parameters of the Carrier section.

### 4.19.2.1 GSM/EDGE

### 1. Carrier Type

Options：GSM/ EDGE/ EGPRS2-A Timeslots, EGPRS2-B HSR Timeslots, Advanced GSM/ EDGE/ EGPRS2-A，Advanced EGPRS2-B，Advanced Half Rate GSM/EDGE/EGPRS2-A，Control Channels

Default：GSM/EDGE/EGPRS2-A Timeslots

**Carrier Type**

### 2. State

Options：On/Off

default：On

Carrier state

### 3. Multiframe Type

Options vary depending on the Carrier Type

Options：GSM/EDGE/EGPRS2-A Timeslots: 1 multiframe,

EGPRS2-B HSR Timeslots: 1 multiframe,

Advanced GSM/EDGE/EGPRS2-A: 13 multiframe with idle frame/13 multiframe with control frame/26 multiframe/52 multiframe,

Advanced EGPRS2-B: 52 multiframe,

Advanced Half Rate GSM/EDGE/EGPRS2-A: 13 multiframe with idle frame/13 multiframe with control frame/26 multiframe,

Control Channels: 51 multiframe /51 multiframe with dummy burst

default：1 multiframe

**Multiframe Type**

### 4. Number of Multiframe repetion

Settable range：1~512

default：1

**Number of Multiframe repetion**

### 5. Differential Encoding for GSM

Options：On/Off

default：On

Differential Encoding Enable - Not Available for Advanced EGPRS2-B

### 6. Sample Rate

Sampling Rate is a read-only option. It is determined by Carrier Type and Multiframe Type. Please refer to the Protocol for details.

### 7. Timeslot Timing Mode

Different options will be available under different Sample Rates.

Options：270.833kHz: 157 syms * 2 slots, 156 syms * 6 slots/ 156.25 syms * 8 slots,

325kHz: 188.4 syms * 2 slots, 187.2 syms * 6 slots/ 187.5 syms * 8 slots

default：156.25 syms * 8 slots

**Timeslot Timing Mode**

**8. Sub-Channel**

Options：0/1. Default：0

Only available for Advanced Half Rate GSM/EDGE/EGPRS2-A

#### 4.19.2.2 Baseband

**1. Filter(GSM)**

Options：Nyquist/Root Nyquist/Rectangle/Gaussion/EDGE

Default：Gaussion

GSM Filter Type. Availability is determined by Carrier Type. GSM Filter is available for:

Advanced GSM/EDGE/EGPRS2-A

Advanced Half Rate GSM/EDGE/EGPRS2-A

Control Channels/GSM/EDGE/EGPRS2-A Timeslots

**2. Alpha(GSM)**

Settable range：0~1

Default：0.2

GSM Filter Alpha value is only valid for Nyquist/Root Nyquist.

**3. Bbt(GSM)**

Settable range：0~1

Default：0.3

GSM Filter Bbt value is only valid for Gaussion.

**4. Filter(EDGE)**

Options：Nyquist/Root Nyquist/Rectangle/Gaussion/EDGE/EDGE Wide

Default：EDGE

EDGE Filter Type.

### 5. Alpha(EDGE)

Settable range：0~1

default：0.2

EDGE Filter Alpha value is only valid for Nyquist/Root Nyquist.

### 6. Bbt(EDGE)

Settable range：0~1

Default：0.3

EDGE Filter Bbt value is only valid for Gaussion.

### 7. Sample per Symbol

Options：AUTO/2/4/8/16/32/64/128/256/512

Default：AUTO

Symbol Oversampling Rate: AUTO equals 12 when Sample Rate is 270.833kHz; otherwise equals 10.

### 8. Frequency Offset

Settable range：-50MHz~50MHz , default：0

Carrier Center Frequency Offset

### 9. Power

Settable range：-70dB~0dB , default：0

Carrier Relative Power

### 10. Timing Offset

Settable range：0~32767 , default：0

Carrier **Timing Offset**

### 11. Initial Phase

Settable range：0°~359°

default：0°

Carrier **Initial Phase**

#### 4.19.2.3 Burst Shape

**1. Rise Time**

Settable range: $\frac{1}{\text{Sample Per Symbol}}$~50

default: 3

Rise Time, Step of $\frac{1}{\text{Sample Per Symbol}}$

**2. Rise Delay**

Settable range: -10 ~50

default: 3

Rise Delay, Step of $\frac{1}{\text{Sample Per Symbol}}$

**3. Fall Time**

Settable range: $\frac{1}{\text{Sample Per Symbol}}$~50

default: 3

Fall Time, Step of $\frac{1}{\text{Sample Per Symbol}}$

**4. Fall Delay**

Settable range: -10 ~50


default: 3

Fall Delay, Step of $\frac{1}{\text{Sample Per Symbol}}$

**5. Burst Shape Type**

Read-only option, Burst Shaping Type. Currently only sine type is provided.

## 4.19.3 Timeslot

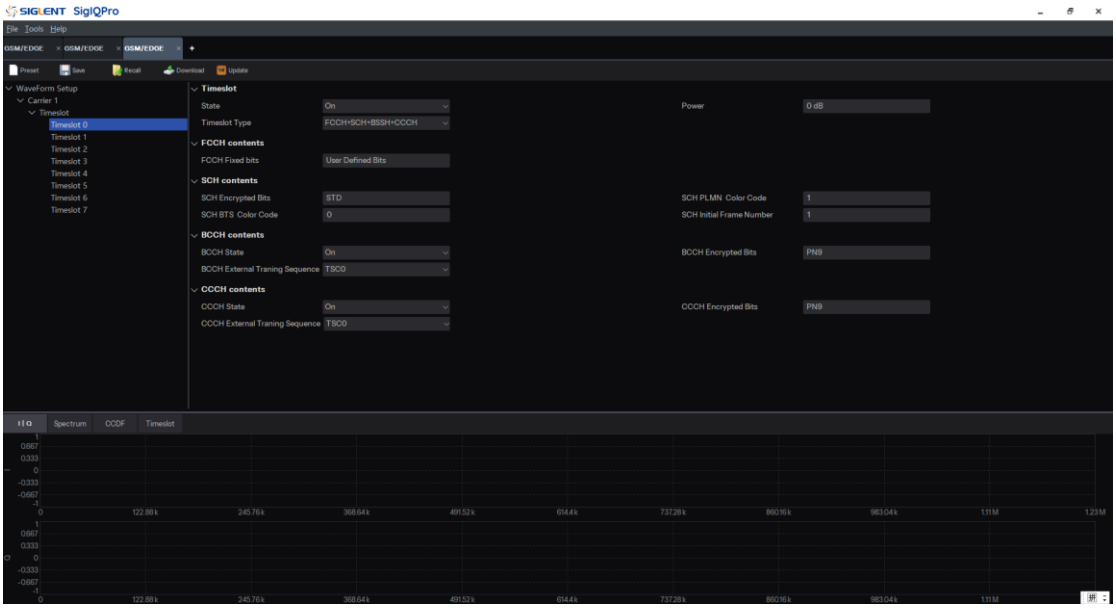


This interface configures the specific data parameters for the 8 time slots within the frame.

### 4.19.3.1 Timeslot

#### 1. State

Options：On/Off

default：On

Timeslot Enabled

#### 2. Power

Settable range：-70dB~0dB

default：0

Timeslot Power Relative to Carrier.

#### 3. Timeslot Type

Determined by Carrier Type and Multiframe Type

Options：

**GSM/EDGE/EGPRS2-A Timeslots：** Normal GMSK, Normal 8PSK, Frequency Correction Synchronization, Dummy Access, Custom GMSK, Custom 8PSK, Normal 16QAM, Normal 32QAM, Custom 16QAM, Custom 32QAM;

**EGPRS2-B HSR Timeslots:** HSR QPSK, HSR 16QAM, HSR 16QAM, HSR Custom QPSK, HSR Custom

16QAM, HSR Custom 32QAM;

**Advanced GSM/EDGE/EGPRS2-A & Multiframe 13:** Coded TCH/FS, Coded TCH/WFS 12.65k, Coded TCH/WFS 8.85k, Coded TCH/WFS 6.60k, Coded TCH/AFS 12.2k, Coded TCH/AFS 10.2k, Coded TCH/AFS 7.95k, Coded TCH/AFS 7.4k, Coded TCH/AFS 6.7k, Coded TCH/AFS 5.9k, Coded TCH/AFS 5.15k, Coded TCH/AFS 4.75k, Coded FACCH/F, Normal GMSK, Normal 8PSK, Normal 16QAM, Normal 32QAM;

**Advanced GSM/EDGE/EGPRS2-A & Multiframe 26:** Coded TCH/F 9.6k, Coded TCH/F 4.8k, Coded TCH/FS, Coded TCH/WFS 12.65k, Coded TCH/WFS 8.85k, Coded TCH/WFS 6.60k, Coded TCH/AFS 12.2k, Coded TCH/AFS 10.2k, Coded TCH/AFS 7.95k, Coded TCH/AFS 7.4k, Coded TCH/AFS 6.7k, Coded TCH/AFS 5.9k, Coded TCH/AFS 5.15k, Coded TCH/AFS 4.75k, Coded FACCH/F, Coded E-TCH/F 43.2;

**Advanced GSM/EDGE/EGPRS2-A & Multiframe 52:** Coded CS-1, Coded CS-4, Coded Downlink MCS-1, Coded Uplink MCS-1, Coded Downlink MCS-4, Coded Downlink MCS-5, Coded Uplink MCS-5, Coded Downlink MCS-6, Coded Uplink MCS-6, Coded Downlink MCS-7, Coded Uplink MCS-7, Coded Downlink MCS-8, Coded Uplink MCS-8, Coded Downlink MCS-9, Coded Uplink MCS-9, Coded UAS-11;

**Advanced EGPRS2-B:** Coded UBS-6, Coded UBS-8, Coded UBS-11, HSR QPSK, HSR 16QAM, HSR 16QAM;

**Advanced Half Rate GSM/EDGE/EGPRS2-A:** Normal GMSK (Half Rate), Normal 8PSK (Half Rate), Coded TCH/HS;

**Control Channels:** FCCH+SCH+BSSH+CCCH, FCCH+SCH+BSSH+CCCH+SDCCH+SACCH, Frequency Correction, Synchronization, Dummy, Access, Custom GMSK

Default：Custom 32QAM

**Timeslot Type**

**4. Data Offset**

Settable range：0~32767

default：0

**Data Offset**

#### 4.19.3.2 Data

**1. Encrypted Bits**

Options：PN9/PN15/User Defined Bits

Default：PN9

Encrypted Bits. Inapplicable for Timeslot Type Dummy

### 2. Stealing Flags

Options：0/1

Default：0

Stealing Flags. Only available when Timeslot Type is GMSK or Coded CS-1

### 3. Training Sequence Bits

Options：TSC0~TSC7

Default：Numbering matches Timeslot number

Training Sequence Bits，Inapplicable for **Timeslot Type** Custom.

### 4. Data Placement

Options：Independent/ Consecutive Data With Subjective Ordering/ Consecutive Data Without Subjective Ordering

Default：Independent

Data Placement，Available only when Timeslot Type is TCH/WFS or TCH/AFS

### 5. In-band Data

Options：00/01/10/11

Default：00

In-band Data，Available only when Timeslot Type is TCH/WFS or TCH/AFS

### 6. Header USF

Settable range：0~7 , default：1

Data Header UFS value, only available when Timeslot Type is Downlink

### 7. Header Encrypted Bits

Options：PN9/PN15/User Defined Bits

Default：PN9

Header Encrypted Bits，only available when Timeslot Type is Downlink/Uplink/UAS/UBS

**8. E and FBI/TI**

Options：On/ Off

default：Off

E and FBI/TI, only available when Timeslot Type is Downlink/Uplink/UAS/UBS

#### 4.19.3.3 Control Frame

Unavailable when Multiframe Type is 1 multiframe, or Timeslot Type is Coded TCH/FS

1. Data for Control Frame

Options：PN9/PN15/User Defined Bits

Default：PN9

Data for Control Frame

#### 4.19.3.4 SACCH Contents

Available for Timeslot Type of Coded TCH/FS or Coded TCH/HS (when Multiframe is not 52-frame), or FCCH+SCH+BSSH+CCCH+SDCCH+SACCH

**1. SACCH State**

Options：On/Off

Default：On

SACCH State

**2. SACCH Encrypted Bits**

Options：STD/PN9/PN15/User Defined Bits

Default：STD

SACCH Encrypted Bits

**3. SACCH Power Control Level**

Settable range：0~31

Default：15

SACCH Power Control Level

**4. SACCH Timing Advance**

Settable range：0~255

Default：0

SACCH Timing Advance

**5. SACCH Layer 2 frame**

Options：PN9/PN15/User Defined Bits

Default：PN9

SACCH Layer 2 frame data

**6. SACCH External Training Sequence**

Options：TSC0~TSC7

default：Numbering matches Timeslot number

SACCH External Training Sequence Bits

#### 4.19.3.5 FCCH Contents

Available when Timeslot Type is FCCH+SCH+BSSH+CCCH or FCCH+SCH+BSSH+CCCH+SDCCH+SACCH

**1. FCCH Fixed Bits**

Options：PN9/PN15/User Defined Bits

Default：User Defined Bits

FCCH Fixed Bits

#### 4.19.3.6 SCH Contents

Synchronization is available when Timeslot Type is FCCH+SCH+BSSH+CCCH or FCCH+SCH+BSSH+CCCH+SDCCH+SACCH

**1. SCH Encrypted Bits**

Options：STD/PN9/PN15/User Defined Bits

Default：STD

SCH Encrypted Bits

**2. SCH PLMN Color Code**

Settable range：0~7

Default：1

SCH PLMN Color Code

**3. SCH BTS Color Code**

Settable range：0~7

Default：0

SCH BTS Color Code

**4. SCH Initial Frame Number**

Settable range：0~2715647

Default：1

SCH Initial Frame Number

#### 4.19.3.7 BCCH Contents

Available when Timeslot Type is FCCH+SCH+BSSH+CCCH or FCCH+SCH+BSSH+CCCH+SDCCH+SACCH

**1. BCCH State**

Options：On/Off

default：On

BCCH state

**2. BCCH Encrypted Bits**

Options：STD/PN9/PN15/User Defined Bits

default：PN9

BCCH Encrypted Bits

**3. BCCH External Training Sequence**

Options：TSC0~TSC7

default：Numbering matches Timeslot number

BCCH External Training Sequence Bits

#### 4.19.3.8 CCCH Contents

Available when Timeslot Type is FCCH+SCH+BSSH+CCCH or

FCCH+SCH+BSSH+CCCH+SDCCH+SACCH

**1. CCCH State**

Options：On/Off

default：On

CCCH State

**2. CCCH Encrypted Bits**

Options：PN9/PN15/User Defined Bits

default：PN9

SACCH Encrypted Bits

**3. CCCH External Training Sequence**

Options：TSC0~TSC7

default：Numbering matches Timeslot number

CCCH External Training Sequence Bits

## 4.20 WCDMA/HSPA+

### 4.20.1 Waveform Setup

Click the Waveform Setup node in the tree view on the left side of the window to enter the waveform setup.

#### 4.20.1.1 Carrier List

**1. Add Carrier**

Add a new carrier at the end of the list, options: NR Download | NR Uplink | PRACH.

**2. Remove Carrier**

Remove the currently selected carrier;

**3. Copy Carrier**

Adds a copy of the selected channel to the end of the list.

The list shows all the channels, click one of them to select the channel and remove or copy it, and view and modify the parameters of different channels in the tree view on the left side of the window.

#### 4.20.1.2 Basic

**1. Waveform Name**

This parameter defines the waveform name, when you download the waveform, the name you defined here will be displayed on the generator. Default is empty.

**2. Sample Rate**

Show the maximum sample rate of all carriers.

**3. Number of Frame**

Default: 1.

Set the number of frames contained in the signal exported to file or sent down to the generator.

### 4.20.2 Carrier

#### 4.20.2.1 General Setting

**1. State**

Options:On|Off，Default: On.

Shows whether the carrier is on or off.

**2. Alpha（RRC)**

Set the roll-off factor for the root raised cosine filter.

Default: 0.22

**3. Radio Format**

Options:

When the carrier type is DL, the options are： Basic W-CDMA/HSPA+ DL Rel|Adv W-CDMA/HSPA+ DL Rel;

When the carrier type is UL, the options are： Basic W-CDMA/HSPA+ UL Rel|Adv W-CDMA/HSPA+ UL Rel,

Default:

When the carrier type is DL, the default is： Basic W-CDMA/HSPA+ DL Rel;

When the carrier type is UL, the default is： Basic W-CDMA/HSPA+ UL Rel.

### 4.20.3 Channel Setup

#### 4.20.3.1 Configuration

Show test mode preset.

Options:

When the carrier type is DL、**Radio Format is** Basic W-CDMA/HSPA+ DL Rel，options are:

P-CCPCH + SCH|

P-CCPCH + SCH + 1DPCH|

P-CCPCH + SCH + 3DPCH|

TEST MODE 1 + 4DPCH|

TEST MODE 1 + 8DPCH|

TEST MODE 1 + 16DPCH|

TEST MODE 1 + 32DPCH|

TEST MODE 1 + 64DPCH|

TEST MODE 2|

TEST MODE 3 + 4DPCH|

TEST MODE 3 + 8DPCH|

TEST MODE 3 + 16DPCH|

TEST MODE 3 + 32DPCH|

TEST MODE 4|

TEST MODE 5 + 8HS-PDSCH + 30DPCH|

TEST MODE 5 + 4HS-PDSCH + 14DPCH|

TEST MODE 5 + 2HS-PDSCH + 6DPCH|

TEST MODE 5 + 4HS-PDSCH + 4DPCH|

TEST MODE 6 + 4HS-PDSCH + 4DPCH|

TEST MODE 6 + 8HS-PDSCH + 30DPCH|

DPCH,

When the carrier type is DL 、 **Radio Format is**Adv W-CDMA/HSPA+ DL Rel , options are:RMC12.2k|RMC64k|RMC144k|RMC384k ,

When the carrier type is UL、**Radio Format is** Basic W-CDMA/HSPA+ UL Rel , options are:

DPCCH + DPDCH|

PRACH|

DPCCH + DPDCH960ksps|

DPCCH + DPDCH60ksps|

R7_TABLE_C_10_1_4_SUBTEST1|

R7_TABLE_C_10_1_4_SUBTEST2|

R7_TABLE_C_10_1_4_SUBTEST3|

R7_TABLE_C_10_1_4_SUBTEST4|

R8_TABLE_C_10_1_4_SUBTEST1|

R8_TABLE_C_10_1_4_SUBTEST2|

R8_TABLE_C_10_1_4_SUBTEST3|

R8_TABLE_C_10_1_4_SUBTEST4|

R8_TABLE_C_11_1_3_SUBTEST1|

R8_TABLE_C_11_1_3_SUBTEST2|

R8_TABLE_C_11_1_3_SUBTEST3|

R8_TABLE_C_11_1_3_SUBTEST4|

R8_TABLE_C_11_1_3_SUBTEST5,

When the carrier type is UL、**Radio Format is**Adv W-CDMA/HSPA+ UL Rel , options are:

RMC12.2k|

RMC64k |

RMC144k |

RMC384k|

RMC768k|

RMC for HS-DPCCH|

FRC1(E-DPDCH Testing)|

FRC2|

FRC3|

FRC4(E-DPDCH Testing)|

FRC5|

FRC6|

FRC7|

FRC8(Non E-DPCCH boosting),

Default:

When the carrier type is DL, Radio Format is Basic W-CDMA/HSPA+ DL Rel，default is P-CCPCH + SCH;

When the carrier type is DL, Radio Format is Adv W-CDMA/HSPA+ DL Rel，default is RMC12.2k;

When the carrier type is UL, Radio Format is Basic W-CDMA/HSPA+ UL Rel，default is DPCCH + DPDCH;

When the carrier type is UL, Radio Format is Adv W-CDMA/HSPA+ UL Rel，default is RMC12.2k.

#### 4.20.3.2 Channel List

**1. Add Channel**

Add a new channel at the end of the list,

When the carrier type is DL，options are：CPICH, DPCH, P-CCPCH, S-CCPCH, PICH, HS-PDSCH, HS-SCCH, OCNS, PSCH, SSCH.

When the carrier type is DL，options are： DPCCH, DPDCH, E-DPCCH, E-DPDCH, HS-DPCCH, PRACH.

**2. Remove Channel**

Remove the currently selected channel.

#### 4.20.3.3 General Setting

**1. Channel Number**

Non-configurable，show channel number.

**2. Name**

Non-configurable，show channel Name.

**3. State**

Options: On|Off，Default: On.

Set the channel to be on or off.

#### 4. Power

Setting range:: -60dB~0dB，Default: 0dB.

Set channel power.

#### 5. Rate

Non-configurable，show channel rate.

#### 6. Axis

Set the channel to I/Q (uplink only).

Options: I|Q，Default: I .

#### 7. Spreading Code

Set the channel's spreading code.

When rate is 15ksps，Setting range:: 0~255，

When rate is 30ksps，Setting range:: 0~127，

When rate is 60ksps，Setting range:: 0~63，

When rate is 120ksps，Setting range:: 0~31，

When rate is 240ksps，Setting range:: 0~15，

When rate is 480ksps，Setting range:: 0~7，

When rate is 960ksps，Setting range:: 0~3，

Default: 0.

#### 8. Scrambling Code

Set channel Scrambling Code.

Setting range:: 0~511，Default: 0.

#### 9. Scrambling Type

Set channel Scrambling type.

Options: STD|LEFT|RIGHT，Default: STD.

#### 10. Scrambling Offset

Set channel Scrambling offset.

Setting range:: 0~15，Default: 0.

### 11. Slot Format

Set the channel slot format, this parameter can affect the channel rate.

DPCH, OCNS options:

0|0A|0B|1|1B|2|2A|2B|3|3A|3B|4|4A|4B|5|5A|5B|6|6A|6B|7|7A|7B|8|8A|8B|9|9A|9B|10|10A|10B|11|11A|11B|12|12A|12B|13|13A|13B|14|14A|14B|15|15A|15B|16|16A;

Default: 0.

S-CCPCH options：0|1|2|3|4|5|6|7|8|9|10|11|12|13|14|15|16|17;

Default: 0.

### 12. Timing Offset

Set channel timing offset.

Setting range:: 0~149，Default: 0.

### 13. TPC Pattern

Set Transport Format Combination Pattern.

Options: ALL UP|ALL DOWN，Default: ALL UP.

### 14. TFCI

Set Transport Format Combination Indicator.

Setting range：0~1023，Default: 0.

### 15. Data

Set channel data source.

P-CCPCH options：PN9|PN15|BCH，default：PN9;

DPCH options：PN9|PN15|DCH，default：PN9;

HS-PDSCH options：PN9|PN15，default：PN9;

S-CCPCH options：PN9|PN15，default：PN9;

OCNS options：PN9|PN15，default：PN9;

HS-SCCH options：PN9|PN15，default：PN9;

PICH options：PN9|Pagging Indecator，default：PN9;

DPDCH options：PN9|PN15|User Defined Bits，default：PN9;

E-DPDCH options：PN9|PN15|EDCH| User Defined Bits，default：PN9.

### 16. Transport Position

Set DPCHTransport Position.

Options: Position Fixed|Position Flexible，Default: Position Fixed.

### 17. DCH Number

Set DCH channel number.

Setting range:：0~8，Default: 2

### 18. TPC

Set Transmit Power Control.

### 19. Modulation

Set Modulation type.

Options: QPSK|16QAM|64QAM，Default: QPSK.

### 20. TTI

Set Physical Layer Transmission Time Interval.

Options: 2ms|10ms，Default: 2ms.

### 21. E-TFCI Table Selection

Set E-TFCI table index selection.

Setting range:：0~1，Default: 0

### 22. E-TFC Index

Set E-TFC index.

Setting range:：0~127，Default: 0

### 23. delta_ACK_NACK_CQI

HARQ Acknowledgement Power Offset、HARQ Negative Acknowledgement Power Offset、Channel

Quality Indicator Power Offset parameter.

Setting range:: 0~12，Default: 0.

#### 24. Happy Bit

Set Happy Bit, Happy Bit is a single-bit indicator sent by the UE on the E-DPCCH in HSUPA to inform the NodeB whether the current serving grant is sufficient ("Happy") or insufficient ("Unhappy") for its pending data and power constraints.

Options: Happy|Not Happy，Default: Happy.

#### 25. FBI

Set Feedback Information data source of DPCCH channel.

Options: PN9|PN15|User Defined Bits，Default: PN9.

### 4.20.3.4 Decicated Transport Channel

#### 1. Data

Set data source of DCH.

Options: PN9|PN15|User Defined Bits，Default: PN9.

#### 2. TTI

Set Transmission Time Interval.

Options: 10ms|20ms|40ms|80ms，Default: 10ms.

#### 3. Block Size

Set Transport Block Size.

Setting range：0~8000，Default: 244.

#### 4. CRC

Set CRC Length.

Options: 0|8|12|16|24，Default: 16.

#### 5. Coding Type

Set Coding Type of channel.

Options: 1/2 rate convolutional encoder|1/3 rate convolutional encoder|turbo coder|no coding.

Default: 1/3 rate convolutional encoder.

### 6. Rate Match Attribute

Rate Matching Attribute configured by RRC for each transport channel.


Setting range:: 1~256, Default: 256

## 4.21 DAB/T-DMB

On the homepage, click DAB/T-DMB to enter the corresponding protocol waveform settings page.




The waveform settings panel is used to set waveform parameters, such as format type, spectrum control, waveform signal compensation, etc.

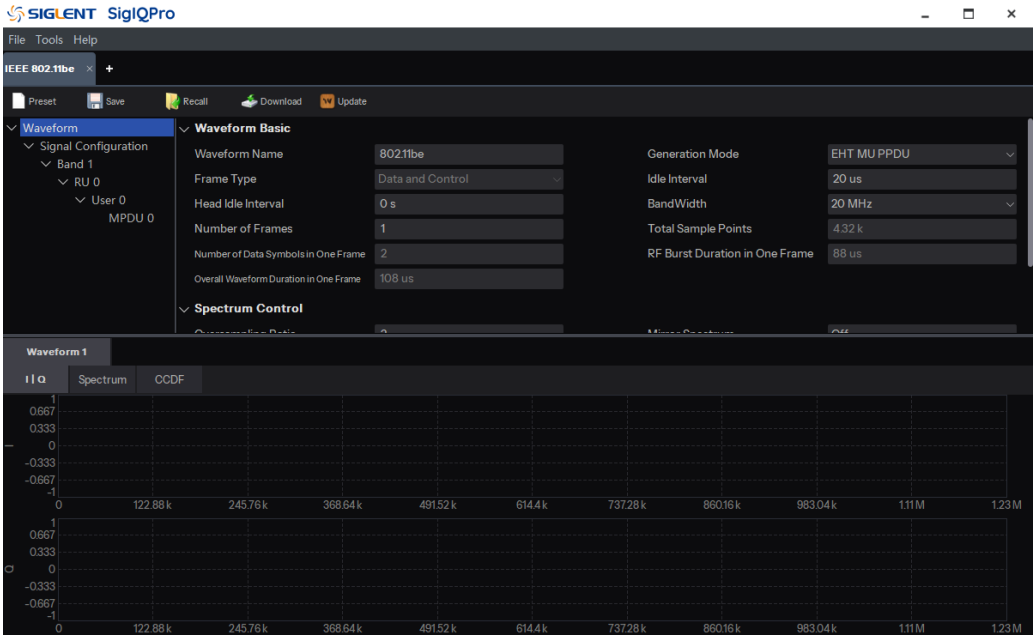

DAB's parameter configuration is hierarchical and progressive, roughly divided into Waveform, Carrier Configuration, Ensemble, service, service component, and other levels.

### 4.21.1 Waveform

The Waveform page is divided into three parts: Waveform Basic , sectrum Control and Impairments in Waveform.

#### 4.21.1.1 Waveform Basic

**1. Waveform Name**

150 characters for Windows based instruments. The name can include spaces and the following special characters: _ $ & # + - [ ]. The default name is DAB.

The name you define here is displayed on the signal generator when you download the waveform.

**2. Comment**

Enter an alpha-numeric comment up to 32 characters in length. The comment resides in the file header and can include spaces and special characters.

**3. Format**

Set the format type. Optional: DAB/T-DMB

**4. Waveform Length**

View the generated waveform length (number of points). You cannot edit this cell.

#### 4.21.1.2 Spectrum Control

**1. Oversampling Ratio**

Set the oversampling ratio of the baseband signal.

This parameter configuration will increase the actual number of FFT points when generating OFDM modulated baseband signals. If this parameter is too large, it will reduce the signal generation rate and may even cause the program to crash due to insufficient memory.

**2. Mirror Spectrum**

Use the drop-down menu to swap I and Q waveforms. This parameter is used during the correction operation to account for low side up conversion between the signal generator and the spectrum analyzer.

Choice: On | Off

Default: Off

#### 4.21.1.3 Impairments in Waveform

**1. Quadrature Angle Adjustment**

Set the baseband quadrature phase angle in degrees

Range: -90.000 to 90.000 degrees

Default: 0.000 deg


**2. I/Q Gain Balance**

Set the baseband quadrature gain balance, in dB.

Range: -10.000 to 10.000 dB

Default: 0.000 dB

### 4.21.2 Carrier

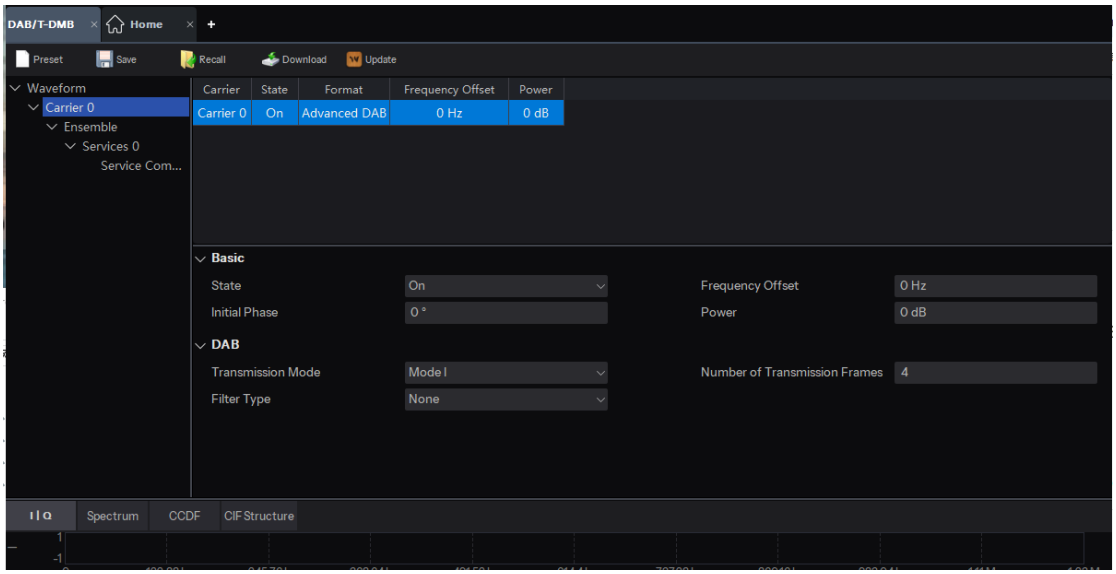


The Carrier Configuration page is divided into several sections, including Basic and DAB, as shown in the image.

#### 4.21.2.1 Basic

**1. State**

Use the drop-down menu to control the operating state of the carrier.

**2. Frequency Offset**

Get or set the frequency offset for the carrier relative to the signal generator's frequency setting.

**3. Initial Phase**

Set the initial phase of the carrier.

Range: 0.00 to 359.00 deg

Default: 0.00 deg

**4. Power**

Set the carrier's power relative to the signal generator's amplitude setting

Range: -50.00 to 0.00 dB

Default: 0.00 Db

#### 4.21.2.2 DAB

**1. Transmission Mode**

Set the transmission modes (i.e. I, II, III and IV), which are defined to allow the system to be used for different network configurations and a range of operating frequencies. Four transmission modes have 4 different sub-carrier numbers: 1536, 768, 384 and 192.

Choice: Mode I | Mode II | Mode III | Mode IV

Default: Mode I

**2. Number of Transmission Frames**

Set the number of transmission frames. Please be aware of that, by default when the Data Source type is 'Demo', the Number of Transmission Frames will automatically be set to 60, which could later be modified by users; however, when you select 'DAB Plus' in Audio Service Component Type of the certain service component, and change the Number of Transmission Frames to a value can not be divided exactly by 5, there might be waveform discontinuity problem.

Range: 1 to 1000

Default: 4


### 3. Filter Type

Set the filter type.

Choice: None | Ideal Lowpass | User Defined

Default: None

## 4.21.3 Ensemble

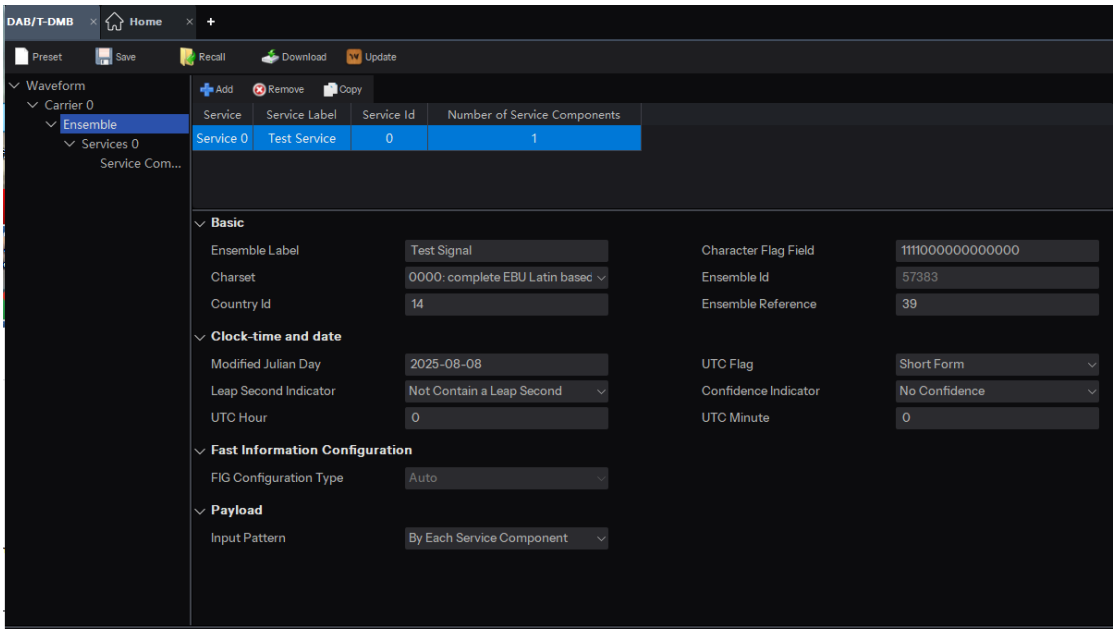


### 4.21.3.1 Basic

### 1. Ensemble Label

Set the ensemble label, which is applied for identifying the ensemble in a textual format which should be less than 16 characters (including blanks).

Default: Test Signal

### 2. Character Flag Field

Set the Character Flag Field. This 16-bit flag field shall indicate which of the characters of the character field are to be displayed in an abbreviated form of the label, as follows:

b(i) (i = 0, … ,15);

0 : not to be displayed in abbreviated label;

1 : to be displayed in abbreviated label.

Note: Not more than 8 of the b(i) may be set to "1".

If the character field contains less than 16 characters, the unused bits in the character flag field (having no corresponding character) shall be set to zero.

Default: 1111000000000000

### 3. Charset

Set the Character Set. This 4-bit field shall identify a character set to qualify the character information.

Choice: 0000: complete EBU Latin based repertoire | 1111: ISO 10646-1 using UTF-8 transformation format

Default: 0000: complete EBU Latin based repertoire

### 4. Ensemble Id

Get the ensemble ID, which is a unique 16-bit code, allocated to an ensemble and intended to provide its unambiguous world-wide identification.

Range: 0 to 65535

Default: 57383

Note: This parameter is calculated as follows: Country ID *4096 plus Ensemble Reference. Besides, Ensemble Id can't be modified directly.

### 5. Country Id

Set the Country ID, which is a 4-bit field, defined in the standard of TS 101 756, tables 3 to 7.

Range: 0 to 15(Practically zero is not used)

Default: 14.

### 6. Ensemble Reference

Set the ensemble reference, which is a 12-bit field, indicating the number of the Ensemble allocated for use within a national area.

Range: 0 to 4095 .

Default: 39.

#### 4.21.3.2 Clock-time and data

**1. Modified Julian Day**

The date is expressed in terms of Modified Julian Day and coded as a 17-bit binary number in the range 0- 99999.

Default: August 08, 2008.

**2. UTC Flag**

Set the Coordinated Universal Time (UTC) Flag.

Choice: Short Form | Long Form

Default: Short Form.

**3. Leap Second Indicator**

Set the leap second indicator. This 1-bit flag shall be set to "1" throughout a UTC day containing a leap second.

Choice: Not Contain a Leap Second | Contain a Leap Second.

Default: Not Contain a Leap Second.

**4. Confidence Indicator**

Set the confidence indicator. this 1-bit field shall be set to "1" when the timing information is within an agreed tolerance (for example, ±0,2 ms at first ground fall).

Choice: No Confidence | Confidence.

Default: No Confidence.

**5. UTC Hour**

Set the Coordinated Universal Time (UTC) hour.

Range: 0 to 23.

Default: 0.

**6. UTC Minute**

Set the Coordinated Universal Time (UTC) minute.

Range: 0 to 59.

Default: 0.

#### 7. UTC Second

Set the Coordinated Universal Time (UTC) second

Range: 0 to 59.

Default: 0.

#### 8. UTC Millisecond

Set the Coordinated Universal Time (UTC) millisecond.

Range: 0 to 999.

Default: 0.

### 4.21.3.3 Fast information Configuration

#### 1. FIG Configuration Type

Set the FIG configuration type.

Choice: Auto | Manual.

Default: Auto.

Note: The existing FIG configuration will be cleared while changing from Manual to Auto.

### 4.21.3.4 Payload

#### 1. Input Pattern

use the drop-down menu to select which type to be used as the data source.

If " ETI (G.703) " is selected, "ETI File Name" is required.

Choice: By Each Service Component | ETI (G.703) | ETI Demo (G.703)

Default: By Each Service Component

#### 2. ETI Demo File Name

Use the drop-down menu to select which type to be used as the ETI demo file.

Note: This parameter is valid only when Input Pattern is ETI Demo (G.703).

Choice: DAB_TONE | DABPlus_TONE | DAB_SlideShow


Default: DAB_TONE

#### 3. ETI File Name

Set the file name as data source of the ensemble. In GUI, the value is set by an Open File dialog.

Note: This parameter is valid only when Input Pattern is ETI (G.703).

### 4.21.4 Services

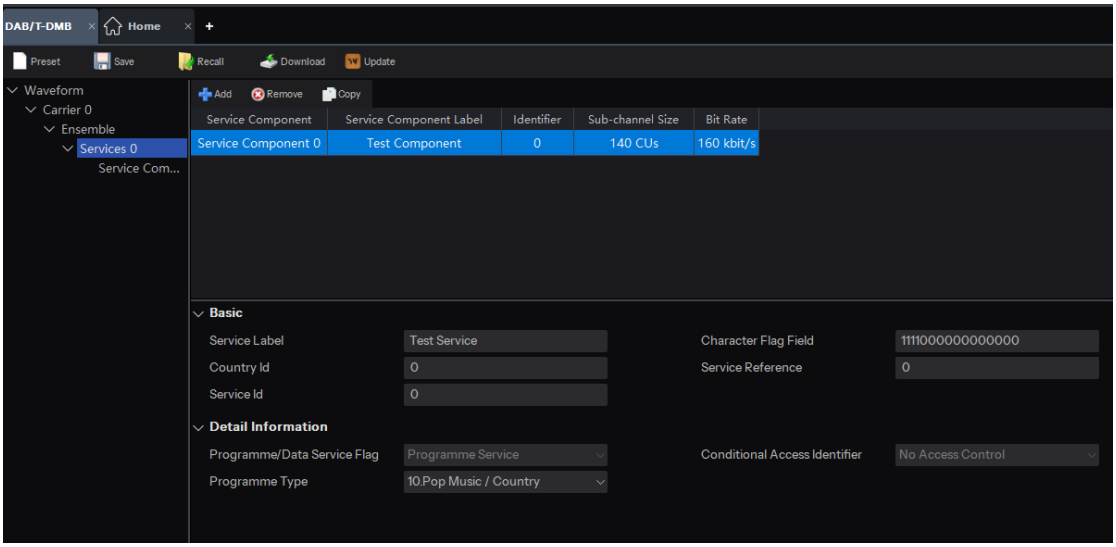


#### 4.21.4.1 Basic Configuration

**1. Service Label**

Set the service label, which consists of alphanumeric characters associated with a particular service and intended for display in a receiver, in textual format which should be less than16 characters (including blank).

Note: The length of ensemble label should not more than 16 characters.

Default: Test Service

**2. Character Flag Field**

Set the Character Flag Field. This 16-bit flag field shall indicate which of the characters of the character field are to be displayed in an abbreviated form of the label, as follows:

b(i) (i = 0, ... ,15);

0 : not to be displayed in abbreviated label;

1 : to be displayed in abbreviated label.

Note: Not more than 8 of the b(i) may be set to "1".

If the character field contains less than 16 characters, the unused bits in the character flag field (having no ncorresponding character) shall be set to zero.

Default: 1111000000000000

### 3. Country Id

Set the Country Id, which is a 4-bit field, defined in the standard of TS 101 756 , tables 3 to 7 “Digital Audio Broadcasting (DAB); Registered Table”.

As 4-bit field might not be enough to characterize all the countries, ECC (Extended Country Code), an 8-bit field is also used, written in hexadecimal. For example, Germany is E0, Greece is E1 etc.

Range: 0 to 15 (Practically zero is not used)

Default: 14

### 4. Service Reference

Set the service reference, indicating the number of the service. It cannot be conflicted with other service references.

Range: 0 to 4095(for program services) | 0 to 1048575 (for data services)

Default: 2

### 5. Extended Country Code

Set the Extended Country Code, which is a 8-bit field, defined in TS 101 756 [23], tables 3 to 7.

Range: 0 to 255

Default: 241

Note: This parameter is valid only when Programme/Data service flag is Data.

### 6. Service Id

Display the service Identifier.

Note: This parameter is updated with the change of Extended Country Code, Country Id or Service Reference.

#### 4.21.4.2 Detail Information

### 1. Programme/Data Service Flag

Get the Programme/Data Service Flag.

Choice: Programme Service | Data Service

Default: Programme Service

Note: This parameter is Read-Only and will be update by the first service component in the service.

If its TMID is 0, this parameter is set to Programme Service, otherwise set to Data Service.

### 2. Conditional Access Identifier

Get the Conditional Access Identifier, which is a 3-bit field, identifying the Access Control System (ACS) used for the service. If no ACS is used for the service, CAId shall be set to zero.

Choice: No_Access_Control | NR_MSK | Eurocrypt_EN

Default: No_Access_Control

Note: This parameter is read-only.

### 3. Programme Type


Set the Programme Type (PTY) of DAB.Program type (PTY) is an identification number to be transmitted with each program item and which is intended to specify the current Program type within 29 possibilities.

This code could be used for search tuning. The code will, moreover, enable suitable receivers and recorders to be pre-set to respond only to program items of the desired type. The last two numbers, i.e. 30 and 31, are not used.

Choice: 0.None | 1.News | 2.Current Affairs / Information | 3.Information / Sports | 4.Sport / Talk | 5.Education / Rock | 6.Drama / Classic Rock | 7.Culture / Adult Hits | 8.Science / Soft Rock | 9.Varied / Top 40 | 10.Pop Music / Country | 11.Rock Music / Oldies | 12.Easy Listening Music / Soft | 13.Light Classics / Nostalgia | 14.Serious Classics / Jazz | 15.Other music / Classical | 16.Weather / Rhythm and Blues | 17.Finance / Soft Rhythm and Blues | 18.Children's Programmes / Language | 19.Social Affairs / Religious Music | 20.Religion / Religious Talk | 21.Phone In / Personality | 22.Travel / Public | 23.Leisure / College | 24.Jazz Music / Unassigned | 25.Country Music / Unassigned | 26.National Music / Unassigned | 27.Oldies Music / Unassigned | 28.Folk Music / Unassigned | 29.Documentary / Weather.

Default:10.Pop Music / Country

## 4.21.5 Service Component

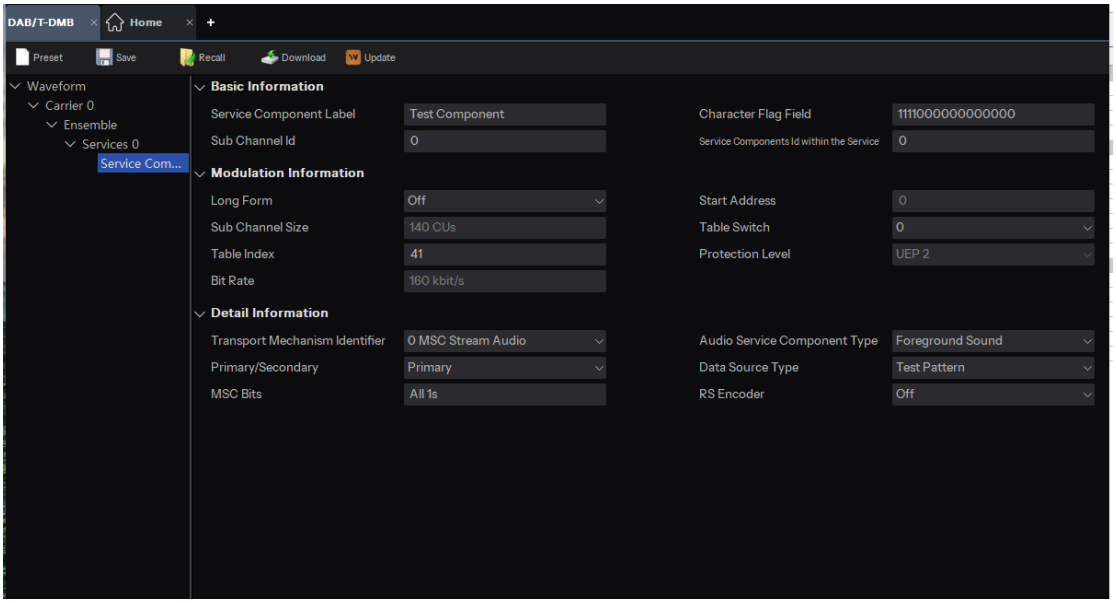


### 4.21.5.1 Basic Information

#### 1. Service Component Label

Set the component label. The Service component label feature is used to identify services in a textual format which should be less than 16 characters (including blank).

Default: Test Component.

#### 2. Character Flag Field

Set the Character Flag Field. This 16-bit flag field shall indicate which of the characters of the character field are to be displayed in an abbreviated form of the label, as follows:

b(i) (i = 0, ... ,15);

0 : not to be displayed in abbreviated label;

1 : to be displayed in abbreviated label.

Note: Not more than 8 of the b(i) may be set to "1".

If the character field contains less than 16 characters, the unused bits in the character flag field (having no corresponding character) shall be set to zero.

Default: 1111000000000000

#### 3. Sub Channel Id

Set the sub channel identifier which is 6-bit field, coded as an unsigned binary number, identifying

the sub-channel to which the paging information is directed.

Range: 0 to 63. Default: 0

#### 4. Service Components Identifier within the Service

Set the service component identifier within the service (SCIdS), which is a 4-bit field, identifying the service component within the service. A service component identifier valid globally is provided when combined with Sid (Service Identifier, a 16-bit field identifying the service). The combination of the SId and the SCIdS provides a service component identifier which is valid globally.

Range: 0 to 15. Default: 0.

### 4.21.5.2 Modulation Information

#### 1. Long Form

Set the long/short flag, which indicates whether the service component description takes the short form or the long form of the size and protection field is used.

Choice: True | False. Default: False.

#### 2. Start Address

10-bit field, coded as an unsigned binary number (in the range 0 to 863), addressing the first Capacity Unit (CU) of the sub-channel allocated to the service component.

This is a Read-only parameter, only be updated when sub-channel re-allocates.

Range: 0 to 863. Default: 0.

#### 3. Sub Channel Size

Get sub channel size, which is a 10-bit field, coded as an unsigned binary number (in the range 1 to 864), defining the number of Capacity Units occupied by the sub-channel.

Range: 1 to 864. Default: 140.

#### 4. Protection Level

Set the protection level use by the service component, which is a 2-bit field, indicating the protection level.

Choice: UEP 1 | UEP 2 | UEP 3 | UEP 4 | UEP 5 | EEP 1-A | EEP 2-A | EEP 3-A | EEP 4-A | EEP 1-B | EEP 2-B | EEP 3-B | EEP 4-B.

Note: UEP 1 | UEP 2 | UEP 3 | UEP 4 | UEP 5 are valid only when Long Form is false, while EEP 1-A |

EEP 2-A | EEP 3-A | EEP 4-A | EEP 1-B | EEP 2-B | EEP 3-B | EEP 4-B are valid when Long Form is true.

### 5. EEP n

Error protection procedure (EEP) ensures a constant protection of the bit stream.

Set this modulus to set the channel size. Besides, the number in the bracket following the Protection Level indicates the maximum channel size.

Note: This parameter is only valid when Long Form is true.

Range: 0 to 72(EEP 1-A) | 0 to 108(EEP 2-A) | 0 to 144(EEP 3-A) | 0 to 216(EEP 4-A) | 0 to 32(EEP 1-B) | 0 to 41(EEP 2-B) | 0 to 48(EEP 3-B) | 0 to 57(EEP 4-B)

Default: 1.

### 6. Convolutional Coding Rate

Get the convolutional coding rate used by the current service component.

Choice: 1/4 | 3/8 | 1/2 | 3/4 | 4/7 | 4/6 | 4/5 | 4/9.

Default: 1/4.

The code rate or information rate of a forward error correction (FEC) code, for example a convolutional code, states what portion of the total amount of information that is useful (non redundant). The code rate is typically a fractional number. If the code rate is k/n, for every k bits of useful information, the coder generates totally n bits of data, of which n-k are redundant.

Note: Convolutional Code Rate is Read only , and will be valid only when Long Form is true. It will be updated when Protection Level is changed.

### 7. Bit Rate

Get the bit rate transferred by the sub channel, which is the number of bits that are conveyed or processed per unit of time.

Note: When Long Form is false, bit rate could be among 32, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320,384 Kbps

When the protection level is EEP 1-A, EEP 2-A, EEP 3-A or EEP 4-A, the code rate is 8*EEP_N kbps/s; when EEP 1-B, EEP 2-B, EEP 3-B and EEP 4-B, the code rate is 32*EEP_N kbps/s.

Note: This parameter is Read-Only, and will be updated when sub-channel configuration changed.

### 8. Table Switch

Get the table switch, which is a 1-bit flag, indicating whether the table (for Sub-channel size for audio service components as a function of the audio bit rate and the protection level (short-form application)) is signaled or there is some other use of the table index field. 0 means the table is adopted, while 1 means reserved for future use of the table index field.

Choice: 1 | 0

Default: 0.

#### 9. Table Index

Set the Table Index, which is a 6-bit field, coded as an unsigned binary number, containing an index which shall identify one of the 64 options available for the sub-channel size and protection level.

Range: 0 to 63

Default: 41.

### 4.21.5.3 Detail Information

#### 1. Transport Mechanism Identifier

Set the transport mechanism identifier, which is a 2-bit field, indicating the transport mechanism used, as follows: b15 - b14

0 0 : MSC - Stream mode - audio;

0 1 : MSC - Stream mode - data;

Choice: 0 MSC Stream Audio | 1 MSC Stream Data

Default: 0 MSC Stream Audio

#### 2. Audio Service Component Type

Set the audio service component type, which is a 6-bit field, indicating the type of the audio service component.

Note: This parameter is valid only when Transport Mechanism Identifier is 0.

Choice: Foreground Sound | Background Sound | Multi-channel audio extension | DAB Plus

Default: Foreground Sound

#### 3. Primary/Secondary

Set the service component is primary or secondary in the service. This 1-bit flag shall indicate whether the service component is the primary one.

Data service is composed of a non-audio primary service component and optionally additional

secondary service components, among which primary service indicates the first and mandatory component of a service and can be used as a default selection in the receiver, while in case a service contains more than the primary service component, the additional service components are secondary service components. Besides, the Primary/Secondary could also be marked as P/S.

Choice: Primary | Secondary

Default: Primary

#### 4. Data Source Type

Use the drop-down menu to select which type to be used as the data source.

If " File " is selected, "File Name" is required.

Choice: Test Pattern | Demo | File

Default: Test Pattern

#### 5. Demo File

Set the RS encoder of the service component.

Note: This parameter is valid only when Data Source Type is Demo.

Last four choices are useful when Audio Service Component Type is DAB Plus while first four choices are useful when Audio Service Component Type is other value.

Choice: DAB mono 128 kbit/s | DAB mono 160 kbit/s | DAB stereo 128 kbit/s | DAB stereo 160 kbit/s | DAB+ mono 128 kbit/s | DAB+ mono 160 kbit/s | DAB+ stereo 128 kbit/s | DAB+ stereo 160 kbit/s

Default: DAB mono 160 kbit/s

#### 6. MSC Bits

Set the data source of the service component. In GUI, the value is set by a dialog.

Note: This parameter is valid only when Data Source Type is Test Pattern.

Choice: All 1s | All 0s | User Defined

Default: All 1s

#### 7. RS Encoder

Set the RS encoder of the service component.

Choice: Off | RS (120,110) | RS (204,188)

Default: Off

# 5 Troubleshooting

If there is an exception when SigIQPro downloads waveforms to SIGLENT signal source or when SIGLENT signal source plays the downloaded waveform, please first check whether there are the following problems.

1. **SigIQPro prompts the download failed**

   If SigIQPro prompts that the download failed, please check whether the connection between SigIQPro and SIGLENT signal source is normal.

2. **SigIQPro prompts the download is successful, but the SIGLENT signal source does not receive the waveform**

   - Check whether the software version is correct

     If you have installed an old software version, please update to the correct version.
   - Check if the correct options are installed

     If the correct option has not been installed and the trial times of the option has been 0, the waveform will not be downloaded to the signal generator. Please install the correct option.

   For more information, please refer to “Hardware Requirements”.

3. **The waveform download is successful, but there is an exception when playing the waveform**

   - Check the waveform sample rate

     If waveform sample rate * oversampling ratio exceeds the valid range of instrument sample clock, the downloaded waveform may not be played correctly.
   - Check the waveform points

     If the number of waveform points exceeds the valid range of the number of instrument sampling points, the downloaded waveform may not be played correctly.

     In the above two situations, SigIQPro and SIGLENT signal sources will have prompt messages, please check carefully.

   If the problem still remains, please contact **SIGLENT** and provide the details. Thank you!

# 6 Service and Support

## 6.1 Service Summary

**SIGLENT** warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of three years (accessories for a period of one year) from the date of shipment from an authorized Siglent distributor. If the product proves defective within the respective period, **SIGLENT** will provide repair or replacement as described in the complete warranty statement.

To arrange for service or obtain a copy of the complete warranty statement, please contact your nearest Siglent sales and service office. Except as provided in this summary or the applicable warranty statement, **SIGLENT** makes no warranty of any kind, express or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose. In no event shall **SIGLENT** be liable for indirect, special or consequential damages.

## 6.2 Contact Us

**China:**

**SIGLENT Technologies Co., Ltd**

Add: No.26, Lane 2, 1st Liuxian Road, Bao'an District, 518101 Shenzhen, PEOPLE'S REPUBLIC OF CHINA

Tel: + 86 755 3688 7876

Fax: + 86 755 3359 1582

Email: sales@siglent.com

Website: int.siglent.com

**North America:**

**SIGLENT Technologies NA, Inc**

Add: 6557 Cochran Rd Solon, Ohio 44139

Tel: 440-398-5800

Toll Free:877-515-5551

Fax: 440-399-1211

Email: support@siglentna.com

Website: www.siglentna.com

**Europe:**

**SIGLENT Technologies Germany GmbH**

Add: Staetzlinger Str. 70

86165 Augsburg, Germany

Tel: +49(0)-821-666 0 111 0

Fax: +49(0)-821-666 0 111 22

Email: info-eu@siglent.com

Website: www.siglenteu.com

**Malaysia:**

**SIGLENT Technologies (M) Sdn.Bhd**

Add: NO.6 Lorong Jelawat 4 Kawasan Perusahaan Seberang Jaya 13700, Perai Pulau Pinang

Tel: 006-04-3998964

Email: sales@siglent.com

Website: int.siglent.com

## About SIGLENT

SIGLENT is an international high-tech company, concentrating on R&D, sales, production and services of electronic test & measurement instruments.

SIGLENT first began developing digital oscilloscopes independently in 2002. After more than a decade of continuous development, SIGLENT has extended its product line to include digital oscilloscopes, isolated handheld oscilloscopes, spectrum analyzers, function/arbitrary waveform generators, RF/MW signal generators, vector network analyzers, digital multimeters, DC power supplies, electronic loads and other general purpose test instrumentation. Since its first oscilloscope was launched in 2005, SIGLENT has become the fastest growing manufacturer of digital oscilloscopes. We firmly believe that today SIGLENT is the best value in electronic test & measurement.


**Headquarters:**

SIGLENT Technologies Co., Ltd
Add: No.26, Lane 2, 1st Liuxian Road,
Bao'an District, 518101 Shenzhen,
PEOPLE'S REPUBLIC OF CHINA
Tel: + 86 755 3688 7876
Fax: + 86 755 3359 1582
Email: sales@siglent.com
Website: int.siglent.com

**North America:**

SIGLENT Technologies NA, Inc
Add: 6557 Cochran Rd Solon, Ohio 44139
Tel: 440-398-5800
Toll Free:877-515-5551
Fax: 440-399-1211
Email: support@siglentna.com
Website: www.siglentna.com

**Europe:**

SIGLENT Technologies Germany GmbH
Add: Staetzlinger Str. 70
86165 Augsburg, Germany
Tel: +49(0)-821-666 0 111 0
Fax: +49(0)-821-666 0 111 22
Email: info-eu@siglent.com
Website: www.siglenteu.com

**Malaysia:**

SIGLENT Technologies (M) Sdn.Bhd
Add: NO.6 Lorong Jelawat 4
Kawasan Perusahaan Seberang Jaya
13700, Perai Pulau Pinang
Tel: 006-04-3998964
Email: sales@siglent.com
Website: int.siglent.com


**Follow us on**
**Facebook: SiglentTech**